

Expanded Order View


About this Guide

This guide consists of 3 sections:

- **Overview** A detailed description of the Expanded Order View (Popup Window) in a TrueOrder™ Kitchen Display System.
- How to with the KB1700 KB1700 bump bar operation.
- How to with the KB9000 KB9000 bump bar operation.
- How to with a touchscreen Touchscreen operation.

Overview

An order can be selected to be viewed in its own pop-up window. This is convenient if orders span multiple windows or if an order in the last tile extends off screen and you would like to see the entire order in its own window.

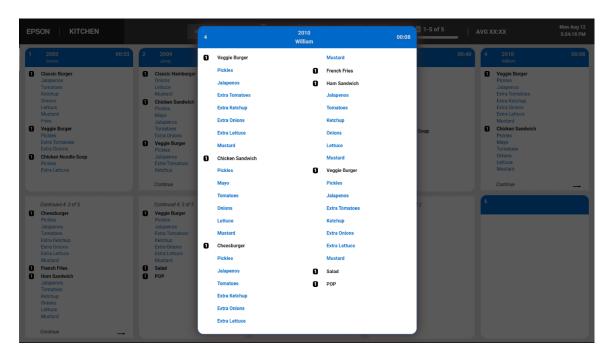

EPSON is a registered trademark and EPSON is a registered logomark of Seiko Epson Corporation. All other product and brand names are trademarks and/or registered trademarks of their respective companies. Epson disclaims any and all rights in these marks. Copyright 2025 Seiko Epson Corporation.

Using the KB1700 Bumpbar

 
Selecting an Order:

Press followed by the tile number for the order:

Selecting Tiles 1-9:

Press the tile number to to select the tile associated with the desired order.

Selecting Tiles 10-99:



Exiting Expanded Order View:

Press any key to exit and return to the main display.

Using the KB9000 Bumpbar

Selecting an Order:

Press followed by the tile number for the order:

Selecting Tiles 1-9:

Press the tile number to select the tile associated with the desired order.

Selecting Tiles 10-99:


Press 10, followed by key 1 to 9 to indicate the tens digit, followed by key 1 to 10 to indicate the ones digit, where the 10 key means the units value is "0" (zero).

Exiting Expanded Order View:

Press any key to exit and return to the main display.

Using a Touchscreen

Press and hold the tile header for 1 second to bring up the expanded order view.

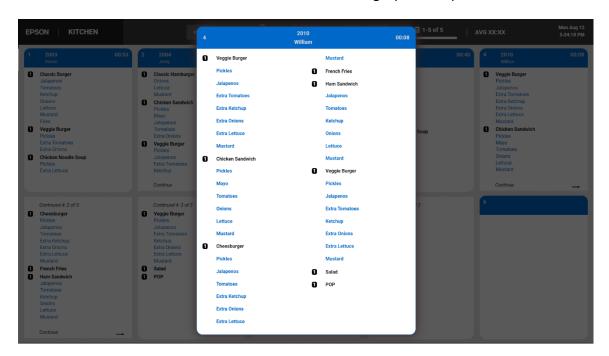

Exiting Expanded Order View:

Press the screen anywhere to exit and return to the main display.

