

Date and Time

About this Guide

This guide consists of 3 sections:

- Overview Description of what this is in a TrueOrder™ Kitchen Display System (KDS).
- How to Configure A procedure that can be followed to configure the TrueOrder KDS system date and time.
- Appendix Options for time configuration.

Overview

The date and time are displayed at the top right of each KDS display and can be configured to show in the local time zone.

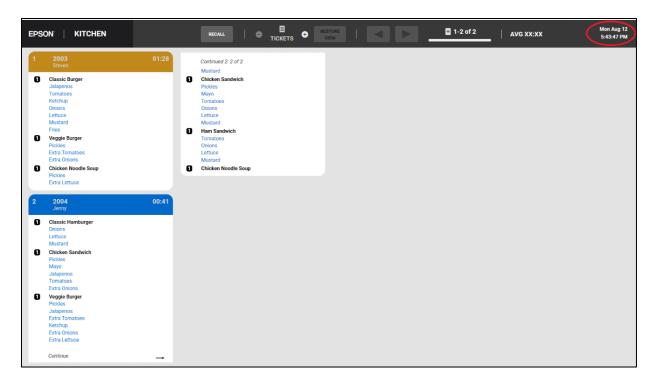


Figure 1: KDS Showing Time

How to Configure

This procedure sets the current KDS date and time to that of the PC that is running the configurator. This assumes that you already have a TrueOrder KDS system working.

- 1. Select Application Settings.
- 2. Click Site Wide.
- 3. Click Set Current KDS Time.

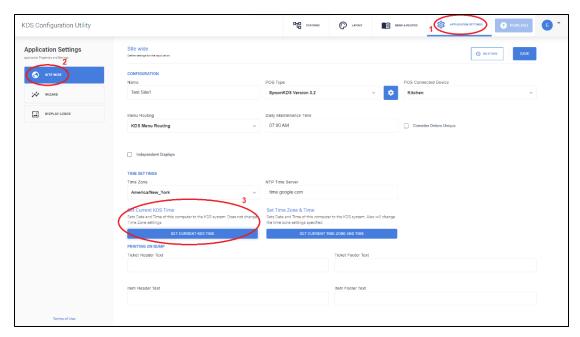


Figure 2: Configuring Time Settings

4. Time settings are transmitted to the POS Connected device first and then propagated to all devices in the system if there are additional devices. This can take a few minutes to update.

 


Appendix

Time Settings

Time Zone: The system supports time zone settings. Choose your time zone from the drop-down menu. This will update the master device (If selected) to the new time zone settings and the current local time.

NTP Time Server: Specifies NTP Time Server.



Time Setting Actions

Set Current KDS Time: Sets the date and time for this computer to the KDS system. Does not change the time zone settings.

Set Time Zone & Time: Sets the date and time for this computer to the KDS system. It will also change the specified time zone settings.



