

Date and Time

About this Guide

This guide consists of 3 sections:

- **Overview** – Description of what this is in a TrueOrder™ Kitchen Display System (KDS).
- **How to Configure** – A procedure that can be followed to configure the TrueOrder KDS system date and time.
- **Appendix** – Options for time configuration.

Overview

The date and time are displayed at the top right of each KDS display and can be configured to show in the local time zone.

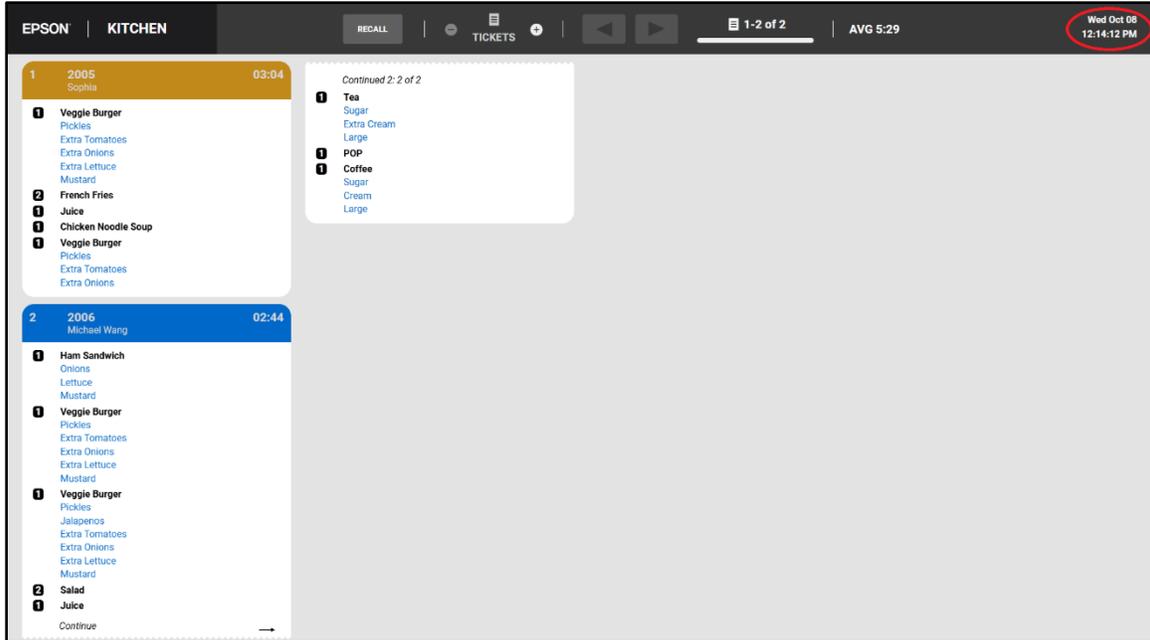


Figure 1: KDS Showing Time

How to Set Time Manually

This procedure sets the current KDS date and time to that of the PC that is running the configurator. This assumes that you already have a TrueOrder KDS system working.

1. Select the **Application Settings** tab.
2. Click **Site Wide** in the left-hand menu.
3. Select **Manual** mode for **Time Settings**.
4. Click **Set Current Time Zone and Time**.

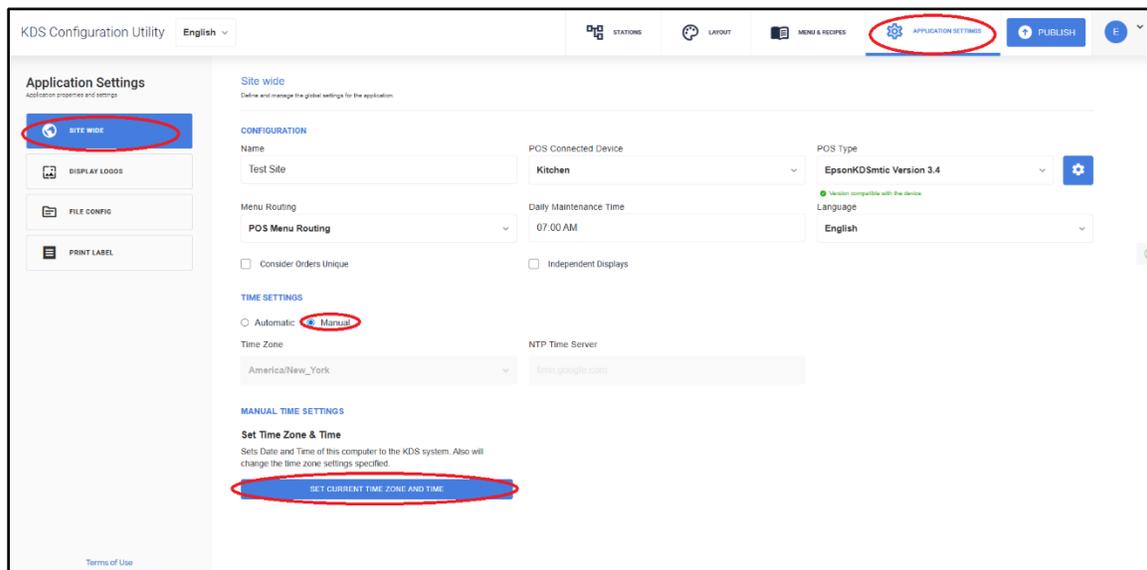



Figure 2: Configuring Time Settings

5. Time settings are transmitted to the POS Connected device first and then propagated to all devices in the system if there are additional devices. This can take a few minutes to update.

How to Set Automatic Time Server

Time Zone: The system supports time zone settings. Choose your time zone from the drop-down menu. This will update the master/POS Connected device to the new time zone settings and the current local time; all other displays will follow the time on this device within a few minutes of Publishing the configuration. **This requires that the KDS has network access to the configured time server.**

NTP Time Server: Specifies NTP Time Server.

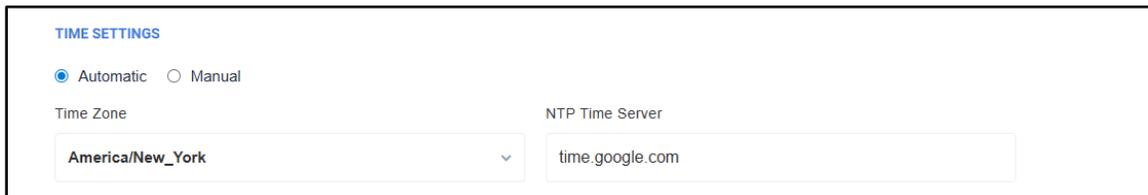

TIME SETTINGS

Automatic Manual

Time Zone: America/New_York

NTP Time Server: time.google.com