

## UPDATE



4/23/99

This package provides a new ink jet printer product section to be added to the *EPSON Product Information Guide*. The table of contents of this section is listed below.

## EPSON Stylus® COLOR 740i

### TABLE OF CONTENTS

Accessories .....	EPSON Stylus COLOR 740i - 1
Printer Specifications .....	EPSON Stylus COLOR 740i - 1
DOS Support .....	EPSON Stylus COLOR 740i - 5
Interfaces .....	EPSON Stylus COLOR 740i - 6
Control Panel .....	EPSON Stylus COLOR 740i - 6
Installing an Ink Cartridge for the First Time .....	EPSON Stylus COLOR 740i - 7
Loading Paper .....	EPSON Stylus COLOR 740i - 8
Testing the Printer.....	EPSON Stylus COLOR 740i - 8
Using Special Media .....	EPSON Stylus COLOR 740i - 9
Replacing an Ink Cartridge.....	EPSON Stylus COLOR 740i - 11
Cleaning the Print Head.....	EPSON Stylus COLOR 740i - 12
Aligning the Print Head .....	EPSON Stylus COLOR 740i - 14
Cleaning the Printer .....	EPSON Stylus COLOR 740i - 14
Transporting the Printer.....	EPSON Stylus COLOR 740i - 14
Related Documentation.....	EPSON Stylus COLOR 740i - 14

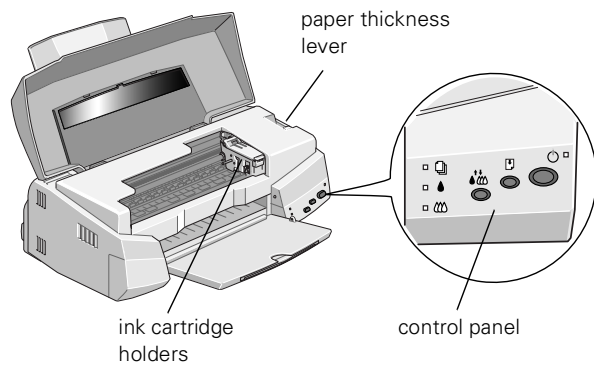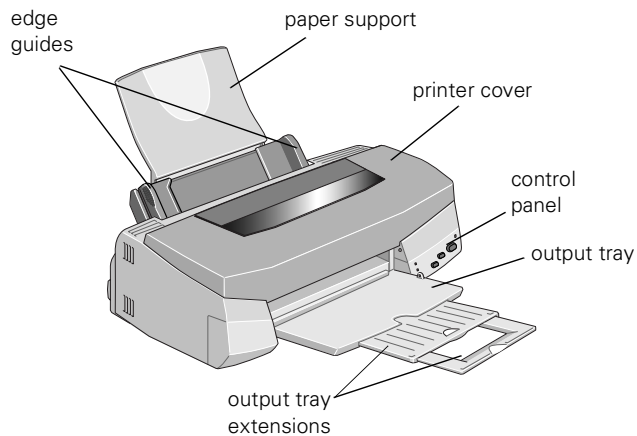

## Media

Media name	Size	Part number
EPSON 360 dpi Ink Jet Paper	Letter A4	S041060 S041059
EPSON High Quality Ink Jet Paper	Letter A4	S041111 S041117
EPSON Photo Quality Ink Jet Paper	Letter A4 Legal	S041062 S041061 S041067
EPSON Photo Quality Glossy Paper	Letter A4	S041124 S041126
EPSON Photo Quality Glossy Film	Letter A4 A6	S041072 S041071 S041107
EPSON Photo Paper	Letter A4 4 × 6 Panoramic (8.3 × 23.4 inches)	S041141 S041140 S041134 S041145
EPSON Ink Jet Transparencies	Letter A4	S041064 S041063
EPSON Photo Quality Ink Jet Cards	A6 8 × 10	S041054 S041122
EPSON Photo Stickers Kit (CD-ROM and paper)	A6; 16 frames	S041144-KIT
EPSON Photo Stickers (refill)	A6; 16 frames	S041144
EPSON Iron-On Cool Peel Transfer Paper	Letter	S041153/ S041155
EPSON Photo Quality Self Adhesive Sheets	A4	S041106

## Accessories

### Ink Cartridges

Cartridge	Part number
Black	S020189
Color	S020191

### User Replaceable Parts

Part name	Part number
Blueberry cover	C814131
Grape cover	C814161
Lime cover	C814171
Strawberry cover	C814151
Tangerine cover	C814141

## Printer Specifications

### Printing

Printing method	On-demand ink jet
Nozzle configuration	144 black nozzles 144 color nozzles (48 cyan, 48 magenta, 48 yellow)
Resolution	Maximum 1440 × 720 dpi
Input buffer	64KB
Print direction	Bidirectional with logic seeking
Control code	ESC/P 2™ and raster graphics code and EPSON Remote
Character tables	1 italic and 10 graphics character tables
Character sets	14 international character sets and 1 legal character set

- Bitmap fonts**
- EPSON Roman (proportional)
  - EPSON Sans Serif (proportional)
  - EPSON Courier
  - EPSON Prestige
  - EPSON Script
- All bitmap fonts are available in 10, 12, and 15 cpi. You can select other font/pitch combinations using ESC/P 2 commands.
- Scalable fonts**
- EPSON Roman
  - EPSON Sans Serif
  - EPSON Roman T
  - EPSON Sans Serif H
- All scalable fonts are available in sizes from 8 to 32 points, in 2 point increments, and four styles: normal, bold, italic, and bold italic.
- The printer always uses the fonts you select with your software application. You need to use the printer's internal fonts only if your application doesn't allow you to select fonts.

## Ink Cartridges

Specification	Black ink cartridge (S020189)	Color ink cartridge (S020191)
Color(s)	Black	Cyan, magenta, and yellow
Print capacity*	900 pages text (ISO/IEC 10561 letter pattern) 300 pages graphic (5% coverage)	300 pages (15% coverage)
Cartridge life	2 years from production date and up to within 6 months after opening package at 77 °C (25 °F)	
Storage temperature	-4 to 104 °F (-20 to 40 °C) 1 month at 104 °F (40 °C)	
Transit temperature	-22 to 140 °C (-30 to 60 °F) 1 month at 104 °F (40 °C) 120 hours at 140 °F (60 °C)	
Freezing temperature**	3.2 °F (-16 °C)	-0.4 °F (-18 °C)
Dimensions	1.09 (W) × 2.1 (D) × 1.5 (H) inches 27.8 (W) × 52.7 (D) × 38.5 (H) mm	1.7 (W) × 2.1 (D) × 1.5 (H) inches 42.9 (W) × 52.7 (D) × 38.5 (H) mm

\* The print capacity may vary depending on how often you clean the print head.

\*\* The ink thaws and is usable after approximately 3 hours at 77 °F (25 °C).



### Caution:

To ensure good results, use genuine EPSON cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON's warranty.

Do not use an ink cartridge after the expiration date on the package.

## Paper

Paper type	Size	Paper types	Thickness	Weight
Single sheets	Letter (8.5 × 11 inches) Legal (8.5 × 14 inches) Half letter (statement, 5.5 × 8.5 inches) Executive (7.5 × 10 inches) A4 (210 × 297 mm) A5 (148 × 210 mm) B5 (182 × 257 mm)	Plain paper and special ink jet papers distributed by EPSON	0.003 to 0.004 inch (0.08 to 0.11 mm) for plain bond paper	17 to 24 lb (64 to 90 g/m <sup>2</sup> )
Transparencies, Glossy film, Glossy paper	Letter (8.5 × 11 inches) A4 (210 × 297 mm) A6 (105 × 148 mm), glossy film only	Transparencies, glossy paper, and glossy film distributed by EPSON	—	—
Self-adhesive sheets	A4 (210 × 297 mm)	Self adhesive sheets distributed by EPSON	—	—
Envelopes	No. 10, 9.5 × 4.1 inches (240 × 104 mm) DL, 8.7 × 4.3 inches (220 × 110 mm) C6, 4.4 × 6.4 inches (114 × 162 mm) Ink jet note card, 5.2 × 8.7 inches (132 × 220 mm)	Plain bond paper or air mail paper	0.006 to 0.02 inch (0.16 to 0.52 mm)	12 to 20 lb (45 to 75 g/m <sup>2</sup> )
Ink jet cards	A6 (105 × 148 mm) 8 × 10 inches	Ink jet cards distributed by EPSON	—	—
Photo paper	Letter (8.5 × 11 inches) A4 (210 × 297 mm) 4 × 6 inches (102 × 152 mm) Panoramic (210 × 594 mm)	Photo paper distributed by EPSON	—	—
Photo stickers	A6 (105 × 148 mm) with 16 frames	Photo stickers distributed by EPSON	—	—
Iron-On Cool Peel transfer paper	Letter (8.5 × 11 inches)	Transfer paper distributed by EPSON	—	—

### Note:

Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, EPSON cannot attest to the quality of any non-EPSON brand or type of paper. Always test samples of paper stock before purchasing large quantities or printing large jobs.

Poor quality paper may reduce print quality and cause paper jams and other problems. If you encounter problems, switch to a higher grade of paper.


### Print only under these conditions:

Temperature: 59 to 77 °F (15 to 25 °C)  
Humidity: 40 to 60% RH


### Store glossy film and self adhesive sheets under these conditions:

Temperature: 59 to 86 °F (15 to 30 °C)  
Humidity: 20 to 60% RH

Printable Area

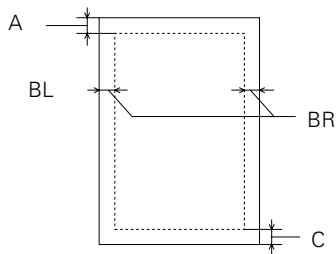

Single sheets and cards

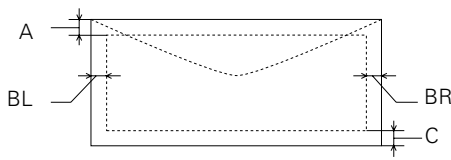

Envelopes

- A The minimum top margin is 0.12 inch (3.0 mm). When printing multiple sheets of EPSON Photo Quality Glossy Film, the minimum top margin is 1.2 inches (30 mm).
- BL The minimum left margin is 0.12 inch (3.0 mm).
- BR The minimum right margin is:
  - 0.35 inch (9.0 mm) for Letter and Legal
  - 1.10 inches (28 mm) for #10 envelopes
  - 0.28 inch (7.0 mm) for DL envelopes
  - 0.12 inch (3.0 mm) for all other paper sizes.
- C The minimum bottom margin is 0.55 inch (14.0 mm) using the Standard printable area setting. This can be decreased to 0.12 inch (3.0 mm) using the Maximum printable area setting. However, the print quality in the expanded printable area may be reduced.

Note:  
Always load paper into the sheet feeder short edge first except envelopes. Load envelopes long edge first.

Mechanical

Paper feed method	Friction with auto sheet feeder, rear entry
Sheet feeder capacity	Maximum 100 sheets of 17 lb (64 g/m <sup>2</sup> ) paper
Dimensions	
Storage	Width: 16.9 inches (429 mm) Depth: 10.3 inches (261 mm) Height: 6.6 inches (167 mm)
Printing	Width: 16.9 inches (429 mm) Depth: 24.1 inches (613 mm) Height: 12.2 inches (309 mm)
Weight	11.5 lb (5.2 kg) without the ink cartridges

Environmental

Temperature	Operation: 50 to 95 °F (10 to 35 °C) Storage*: -4 to 104 °F (-20 to 40 °C) 1 month at 104 °F (40 °C) Transit*: -4 to 140 °F (-20 to 60 °C) 120 hours at 140 °F (60 °C)
Humidity	Operation: 20 to 80% RH Storage*: 5 to 85% RH (without condensation)  * Stored in shipping container

Safety Approvals

Safety standards	UL 1950, CSA 22.2 No. 950
EMC	FCC part 15 subpart B class B

Electrical

Specification	120V model	240V model*
Input voltage range	99V to 132V	198V to 264V
Rated frequency range	50 to 60 Hz	
Input frequency range	49.5 to 60.5 Hz	
Rated current	0.4A	0.2A
Power consumption	Approx. 18 W (ISO 10561 Letter Pattern) Approx. 5 W in standby mode	

\* Also designed for IT power systems with Phase to Phase voltage 220-240V

## DOS Support

If driver support for the EPSON Stylus COLOR 740i is not available from your software manufacturer, you can use one of the other EPSON ESC/P 2 printer drivers (parallel port only). These drivers don't provide all the EPSON Stylus COLOR 740i features, such as 720 or 1440 dpi printing. Choose the first printer available from the following two lists:

Black printing only

- ☐ LQ-870/1170
- ☐ LQ-570(+)/1070(+)
- ☐ SQ-870/1070
- ☐ LQ-850
- ☐ LQ-500

Color and black printing


 
 
- ☐ EPSON Stylus PRO
- ☐ EPSON Stylus COLOR 500
- ☐ EPSON Stylus COLOR II
- ☐ LQ-860
- ☐ LQ-2550

## Control Panel Settings

You can change the following default settings from the printer's control panel:

Setting	Options
Font	Courier, Roman, Sans Serif, Prestige, Script, Roman T, Sans Serif H, Draft
Character table	Italic U.S.A., Italic France, Italic Germany, Italic U.K., Italic Denmark 1, Italic Sweden, Italic Italy, Italic Spain 1, PC 437 (U.S./Standard Europe), PC850 (Multilingual), PC860 (Portuguese), PC861 (Icelandic), PC863 (Canadian-French), PC865 (Nordic), Abicomp, BRASCII, Roman 8, ISO Latin 1

Follow these steps to change the settings listed above:

1. Make sure the printer is turned off and has paper loaded (at least 8.27 inches [210 mm] wide).
2. Hold down the  cleaning button and press the  power button. The printer prints instructions for changing settings and choosing a language for the instructions.
3. Press the  load/eject button to print a list of current settings (indicated with arrows) and additional instructions.
4. After you make the changes you want, turn the printer off to save the settings. The settings remain in effect until you change them again.

## Character Tables

All character tables except Italic are the same as the PC437 table for hex codes 00 through 7F. Additional characters are available for hex codes 80 through FF. You can select the following character tables through the control panel or software commands:

- ☐ PC437 (U.S./Standard Europe)
- ☐ PC850 (Multilingual)
- ☐ PC860 (Portuguese)
- ☐ PC861 (Icelandic)
- ☐ PC863 (Canadian-French)
- ☐ PC865 (Nordic)
- ☐ Abicomp
- ☐ BRASCII
- ☐ Roman 8
- ☐ ISO Latin 1
- ☐ Italic (no characters available for hex code 15)

International character sets

You can select a number of international character sets with the control panel or the ESC R command. Other sets can only be selected with the ESC R command. You can select additional characters with the ESC ( ^ command.

Interfaces

USB interface

Specification	Description
Standard	Based on Universal Serial Bus Specifications Revision 1.0, Universal Serial Bus Device Class Definition for Printing Devices Version 1.0
Bit rate	12 Mbps (full speed device)
Data encoding	NRZI
Adaptable connector	USB Series B
Recommended cable length	6.5 feet (2 meters) maximum

Serial interface

Specification	Description
Standard	Based on RS-423
Synchronization	Synchronous
Bit rate	Approximately 1.8M bps
Handshaking	X-ON/X-OFF and DTR protocol
Word format	Data bit: 8 bits Parity bit: None Start bit: 1 bit Stop bit: 1 bit
Connector	8-pin mini-DIN
Recommended cable	Apple® System Peripheral-8 cable (preferably Belkin brand)

Parallel interface


Forward channel

Specification	Description
Data format	8-bit parallel, IEEE-1284 compatibility mode
Synchronization	STROBE pulse
Handshake timing	BUSY and ACKNLG signals
Signal level	TTL compatible
Connector	57-30360 Amphenol connector or equivalent





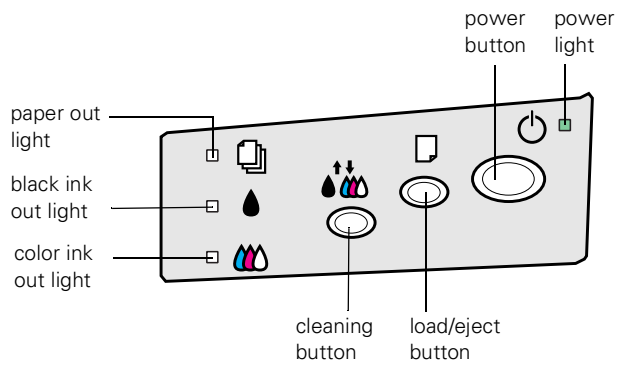


 
 
 
 
 
 
 
 
Reverse channel

Specification	Description
Transmission mode	IEEE-1284 Nibble mode
Adaptable connector	57-30360 Amphenol connector or equivalent
Synchronization	Refer to the IEEE-1284 specification
Handshaking	Refer to the IEEE-1284 specification
Signal level	IEEE-1284 Level 1 device
Data transmission timing	Refer to the IEEE-1284 specification

Control Panel



Follow these guidelines when the control panel lights come on or flash:

-  When the  paper out light *flashes*, paper is jammed in the printer. Turn off the printer, remove all the paper (including any pieces torn off inside), then reload the stack. Turn on the printer and press the  load/eject button.  
When the  paper out light *comes on*, your paper ran out or is incorrectly loaded. Load paper in the feeder and then press the  load/eject button.
-  or  When an ink out light *flashes*, your ink supply is low. Make sure you have a replacement cartridge.  
When an ink out light *comes on*, you need to replace the ink cartridge. See “Replacing an Ink Cartridge” on page 11 for instructions.
-     When the  power and  paper out lights *flash* and the  black and  color ink out lights *come on*, jammed paper may be blocking movement of the print head. Turn off the printer, wait a few seconds, and turn it back on.  
When all the lights *flash*, your printer may have an internal error. Make sure you removed all the packing material as described on the unpacking sheet in your printer box. Then turn off the printer, wait a few seconds, and turn it on again.

## Installing an Ink Cartridge for the First Time


Follow these steps to install ink cartridges for the first time:

1. Plug the printer's power cord into a grounded outlet.



**Caution:**  
Don't use an outlet that can be turned off by a wall switch or timer, or one on the same circuit as a large appliance. This may disrupt the power, which can erase the printer's memory or damage its power supply.

2. Remove the ink cartridges from their packages. Then remove **only** the yellow part of the tape seal on top as shown.

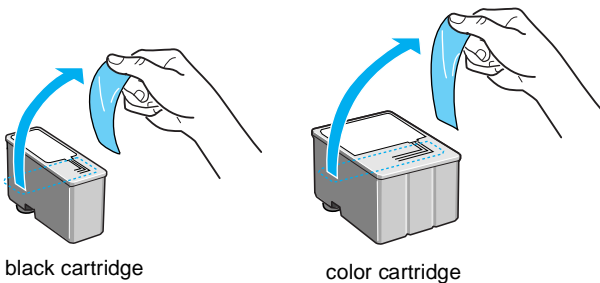


black cartridge

 
 
 
 
color cartridge



**Caution:**  
Use the ink cartridges packed with your printer the first time you install them or your printer won't charge ink properly. You must remove the yellow tape from the cartridge or you will permanently damage it. Don't pull off the blue portion or try to remove the clear seal from the bottom of the cartridge; ink will leak out.

3. Lower the printer's output tray and open the cover.

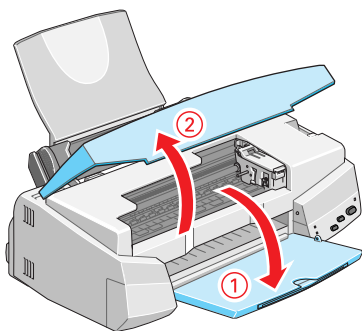


4. Press the  power button to turn on the printer. The  power light flashes and the  black and  color ink out lights come on. The ink cartridge holders move into loading position.





**Caution:**  
Always use the power button to turn the printer on or off. Never use an external switch, such as a power strip switch.

 
5. Lift up the two ink cartridge clamps.

 
 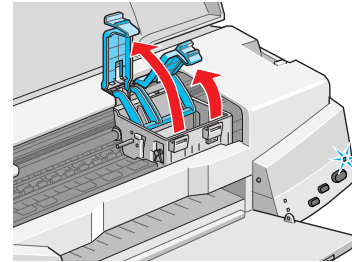


6. Place the cartridges into their holders with the labels facing up and toward the back of the printer. Then press down the clamps until they lock into place.

 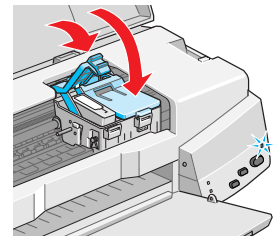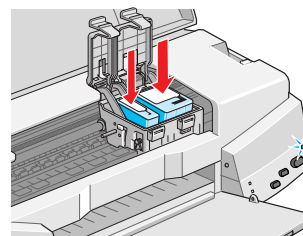


**WARNING:**  
If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them immediately with water.

7. Press the  cleaning button to begin charging the ink delivery system and close the printer cover.

**Charging takes about a minute. The  power light flashes and the printer makes various sounds until it's finished. Don't turn off the printer or interrupt the charging process or it will start over, using more ink than necessary. Charging is finished when the  power light stops flashing and stays on.**




**Caution:**  
Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made any noise for more than 5 minutes.



## Loading Paper


1. Open the output tray and its extensions. Slide the left edge guide right until it is a little wider than your paper.

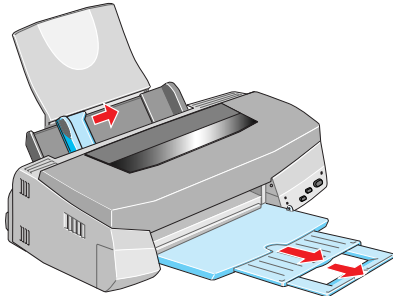

2. Load a stack of plain paper with the printable side up and place it against the right edge guide. Then slide the left edge guide up against the paper's left edge. Don't load paper higher than the arrow on the guide.

Load paper only up to this arrow

Slide paper against the right edge guide

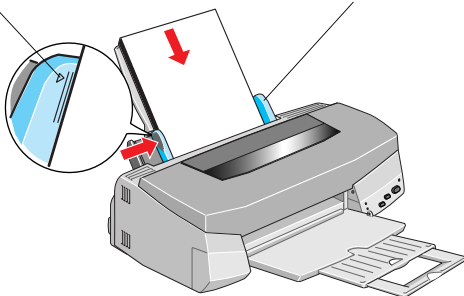

## Testing the Printer

You can run a printer operation check to determine whether the problem comes from the printer or some other source.



 
 
- ☐ If the results are satisfactory, the problem lies in your software settings, the interface cable, or your computer.
- ☐ If the check page does not print correctly, you have a problem with your printer. See the *Printer Basics* book for possible solutions.

1. Make sure both the printer and computer are turned off.
2. Disconnect the interface cable from the printer.
3. Make sure paper is loaded in the printer.



Caution:

Load paper that's at least 8.27 inches (210 mm) wide. This prevents ink from spraying inside the printer and smudging your printouts.

4. Hold down the  load/eject button and press the  power button. Hold down the  load/eject button until the  power light starts to flash, then release it.

The printer prints its ROM version number and a nozzle check pattern (shown in "Examining the Nozzle Check Pattern" on page 13).

5. To end the check, turn off the printer. Then reconnect the interface cable and turn on your printer and computer.

## Confirming the Printer ID Number

If you're using Windows® 95, 98, or NT® 4.0, you can use the Printer and Option Information utility to confirm the Printer ID. Color quality may improve after you confirm the ID number.

If you're using Status Monitor 2, this information is updated automatically. However, if a message appears prompting you to enter settings or if you change the printer's configuration, you'll need to update the Printer ID manually.

1. Make sure letter-size paper is loaded in your printer.
2. Access the main printer settings dialog box.
3. Click the **Utility** tab. Then click the **Printer and Option Information** icon.
4. Click the **Settings Sheet** button. The printer prints the Printer ID on a sheet of paper.
5. Make sure the Printer ID shown in the Printer and Option Information dialog box matches the ID on the Settings Sheet. If they don't match, change the ID numbers in the dialog box to match those on the Settings Sheet.
6. Click **OK** to exit and save your settings.

## Using Special Media

### Selecting Special Media

When you print on special media, you need to choose the correct **Media Type** and **Paper Size** settings in your printer software. The table below lists the available EPSON media and the corresponding **Media Type** setting for each one.

Media name	Media Type setting
EPSON 360 dpi Ink Jet Paper	360 dpi Ink Jet Paper
EPSON Iron-On Cool Peel Transfer Paper	
EPSON High Quality Ink Jet Paper	Photo Quality Ink Jet Paper
EPSON Photo Quality Ink Jet Paper	
EPSON Photo Quality Ink Jet Cards	
EPSON Photo Quality Self Adhesive Sheets	
EPSON Photo Quality Glossy Paper	Photo Paper
EPSON Photo Paper	
EPSON Photo Quality Glossy Film	Photo Quality Glossy Film
EPSON Photo Stickers	
EPSON Ink Jet Transparencies	Ink Jet Transparencies



**Caution:**  
Don't use the cleaning sheets that may be included with your special media; they may jam inside the printer.

### Media Loading and Handling Guidelines

The following tips help you get the best results on any type of paper:

- ☐ Always handle sheets by the edges, and don't touch the printable surface.
- ☐ When you load paper, make sure the printable side is facing up.
- ☐ You can load paper up to the arrow mark on the left edge guide.
- ☐ Return unused sheets and envelopes to their original package as soon as possible. See "Paper" on page 3 for more storage information.
- ☐ If your paper package included protective sheets, cover the printed side of your paper with these sheets before stacking your paper.
- ☐ Use ink jet papers within one year of purchase. Use glossy media and transparencies within six months.
- ☐ Follow any specific instructions for your paper in the following sections.

### Letterhead, Preprinted Forms, and Legal-size Paper

Load the top edge first. When you load long paper, pull up the paper support extension and both output tray extensions.


### EPSON Photo Quality Glossy Paper, Film, and Transparencies

Before you load glossy film or transparencies, put a support sheet (packed with the media) or a plain paper sheet beneath the stack. (Don't use a support sheet with Photo Quality Glossy Paper.)

You can load up to 20 sheets of glossy paper or glossy film, or up to 30 transparencies.

On Photo Quality Glossy Film, you may get better results by loading one sheet at a time. With multiple sheets loaded, the minimum top margin you can use is 1.2 inches (30 mm). If you want to use a smaller top margin, load and print one sheet at a time.

If your media has a cut corner, position it in the printer as shown here.

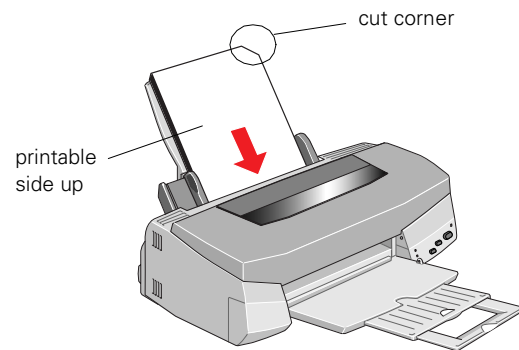

Remove each sheet from the output tray immediately after it's printed. Make sure each sheet is dry before stacking.

**Note:**

It is best not to use the **Maximum** printable area setting in the printer software when printing on paper with a cut corner. Part of your document may print in the cut out area.

### EPSON Photo Stickers


Use these sheets of stickers to print small, decorated photos for use on cards, invitations, or other items. You'll need to use an application that can create photo stickers, such as StickerPix.<sup>TM</sup>

Load one sheet of Photo Stickers at a time. Make sure to place support sheets A and B that came with the stickers beneath the sheet.

When you're ready to print, select Photo Quality Glossy Film as the Media Type setting and A6 Index card 105 × 148 mm as the Paper Size in your printer software.

## Envelopes

You can load up to 10 envelopes flap edge first, with the printable side up, as shown below:

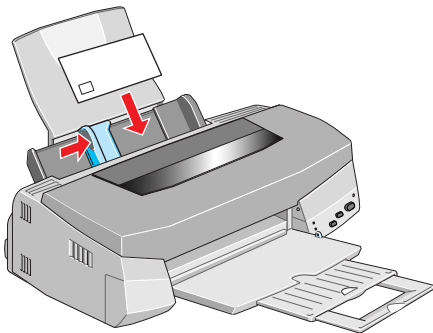


### Note:

If the stack of envelopes is more than 0.4-inch (10 mm) thick, press the envelope edges to flatten them before stacking or load one envelope at a time.

Select **Plain paper** as the Media Type and choose the correct envelope size as the Paper Size setting in the printer software.

If ink smears when you print on envelopes or other thick media, set the paper thickness lever to the **+** position as shown below. (Return the lever to the **0** position before printing on other media.)

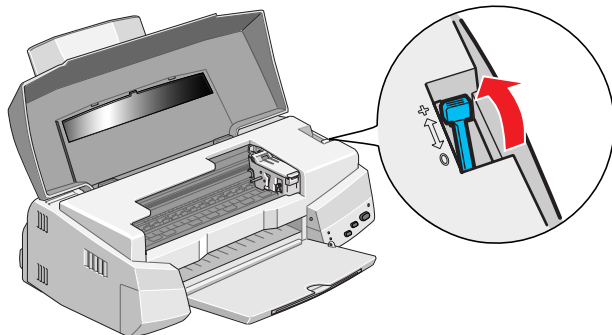

## EPSON Photo Paper

You can use EPSON Photo Paper to print photographs that look almost as good as the ones you get from film processing. 4 × 6-inch Photo Paper is perforated around the edges, so you can trim your printouts and “bleed” the photo—extend it to the edge of the paper—on all sides.

 
You can load up to 20 sheets of 4 × 6-inch, Letter-size, or A4-size Photo Paper or 1 sheet of Panoramic paper at a time. Make sure you place a support sheet beneath the paper if it is included in the paper package.

### Note:

To keep your printouts looking their best, store them in a resealable plastic bag or other airtight covering and protect them from heat, humidity, and direct sunlight.

Be sure to support your Panoramic Photo Paper as it ejects from the printer so it doesn't fall onto the floor.


Keep the following in mind when using EPSON Photo Paper:

- ☐ Load the paper with the whiter (glossier) side facing up.
- ☐ If you're loading Panoramic Photo Paper, pull up the paper support extension. Then load the Panoramic paper and hold up its top edge while you press the  load/eject button to feed it into the printer.


Select **Photo Paper** as the Media Type setting and **Panoramic 210 × 594 mm** as the Paper Size setting.

- ☐ If you're loading 4 × 6-inch Photo Paper, follow these steps:

1. Position the perforated margins as shown and load up to 20 sheets with support sheets A and B beneath the stack.

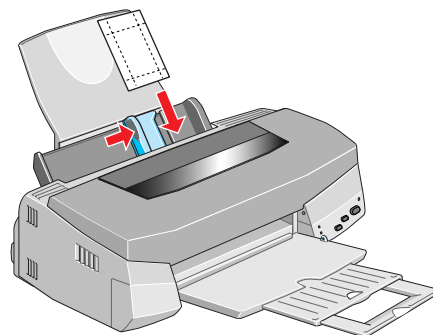


2. When you create the image you'll print in your application software, size it to 4.25 × 6.25 inches so the image covers the perforations as shown.

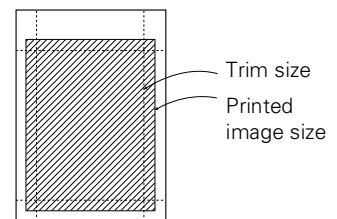


Choose these printer software settings:  
**Photo Paper** as the Media Type setting  
**EPSON Photo Paper 4 × 6 in** as the Paper Size setting  
**Maximum** as the Printable Area setting.

3. After you print, fold the paper back and forth along the perforations and carefully tear the margins off.

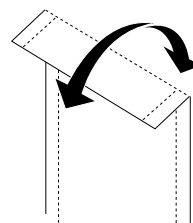

### EPSON Photo Quality Ink Jet Cards

You can load up to 30 cards at a time. Always place the included support sheet under the cards and load them as shown below.

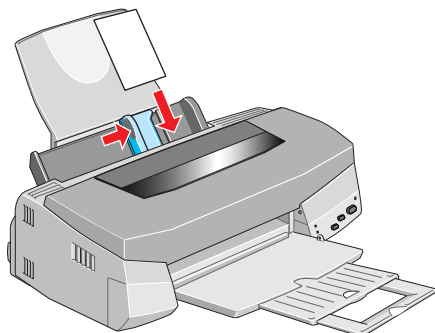

Make sure you set the paper thickness lever to the + position as shown in “Envelopes” on page 10. When you’re ready to print, set the Media Type to **Photo Quality Ink Jet Paper** and the Paper Size setting to the card size in your printer software.

### EPSON Photo Quality Self Adhesive Sheets

Use these sheets to print labels or stickers. You can load one sheet at a time. Make sure your adhesive sheets are fully adhered to their backing sheet before you load them.

When you’re ready to print, select **Photo Quality Ink Jet Paper** as the Media Type setting in your printer software.

### EPSON Iron-On Cool Peel Transfer Paper


 
You can print photos, company logos, or anything else you want on these transfer papers, and then iron your images onto T-shirts or other cloth items.

Load one sheet of transfer paper at a time and select **360 dpi Ink Jet Paper** as the Media Type setting.

Make sure you reverse your image before you print it—especially if it includes text—so it will read correctly when it’s transferred. You can use the **Flip Horizontal** setting in your printer software to do this (see the *Printer Basics* book for instructions).

After you print, follow the instructions that came with the paper to iron the image onto the shirt or other item.

## Replacing an Ink Cartridge

When the  black or  color ink out light flashes, the indicated cartridge is low on ink. This is a good time to make sure you have a new cartridge. When the light stays on, the cartridge is empty and you need to replace it.

Use these EPSON ink cartridges within six months of installing them and before the expiration date on the package:

Black ink cartridge: S020189

Color ink cartridge: S020191

 
 
 


#### Caution:


To ensure good results, use genuine EPSON cartridges and do not refill them. Other products may cause damage to your printer not covered by EPSON’s warranty.

If you need to replace an ink cartridge **before** the lights flash (because the ink is too old, for example) follow the instructions in “Replacing an Outdated Ink Cartridge” on page 12.

## Removing and Installing Ink Cartridges

You can replace a cartridge when the  black or  color ink out light is either flashing or on. (If you press the  cleaning button when **both** ink out lights are **off**, the printer cleans the print head, as described in “Cleaning the Print Head” on page 12.) Follow these steps:

1. Remove the new ink cartridge from its packaging.
2. Remove **only** the yellow part of the tape seal on top as shown below.

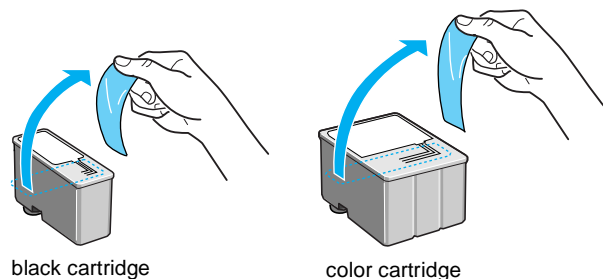

black cartridge

color cartridge


 



#### Caution:

You must remove the yellow tape from the top of the cartridge or you will permanently damage it. Don’t pull off the blue portion or remove the clear seal from the bottom of the cartridge; ink will leak out.

To avoid damaging the printer, never move the print head by hand.

3. Make sure the printer is turned on and not printing, then open the printer cover.

4. Press the  cleaning button and hold it for about three seconds until the print head moves left and the  power light begins flashing.  
(The print head returns to its home position if you don't proceed to step 5 within 60 seconds.)
5. Pull up the ink cartridge clamp. The cartridge rises up from its holder.

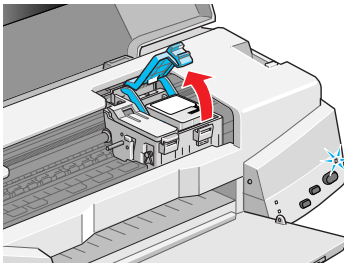


**Caution:**  
Don't open the clamp or remove a cartridge except to replace it with a new one. Once you remove a cartridge, you can't reuse it, even if it contains ink.


6. Lift the cartridge out of the printer and dispose of it carefully.




 
**WARNING:**  
If ink gets on your hands, wash them thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water.

7. Lower the new ink cartridge into its holder with the label facing up and toward the back of the printer.
8. Press down the ink cartridge clamp until it locks in place.

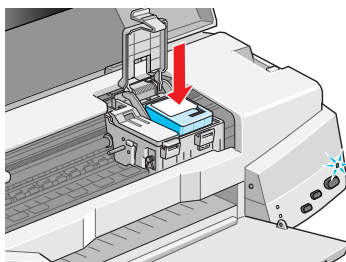


9. If you need to replace the other ink cartridge, repeat the preceding steps before going on to step 10.
10. Press the  cleaning button and close the printer cover.

The printer moves the print head and begins charging the ink delivery system. (Even if you don't press the button, ink charging begins 60 seconds after you close the clamp.)



The  power light flashes, and the printer makes various sounds. Charging takes a couple minutes. When it's finished, the  power light stops flashing and stays on.

 



**Caution:**  
Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made any noise for more than 5 minutes.

## Replacing an Outdated Ink Cartridge


If an ink cartridge is more than six months old, you may need to replace it. How can you tell? You may notice that your printouts don't look as good as they used to. If print quality doesn't improve after cleaning and aligning the print head, you can replace one or both cartridges.

 
Follow these steps to replace an ink cartridge **before** the  black or  color ink out light is flashing or on:

 

1. Prepare your new ink cartridge for installation as described in steps 1 and 2 of "Removing and Installing Ink Cartridges" on page 11.
2. Make sure the printer is turned on and not printing, then open the printer cover.
3. Press the  load/eject button and hold it down for three seconds until the print head moves to the left. The  power light begins flashing.



**Caution:**  
To avoid damaging the printer, never move the print head by hand.

Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made any noise for more than 5 minutes.

4. Remove the old ink cartridge and install the new cartridge as described in steps 5 through 9 of "Removing and Installing Ink Cartridges" above. Don't press any control panel buttons, however.
5. Press the  load/eject button and close the printer cover.

The printer moves the print head and begins charging the ink delivery system. The  power light flashes and the printer makes various sounds. Charging takes a couple minutes. When it's finished, the  power light stops flashing and stays on.

## Cleaning the Print Head


 

 
If your printed image is unexpectedly light or faint, or dots are missing from the image, you may need to clean the print head. This unclogs the nozzles so they can deliver ink properly.

 
Cleaning the print head uses ink, so clean it only if print quality declines. You can clean the print head in either of the following ways:

- ☐ With the Head Cleaning utility in your printer software (when connected to a local port, not over a network)
- ☐ Using the printer's control panel buttons

 
## Using the Head Cleaning Utility

Follow these steps to run the Head Cleaning utility:

1. Make sure the printer is turned on but not printing, and the  black and  color ink out lights are off.
2. Start an application and open a document.
3. Access the printer settings dialog box as described in the *Printer Basics* book.
4. Click the **Utility** tab (Windows) or the  Utility icon (Macintosh). You see the Utility menu.
5. Click the **Head Cleaning** icon.
6. Follow the instructions on the screen to clean the print head. Cleaning takes a couple minutes, during which the printer makes some noise and the  power light flashes.

When the  power light stops flashing, run a nozzle check to test the results and reset the cleaning cycle.



 
 
 

**Caution:**  
Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made any noise for more than 5 minutes.

7. Make sure paper is loaded in the printer and click **Print nozzle check pattern** (Windows) or **Confirmation** (Macintosh). Then click **Next**. The nozzle check pattern prints on your printer; see "Examining the Nozzle Check Pattern" below for details.
8. If the nozzle check pattern is complete, click **Finish**.

 
If the pattern is missing dots, click **Clean** to run another cleaning cycle. If you don't see any improvement after cleaning two or three times, check the print quality solutions in the *Printer Basics* book.


## Using the Control Panel

Follow these steps to clean the print head:

1. Make sure the printer is turned on and not printing, and that the  black and  color ink out lights are off.
2. Press the  cleaning button and hold it down for three seconds. Cleaning takes a couple minutes, during which the printer makes some noise and the  power light flashes.




**Caution:**  
Never turn off the printer while the  power light is flashing, unless the printer hasn't moved or made any noise for more than 5 minutes.

3. After the  power light stops flashing, print a page to test the print quality and reset the cleaning cycle.


If you're connected directly to the printer, run a nozzle check. Go to step 4.

If you're using DOS or printing over a network, open an application and print a document containing black and color data. Then go to step 8.


4. Start an application, open a document, and access the printer settings dialog box.
5. Click the **Utility** tab (Windows) or the  Utility icon (Macintosh). You see the Utility menu.
6. Make sure paper is loaded in the printer and click the **Nozzle Check** icon, then click **Next**. The nozzle check pattern prints on your printer; see "Examining the Nozzle Check Pattern" below for details.
7. If the nozzle check pattern is complete, click **Finish**.
8. If the pattern is missing dots, click **Clean** to run another cleaning cycle.
9. If you don't see any improvement after cleaning two or three times, check the print quality solutions in the *Printer Basics* book.

## Examining the Nozzle Check Pattern

Examine the nozzle check pattern you print. It should look something like this, with the lower pattern colored magenta, cyan, and yellow:

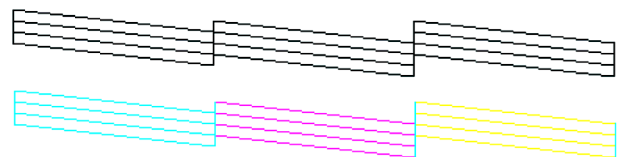

Each staggered horizontal and straight vertical line should be complete, with no gaps in the dot pattern. If your printout looks okay, you're done. If any dots are missing, as shown below, clean the print head again; see "Cleaning the Print Head" on page 12 for instructions.

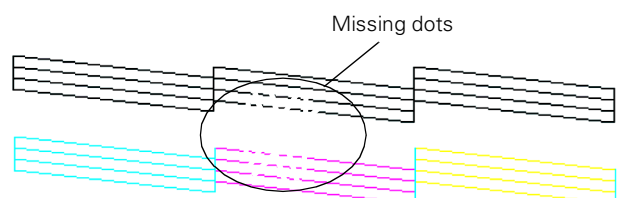



Aligning the Print Head


If your printouts contain misaligned vertical lines, you may need to align the print head using the Print Head Alignment utility in your printer software. Your printer must be connected to a local port, not on a network, to use this utility. Follow these steps:

- 1. Make sure the printer is turned on and paper is loaded.



Caution:  
Load paper that's at least 8.27 inches (210 mm) wide. This prevents ink from spraying inside the printer and smudging your printouts.

For the best results, load EPSON ink jet paper in the printer whenever you check the print head alignment.

- 2. Start an application and open a document.
- 3. Access the printer settings dialog box as described in the *Printer Basics* book.
- 4. Click the **Utility** tab (Windows) or the  **Utility** icon (Macintosh). You see the Utility menu.
- 5. Click the **Print Head Alignment** icon.
- 6. Follow the instructions on the screen to print a test page and select the correct alignment.

Cleaning the Printer

To keep your printer working at its best, you should clean it several times a year, following these steps:

- 1. Turn off the printer, unplug the power cord, and disconnect the printer cable.
- 2. Remove all the paper from the sheet feeder.
- 3. Clean the exterior of the printer with a soft, damp cloth.
- 4. Clean ink out of the printer's interior with a soft, damp cloth.



Caution:  
Don't touch the gears inside the printer.

Never use alcohol or thinner for cleaning; they can damage the printer components and case.

Don't use a hard or abrasive brush.

Don't get water on the printer components.

Don't spray lubricants or oils inside the printer.

Transporting the Printer

If you move your printer some distance, you need to prepare it for transportation in its original box. Follow these steps:

- 1. Turn on the printer and wait until the print head locks in the far right position. Then turn off the printer.



Caution:  
To avoid damage, always leave the ink cartridges installed when transporting the printer.

- 2. Unplug the power cord from the electrical outlet. Then disconnect the interface cable from the printer.
- 3. Remove any paper from the printer and remove the paper support.
- 4. Push in the output tray extensions and close the tray.
- 5. Repack the printer and attachments in the original box using the protective materials that came with it. See the unpacking sheet that was packed with your printer.

Be sure to keep the printer level as you transport it. If you notice a decline in print quality after transporting the printer, clean the print head (see "Cleaning the Print Head" on page 12); if output is misaligned, align the print head (see "Aligning the Print Head" on this page).

Related Documentation

TM-SC467	EPSON Stylus COLOR 440/640/740 Service Manual
PL-SC740i	EPSON Stylus COLOR 740i Parts Price List
CPD-8359	EPSON Stylus COLOR 740i <i>Printer Basics</i> book
CPD-8361	EPSON Stylus COLOR 740i <i>Start Here</i> card
ESC740i0399	EPSON Stylus COLOR 740i Manual (PDF)