

EPSON Stylus® C84N



# Start Here



CPD-16964

# 1 Unpack


**1** Remove everything from the box.

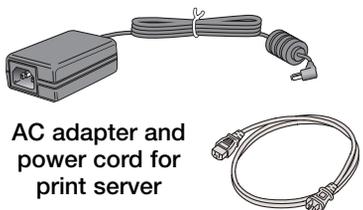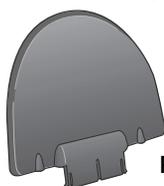


**2** Remove all the blue tape and packing material inside and around the printer. The tape may be in slightly different places on your printer, so check carefully.

Don't touch this cable . . . . .

Carefully remove this piece

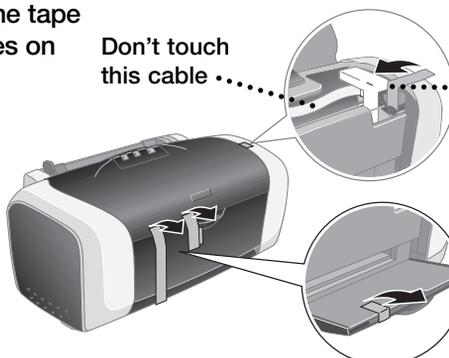


**3** Slide the paper support into the groove on the back of the sheet feeder. The paper support should fit securely.

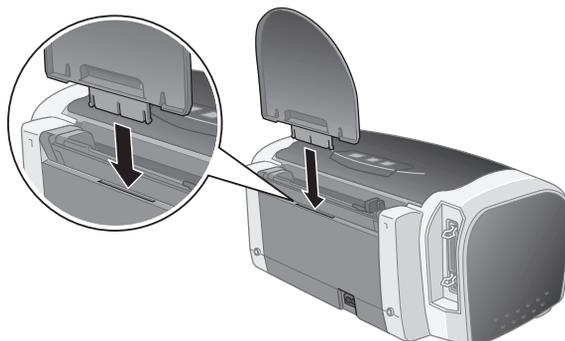


# 2 Power On

- 1 Connect the printer's power cord to the printer, then plug it into a standard electrical outlet.

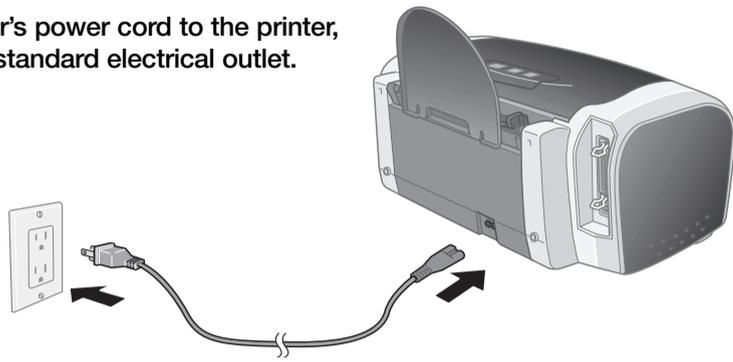


- 2 Press the printer's power button until the green power light comes on.

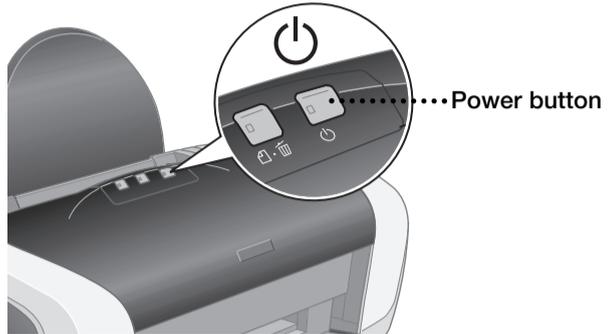

**CAUTION:** Use only the printer's power button to turn the printer on or off.


# 3 Install Ink Cartridges

- 1 Lower the printer's output tray, pull out the extension, and open the cover.

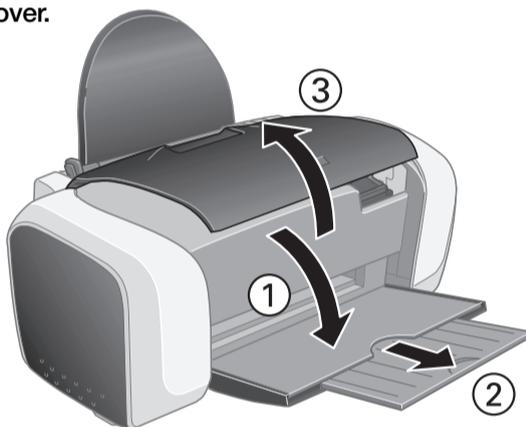


- 2 Shake the package of ink cartridges four or five times. Then remove the cartridges from the package. (Don't shake them after removing the packaging.)

Don't touch the green circuit boards or remove any labels

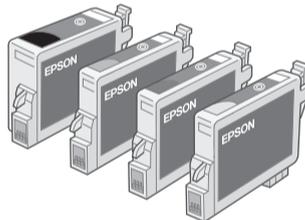


- 3 Open the cartridge cover.

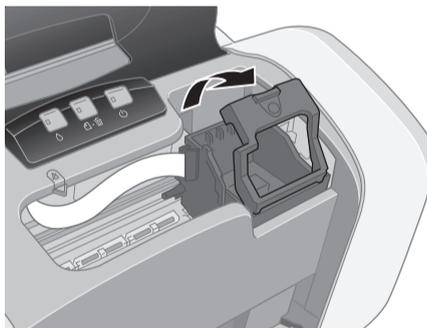


- 4 Lower each ink cartridge into its holder with the green circuit board facing the front.

Then gently push each ink cartridge down until it is firmly seated.

The color of the cartridge label should match the marker on the holder.

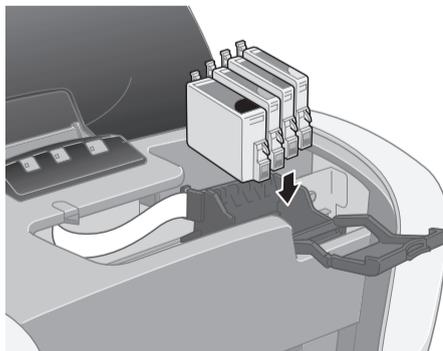

- 5 Close the cartridge cover.

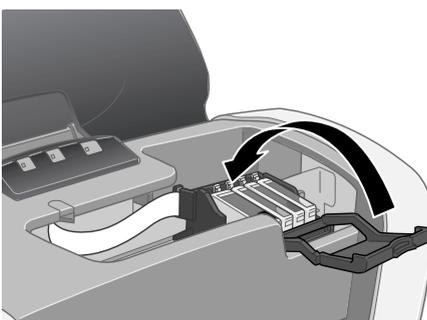


**Continue**

- Press the ink button and close the printer cover.

The green power light flashes as your printer charges ink for several seconds.


**CAUTION:** Don't turn off the printer while the green power light is flashing, unless the printer hasn't moved or made any noise for more than 5 minutes.

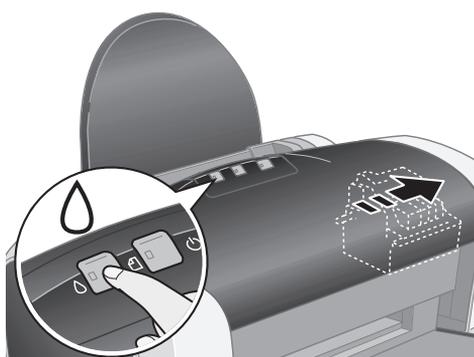

## 4 Load Paper


- Fan a few sheets of paper and place them against the right edge guide. Make sure the paper is under the tabs on the edge guides. Don't push the paper in.

- Press in the side of the left edge guide and slide it against the paper, but not too tightly.

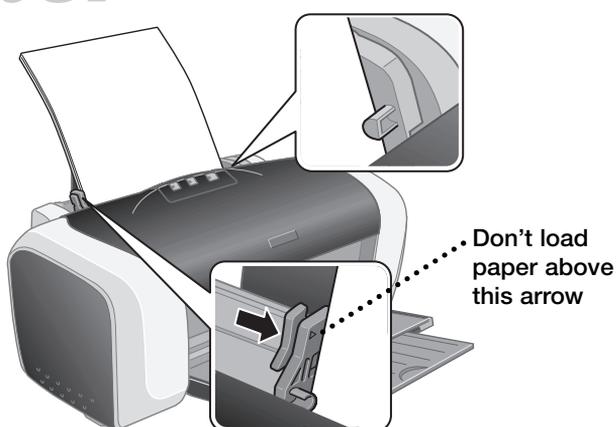


## 5 Connect the Print Server


- Turn off the printer.
- Plug the print server into the printer's parallel port. Secure it with the wire clips.
- Connect a network cable to the 10/100 connector on the print server. Then connect the other end of the cable to a hub or switch.

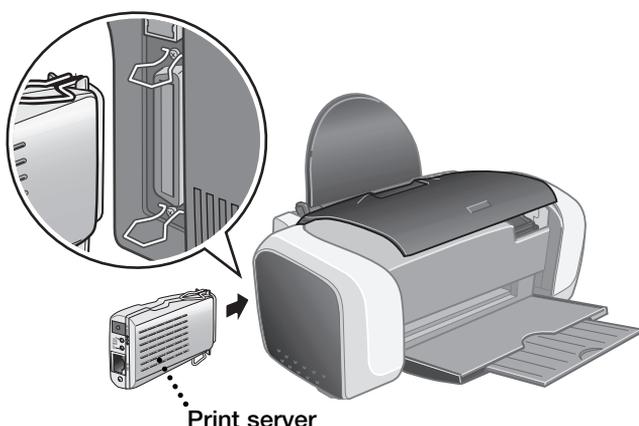

**NOTE:** The print server will automatically use DHCP to obtain an IP address. If it cannot get an IP address this way, it will use the private IP address of 192.168.192.168. If you're not using DHCP, see the online Administrator's Manual for instructions on assigning an IP address to the printer.

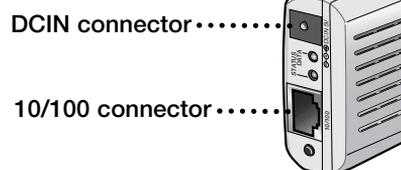

- Turn on the printer.
- Plug the AC adapter's power cord into a grounded electrical outlet. Then connect it to the AC adapter.
- Press and hold down the status sheet button on the print server as you plug the AC adapter into the DCIN connector on the print server. Continue to hold down the status sheet button for about 10 seconds.

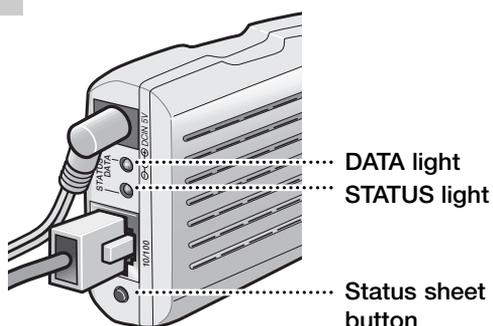

The STATUS light turns red as the print server initializes, while the DATA light above it stays green. Continue to hold down the status sheet button until the STATUS light turns orange or green.

**NOTE:** It can take up to one minute to initialize the print server.

- When the print server is done initializing, press the status sheet button again for about two seconds to print a status report. If the report prints, the print server is installed correctly.

**CAUTION:** Before disconnecting the print server from the printer, always turn off the printer and unplug the AC adapter.

# 6 *Install Software*

Follow the steps in the appropriate section below to install the printer software on Windows® NT 4.0, 2000, or XP, or on Macintosh®. To install on Windows Me or 98, see the *Supplement* booklet.

**NOTE:** These procedures set up the printer for TCP/IP printing on Windows or Macintosh OS X, or for AppleTalk® printing on Macintosh. For other network protocols, such as NetWare® or NetBEUI, see the online Administrator's Manual.

All computers that use the printer with TCP/IP must be on the same IP subnetwork.

## Windows

**1** Make sure the computer is properly connected to the network, then turn it on. Then make sure the printer and print server are still on.

**2** Put the EPSON Printer Software CD in your CD-ROM or DVD drive.


You see the EPSON Installation Program window. ....



**3** Double-click **Install EpsonNet Install Wizard**.

**4** Follow the on-screen instructions to install EpsonNet Install Wizard.

**5** When you see a screen like this one, ..... click **Yes** to open EpsonNet Install Wizard.

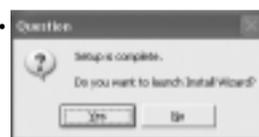

**6** You see a license agreement. Read the agreement and click **Accept**.

Install Wizard searches the network, finds your printer, and displays it in a dialog box. This can take 20 to 30 seconds.

**NOTE:** Install Wizard may find more than one printer. Identify the printer by the name listed on the status report you printed out in section 5, "Connect the Print Server."



**7** Select the check box next to your printer and click **Next**. ....

Printer Name	IP Address	Printer ...	MAC Address
<input checked="" type="checkbox"/> Epson Stylus C840 (EPSON Stylus C840)	192.168.1.101	Stylus C840	8804467700

Install Wizard automatically installs the printer driver and configures the printer port. This takes about 10 seconds.

**8** Make sure there is letter-size plain paper in the printer, then click the **Print** button to print a test page. If the test page prints, the installation is successful.

**9** Optionally, do any of the following:

- Install EPSON Network Status Monitor if you want to monitor the printer's status from this computer. Double-click **Install EPSON Network Status Monitor** and follow the on-screen instructions.
- Install the printer movies and *User's Guide*. To do this, double-click **Install Printer Movies and User Guide (EPIC)**. (You may have to scroll down to see this option.) Then double-click the  **EPSON Printer Information Center** icon on the desktop to view the printer movies or the *User's Guide*.
- Install EPSON Software™ Film Factory™, a photo management program. To do this, double-click **Install EPSON Software Film Factory**. (You may have to scroll down to see this option.) Then follow the on-screen instructions.
- View the print server *Administrator's Manual*. To do this, double-click **View Administrator's Manual**. (You may have to scroll down to see this option.) If you don't have Adobe Reader®, install it when prompted.

**10** Click the  icon to close the EPSON Installation Program window, then remove the CD-ROM from the drive.

# Macintosh

- 1 Make sure the Macintosh is properly connected to the network, then turn it on. Make sure the printer and print server are still on.
- 2 Put the EPSON Printer Software CD in your CD-ROM or DVD drive.

3 Double-click the **C84N** CD-ROM icon on the desktop (if necessary).

4 Double-click the **EPSON Installer** icon.

You see the EPSON Installation Program window.

5 Double-click **Install EPSON Stylus C84N ..... Printer Driver**.




6 Follow the on-screen instructions to install the driver and restart your Macintosh.

## Macintosh OS X

1 After your Macintosh restarts, open the **Applications** folder, then open the **Utilities** folder and double-click **Print Center**.


2 If there are no printers in Print Center, you see a message like this one. Click **Add**.....

If the Printer List window appears, Click **Add**.

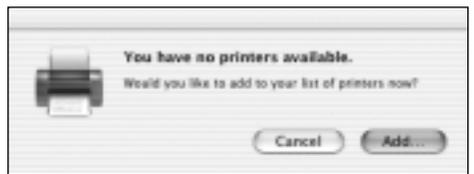


3 Depending on your network, select either **EPSON AppleTalk** or **EPSON TCP/IP** from the pull-down list.....

4 Select your printer, then select **All** from the Page Setup pull-down list.

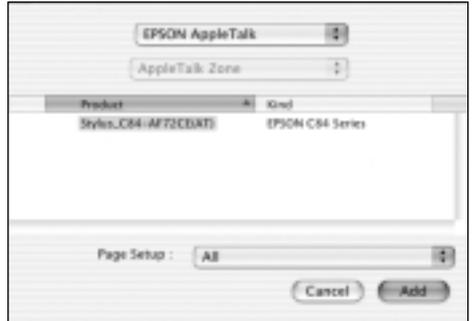

5 Click **Add**. You see the Printer List window with the Stylus C84 Sheet Feeder - Borderless and Standard printer options.....

*NOTE: If you're connecting over a TCP/IP network, your printer is identified by its IP address. To identify the printer's IP address, see the status report you printed out in section 5, "Connect the Print Server."*

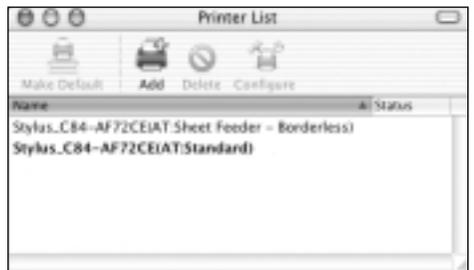

6 Close Print Center.

*NOTE: Make sure you select your printer in the Print Setup dialog box in the applications you use.*

7 Optionally, double-click the **C84N** CD-ROM icon on the desktop, and double-click **EPSON Installer**.

- Install the print movies and *User's Guide*. To do this, double-click **Install Printer Movies and User Guide (EPIC)**. Then double-click the **EPSON Printer Info Center** icon on the desktop to view the printer movies or *User's Guide*.
- Install EPSON Software Film Factory, a photo management program. To do this, double-click **Install EPSON Software Film Factory**, and follow the on-screen instructions.
- View the print server *Administrator's Manual*. To do this, double-click **View Administrator's Manual**. If you don't have Adobe Reader, install it when prompted.

8 Click the  icon to close the EPSON Installation Program window, then remove the CD-ROM from the drive.

## Macintosh OS 8.6 to 9.x

**1** After your Macintosh restarts, open the Chooser from the Apple® menu.

**2** Select **C84 Series**, select your printer ..... in the printer port window, and turn Background Printing **On**.



**3** Close the Chooser.

**4** Optionally, double-click the **C84N** CD-ROM icon on the desktop, and double-click the **EPSON Installer** icon.

- Install the printer movies and *User's Guide*. To do this, double-click **Install Printer Movies and User Guide (EPIC)**. Then double-click the **EPSON Printer Info Center** icon on the desktop to view the printer movies or *User's Guide*.
- Install EPSON Software Film Factory, a photo management program. To do this, double-click **Install EPSON Software Film Factory**, and follow the on-screen instructions.
- View the print server *Administrator's Manual*. To do this, double-click **View Administrator's Manual**. If you don't have Acrobat Reader, install it when prompted.

**5** Click the  icon to close the EPSON Installation Program window, and then remove the CD-ROM from the drive.

# 7 Questions?

Here's where to look for answers:

### **Printer Basics book**

Learn about loading paper, printing, maintaining the printer, solving problems, and contacting EPSON.



### **Supplement booklet**

Tells you how to install printer software on Windows 98 and Me, and provides general information about the network software utilities. The *Supplement* also includes instructions for turning Status Monitor off and on.



### **Printer movies and User's Guide**

Learn more about using the printer. Double-click the **EPSON Printer Information Center** icon on the desktop, then click either **Print Show** or **User's Guide**. If you have not installed these, see section 6, "Install Software," for instructions.



### **Online Administrator's Manual**

Provides information about using the print server, network utilities, and other operating systems and network protocols (Novell® NetWare, NetBEUI, IBM® OS/2®, UNIX®, and others). Double-click **View Administrator's Manual** in the EPSON Installation Program window.

### **Online help**

The printer driver and most of the utilities include online help that you can access by clicking the **Help** or **?** button.