
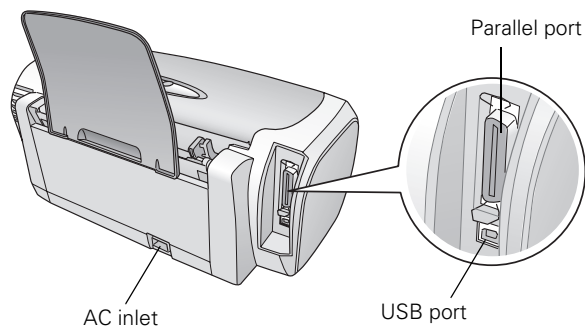
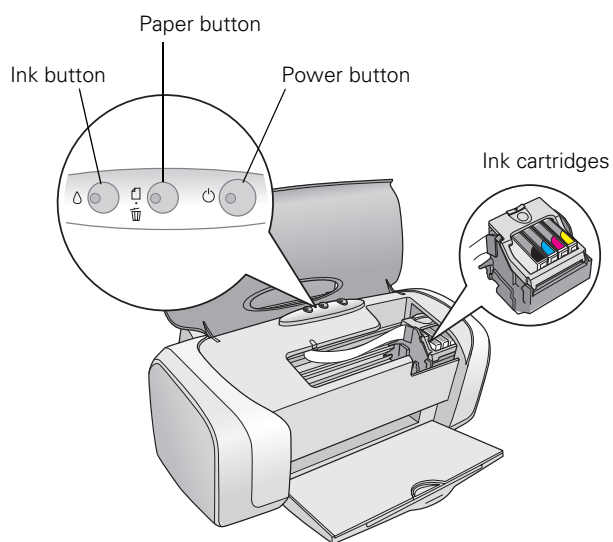


## Printer Parts

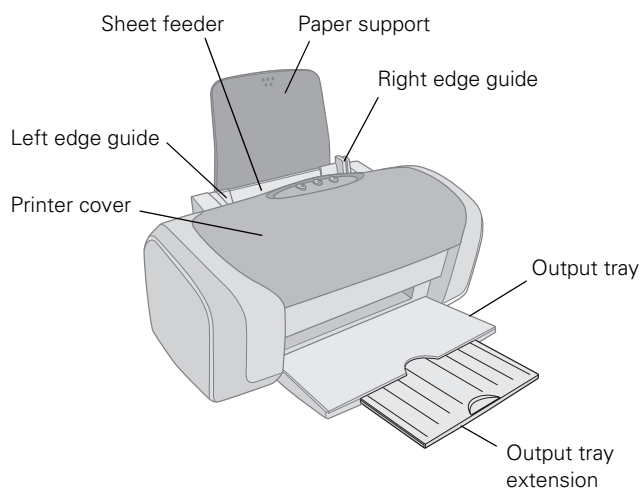

## Accessories

### Ink Cartridges

Cartridge	Part number
Black	T060120
Cyan	T060220
Magenta	T060320
Yellow	T060420

### Media

Paper name	Size	Part number
Epson Ultra Premium Glossy Photo Paper	Borderless 4 × 6 inches	S041934
	Letter (8.5 × 11 inches)	S041935
Epson Premium Bright White Paper	Letter (8.5 × 11 inches)	S041586
Epson Premium Glossy Photo Paper	Borderless 4 × 6 inches	S041808 S041727
	Borderless 5 × 7 inches	S041464
	Borderless 8 × 10 inches	S041465
	Letter (8.5 × 11 inches)	S041286 S041667
Epson Premium Semigloss Photo Paper	Letter (8.5 × 11 inches)	S041331
Epson Glossy Photo Paper	Borderless 4 × 6 inches	S041809
	Letter (8.5 × 11 inches)	S041141 S041649 S041272 S041271
Epson Matte Paper Heavyweight	Borderless 8 × 10 inches	S041467
	Letter (8.5 × 11 inches)	S041257
Epson Double-Sided Matte Paper	Letter (8.5 × 11 inches)	S041568
Epson Photo Quality Ink Jet Paper	Letter (8.5 × 11 inches)	S041062
	Legal (8.5 × 14 inches)	S041067
	A4 (8.3 × 11.7 inches)	S041061

You can purchase genuine Epson® ink and paper from an authorized Epson reseller. To find the nearest reseller, please call 800-GO-EPSON (800-463-7766). To purchase online, visit [www.epsonstore.com](http://www.epsonstore.com) (U.S. sales only). In Canada, please call (800) 463-7766 for reseller referral.

---

## Printer Specifications

---

### Printing

Printing method On-demand ink jet

Nozzle configuration

Black 180 nozzles  
Color 177 nozzles (59 each: cyan, magenta, yellow)

Print direction Bidirectional with logic seeking

### Mechanical

Paper path Sheet feeder, top entry, front out

Sheet feeder capacity Up to 150 sheets of 24 lb (90 g/m<sup>2</sup>) paper

Dimensions

Storage Width: 18.1 inches (460 mm)  
Depth: 9.5 inches (242 mm)  
Height: 7.5 inches (191 mm)

Printing Width: 18.1 inches (460 mm)  
Depth: 17.2 inches (437 mm)  
Height: 11.8 inches (309 mm)

Weight 9.3 lb (4.2 kg) without the ink cartridges

### Electrical

Rated voltage 100 or 240 V

Input voltage 90 to 264 V

Rated frequency 50 to 60 Hz

Input frequency 49.5 to 60.5 Hz

Rated current 0.2 A (Max. 0.4 A)

Power consumption

Approx. 19 W (ISO 10561 Letter Pattern)  
Approx. 4.5 W in standby mode  
Approx. 0.8 W in power-off mode

### Environmental

Temperature

Operation 50 to 95 °F (10 to 35 °C)

Storage\* -4 to 140 °F (-20 to 60 °C)  
1 month at 104 °F (40 °C)

Humidity (without condensation)

Operation 20 to 80% RH

Storage\* 5 to 85% RH

\*Stored in shipping container

### Safety Approvals

Safety standards UL 60950, CSA C22.2 No. 60950

EMC FCC part 15 subpart B class B  
CSA C108.8 Class B

### Ink Cartridges

Colors Cyan, magenta, yellow, black

Cartridge life 6 months at 77 °F (25 °C) after opening the package

Temperature

Storage -4 to 104 °F (-20 to 40 °C)  
1 month at 104 °F (40 °C)

Freezing\* 3.2 °F (-16 °C)

\* Ink thaws and is usable after approximately 3 hours at 77 °F (25 °C).

**Caution:** To ensure good results, use genuine Epson cartridges and do not refill them. Other products may cause damage to the printer not covered by Epson's warranty. Don't use an ink cartridge if the date on the package has expired.

### Interfaces

#### USB Interface

Standard Based on Universal Serial Bus Specifications Revision 1.1, Universal Serial Bus Device Class Definition for Printing Devices Version 1.1

Bit rate 12 Mbps (Full speed device)

Data encoding NRZI

Adaptable connector USB Series B

Recommended cable length 6 feet or less (under 2 meters)

#### Parallel Interface

Bidirectional IEEE 1284-compliant parallel interface

## Paper

### Single sheets

Size	A4 (8.3 × 11.7 inches)
	A6 (4.1 × 5.8 inches)
	Letter (8.5 × 11 inches)
	Legal (8.5 × 14 inches)
	Half-letter (5.5 × 8.5 inches)
	4 × 6 inches
	5 × 7 inches
	3.5 × 5 inches
	8 × 10 inches
	User Defined up to 8.5 × 44 inches

Paper type Plain bond paper or special paper distributed by Epson

Thickness 0.003 to 0.004 inch (0.08 to 0.11 mm)

Weight 17 lb (64 g/m<sup>2</sup>) to 24 lb (90 g/m<sup>2</sup>)  
(for plain bond paper)

### Envelopes

Size	No. 10 (4.1 × 9.5 inches)
	DL (4.3 × 8.7 inches)
	C6 (4.5 × 6.4 inches)
	132 × 220 mm

Paper type Plain bond paper

Weight 20 lb (75 g/m<sup>2</sup>) to 24 lb (90 g/m<sup>2</sup>)

**Note:** Poor quality paper may reduce the print quality and cause paper jams or other problems. If you have print quality problems, switch to a higher grade paper.

Do not load curled or folded paper.

Use paper only under these conditions:


Temperature: 59 to 77 °F (15 to 25 °C)

Humidity: 40 to 60% RH

Since the quality of any particular brand or type of paper may be changed by the manufacturer at any time, Epson cannot guarantee the quality of any non-Epson brand or type of paper. Always test a sample of paper stock before purchasing large quantities or printing large jobs.

Always load paper into the sheet feeder with the short edge first. Load envelopes flap edge left with the printable side up.

## Printable Area

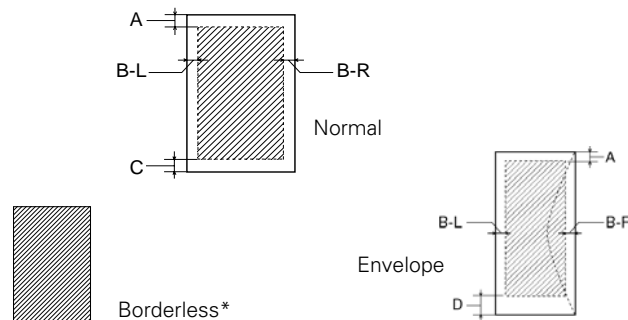

A	The minimum top margin is 0.12" (3.0 mm).
B-L	The minimum left margin is 0.12" (3.0 mm) for single sheets and 0.20" (5.0 mm) for envelopes.
B-R	The minimum right margin is 0.12" (3.0 mm) for single sheets and 0.20" (5.0 mm) for envelopes.
C	The minimum bottom margin is 0.12" (3.0 mm).
D	The minimum bottom margin is 0.78" (20 mm) for envelopes.
*	When printing with the borderless feature, print quality may decline in the expanded area. Before printing large jobs with the borderless setting, print a single sheet to check print quality.


## Loading Paper

When loading special Epson ink jet papers, follow these capacity guidelines:


Paper type	Loading capacity
Premium Bright White Paper	80 sheets
Ultra Premium Glossy Photo Paper Premium Glossy Photo Paper Premium Semigloss Photo Paper Glossy Photo Paper Matte Paper Heavyweight Double-Sided Matte Paper	20 sheets
Photo Quality Ink Jet Paper	100 sheets

Load paper as follows:



1. Open the output tray and pull out its extension.

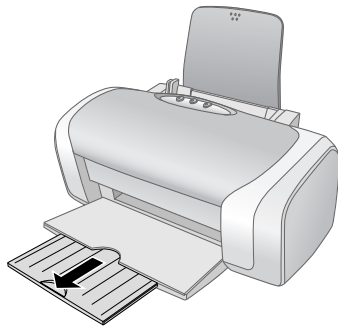

2. Squeeze the left edge guide and slide it to the left, if necessary.

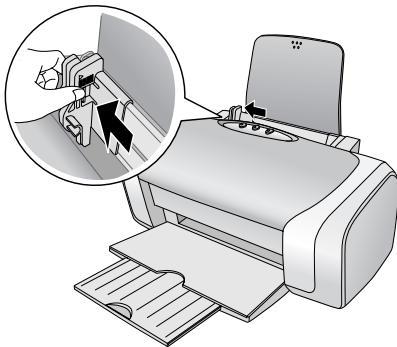

3. Insert the paper, printable side up, against the right edge guide. Then slide the left edge guide against the paper (but not too tightly).

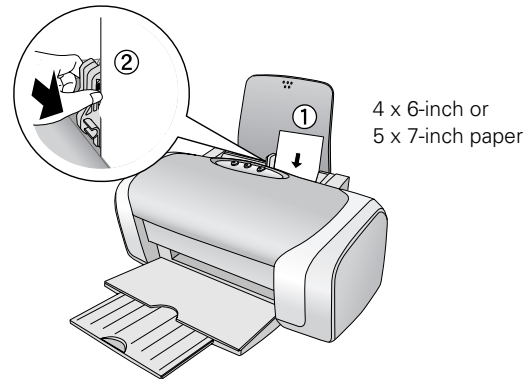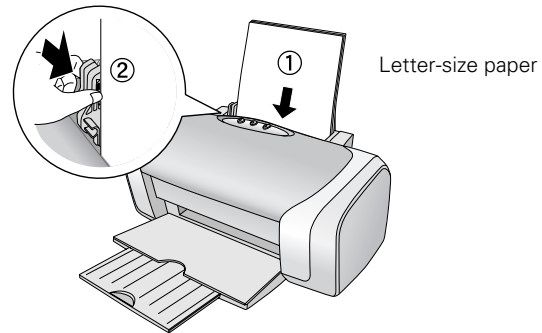

Follow these guidelines when loading paper:

- Don't load paper above the arrow on the left edge guide.
- Load the printable side face-up. It's often brighter or whiter than the other side.
- Always load the short edge first, even when printing in landscape mode.
- Load letterhead or preprinted paper into the printer top edge first.
- If you experience paper feeding problems, try loading fewer sheets.
- If you're using special paper, check the package for special loading instructions.

## Printing on Special Media

Select the correct **Type** or **Media Type** setting so your printer knows what kind of paper you're using and adjusts the ink coverage accordingly.

 

 
 
 
 
 
 

 
 

 
 
For this paper	Select this setting
Plain paper Epson Premium Bright White Paper	Plain Paper/Bright White Paper
Epson Ultra Premium Glossy Photo Paper	Ultra Premium Glossy Photo Paper
Epson Premium Glossy Photo Paper	Premium Glossy Photo Paper
Epson Premium Semigloss Photo Paper	Premium Semigloss Photo Paper
Epson Glossy Photo Paper	Glossy Photo Paper
Epson Matte Paper Heavyweight Epson Double-Sided Matte Paper Epson Photo Quality Ink Jet Paper	Matte Paper - Heavyweight
Envelopes	Envelope

The following proper care will minimize color changes and lengthen display life:

- Frame prints under glass or in a protective plastic sleeve to protect them from atmospheric contaminants like humidity, smoke, and high levels of ozone.
- As with all photographs, keep your prints away from direct sunlight.
- For proper storage, keep your prints in a photo album or plastic photo storage box in acid-free, archival sleeves commonly available from most camera stores.
- Always keep unused paper in the original package.

## Control Panel

To diagnose some problems, check the printer's control panel lights.

Light status	Explanation
Green  power light flashes	The printer is receiving a print job, charging ink, cleaning the print head, or ink is being replaced.
Red  paper light is on	Your paper ran out. Load more and press the  paper button to resume printing.
Red  paper light flashes	Paper is jammed in the printer. Press the  paper button to eject the jammed paper. If the light is still flashing, turn off the printer. Then open the cover and remove all paper, including any jammed or torn pieces. Then reload paper and press the  paper button to continue printing.
Red  ink light flashes	One of the cartridges is low on ink. Check the message that appears on your screen to determine which cartridge is low. Make sure you have a replacement cartridge.
Red  ink light is on	One of the cartridges is out of ink or not installed. Make sure you have a replacement cartridge, then follow the steps on page 7 to install it. If you have just installed a new cartridge, it may be incompatible with the printer or incorrectly installed. Reinstall it or replace it with the correct cartridge.
Red  paper and  ink lights flash alternately	Paper may be blocking movement of the print head. Turn off the printer, open the cover, and remove any jammed paper or other foreign objects. Then turn the printer back on. If the lights are still flashing, contact Epson.
Green  power light is off; red  paper and  ink lights flash	The printer may have an internal error. Turn off the printer, wait a few seconds, and turn it on again. If the lights are still flashing, contact Epson.
Green  power light is off	The printer is not receiving power. Make sure the printer is on. Turn off the printer, plug in the power cord securely, and turn the printer on again. Make sure the outlet is working and is not controlled by a switch or timer. If in doubt, try another outlet.

## Cleaning the Print Head


If your printouts are unexpectedly light, or dots or lines are missing, you may need to clean the print head. This unclogs the nozzles so they can deliver ink properly. Print head cleaning uses ink, so clean it only if quality declines.

This section explains how to clean the print head using the Head Cleaning utility.

You can also clean the print head by holding down the  $\Delta$  button on the printer for three seconds. (This only works when the red  $\Delta$  light is off.)

**Note:** When you don't turn on your printer for a long time, print quality can decline, so turn it on and print a few pages at least once a month to maintain good print quality.

## Running the Head Cleaning Utility

1. Make sure the printer is turned on but not printing, and the red  $\Delta$  ink light is off. (If the  $\Delta$  ink light is flashing or on, you need to replace a cartridge.)
2. **Windows:** Right-click the  printer icon on your taskbar (in the lower right corner of your screen). Select **Head Cleaning**.

**Note:** If you don't see the icon, go to your printer properties window, click the **Maintenance** tab, then select **Head Cleaning**.

**Macintosh OS X:** Open the **Applications** folder and double-click **Epson Printer Utility**. Select **Stylus C88** in the printer list, click **OK**, and select **Head Cleaning**.

You see a screen like the following:



3. Click **Start** or **Next**.

Cleaning takes several seconds. The printer makes noise and the green  $\odot$  power light flashes.

**Caution:** Never turn off the printer while head cleaning is in progress; you may damage the printer.

 
4. When the green  $\odot$  power light stops flashing, make sure paper is loaded in the printer, then do the following:

**Windows:** Click **Print Nozzle Check Pattern**. Then click **Print**.


**Macintosh:** Click **Confirmation**, then click **Next**.

The nozzle check pattern is printed.

5. If the pattern has no gaps or white lines, click **Finish**.



 If the pattern has white lines or gaps, click **Clean** to clean the print head again.



You can also turn the printer off and wait overnight—this allows any dried ink to soften—and then try cleaning the print head again.

## Replacing an Ink Cartridge

- When the red  $\Delta$  ink light flashes, one or more ink cartridges are low on ink.
- When the red  $\Delta$  ink light stays on, you need to replace the cartridge(s).


When you print, you'll also see a message on your screen telling you which cartridge is low or empty.

When a cartridge is more than six months old, you may need to replace it if printouts don't look their best. If the quality doesn't improve after cleaning and aligning the print head, you can replace the cartridge even if the red  $\Delta$  ink light is off.

**Note:** You cannot continue printing with one ink cartridge empty, even if the other cartridges still contain ink. Before printing, replace the empty cartridge.


## Checking the Ink Supply

To check your ink supply, do the following:


- Windows:** Double-click the  icon on the Windows taskbar.

**Note:** If you don't see the icon, go to your printer properties window, click the **Maintenance** tab, then select **Status Monitor**.

You see a window like this:

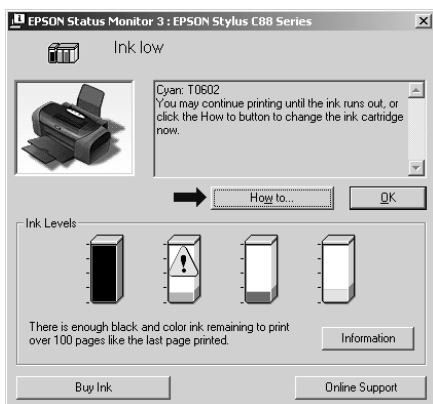

- ❑ **Macintosh OS X:** Double-click the Epson Printer Utility icon in the Applications folder. Choose C88 Series and click OK. Then click Epson Status Monitor. You see a window like this:

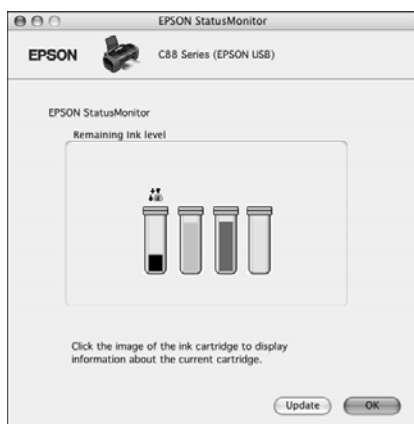

## Ink Cartridge Precautions

**Warning:** Keep ink cartridges out of the reach of children.

If ink gets on your hands, wash them thoroughly with soap and water. If ink gets in your eyes, flush them immediately with water.

**Caution:** Don't remove the cartridge label, or ink will leak.



Don't remove the green IC chip from the cartridge. Installing a cartridge without an IC chip can damage the printer. Avoid touching the green IC chip, as this can damage the ink cartridge.

 

If you remove an ink cartridge temporarily, protect the ink supply port on the bottom of the cartridge from dirt and dust. Place it in the original packaging, if you still have it, or in a small box.


Store ink cartridges in the same environment as the printer. Stand the cartridges upright (the label identifying the color should be on the top).

## Removing and Installing Ink Cartridges


Be sure you have a new ink cartridge before you begin. Once you start the ink cartridge replacement procedure, you must complete all the steps in one session.

1. Make sure the printer is turned on and not printing. The  power light should be on, but not flashing.
2. Open the printer cover.
3. Press and release the  ink button.



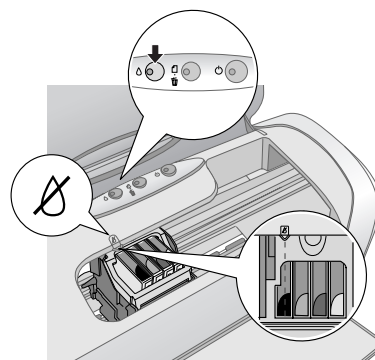The ink cartridge holder moves to the left, and the cartridge that needs to be replaced stops under the  ink out mark. The  power light flashes.




**Caution:** To avoid damaging the printer, never move the print head by hand.


**Note:** Don't hold down the  ink button for more than 3 seconds, or the printer will start to clean the print head.

If no cartridge needs to be replaced, the holder moves to the ink cartridge replacement position, shown below. Go to step 5.

4. Press the  ink button again.
  - ❑ If more than one cartridge is empty, the next cartridge moves under the  ink out mark.
  - ❑ If all the empty cartridges have been identified, the print head moves right to the ink cartridge replacement position, shown below.

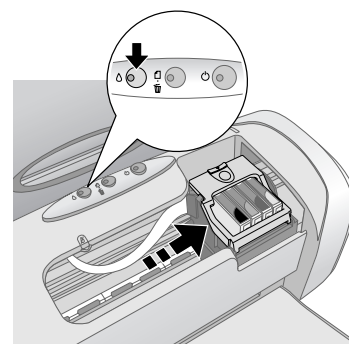


5. Open the cartridge cover.
6. Squeeze the back tab of the empty/low cartridge and lift it out of the printer. Don't take the used cartridge apart or try to refill it.

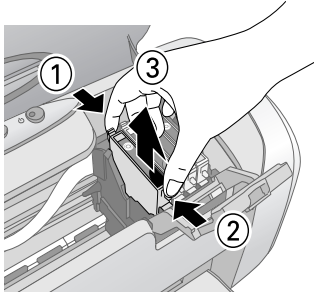

**Warning:** If ink gets on your hands, wash them thoroughly with soap and water. If ink gets into your eyes, flush them immediately with water.


7. Before you remove the new cartridge from its package, shake it four or five times. Then remove it from the package.

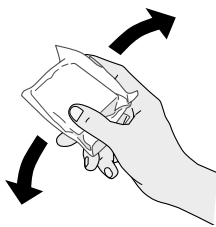


**Caution:** Do not remove or tear the label on the cartridge; otherwise ink will leak.

Don't touch the green chip on the front of the cartridge; you may inhibit normal operation and printing.


Don't touch the green part

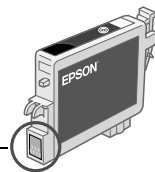

8. Lower the cartridge into the holder and push it down until it clicks into place.

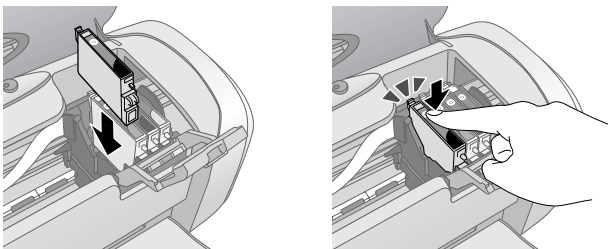

9. If you need to replace other ink cartridges, repeat steps 6 through 8 before continuing with step 10.
10. Close the ink cartridge cover and make sure you hear it click into place.

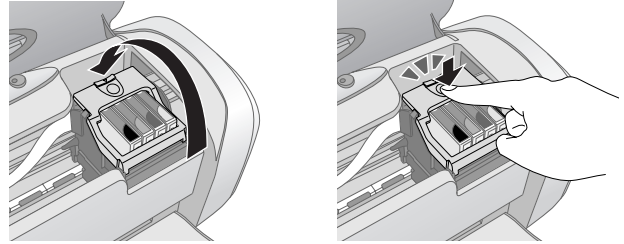

11. Close the printer cover.
12. Press the  $\Delta$  ink button. The printer begins charging the ink delivery system.

The green  $\Delta$  power light flashes and the printer makes noise. Charging takes about 1 minute. When it's finished, the green  $\Delta$  power light stops flashing and stays on, and the red  $\Delta$  light goes out.


**Caution:** Never turn off the printer while the green  $\Delta$  power light is flashing, or you'll waste ink.

**Note:** If the red  $\Delta$  light stays on (not flashing), the ink cartridge may not be installed correctly. Press the  $\Delta$  ink button again and reinstall the ink cartridge until it clicks into place.

## Aligning the Print Head

If your printouts look blurry or grainy, or you see light or dark vertical banding, you may need to align the print head.

**Note:** Banding may also occur if your cartridges are low on ink or you need to clean the print head.


1. Turn on the printer.
2. Load several sheets of paper.
3. **Windows:** Right-click the  printer icon on your taskbar (in the lower right corner of your screen). Select **Print Head Alignment**.

**Note:** If you don't see the icon, go to your printer properties window, click the **Maintenance** tab, then select **Print Head Alignment**.

**Macintosh OS X:** Open the **Applications** folder and double-click the **Epson Printer Utility** icon. Select **Stylus C88** in the printer list, click **OK**, and select **Print Head Alignment**.




4. Follow the instructions on the screen to print a black vertical alignment test page. You see a screen like this:

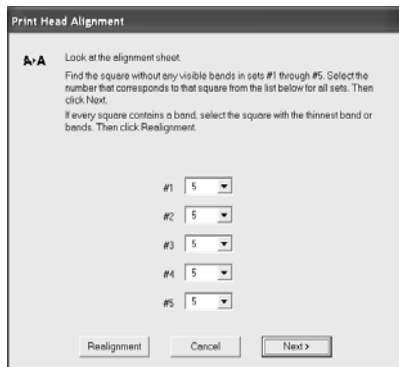

5. Look at the five sets of patterns in your printout. For each set, if you see a pattern with no visible vertical lines, enter its number in the corresponding box on the screen and click **Next**.

If you can't find a pattern without any vertical lines, select the best pattern. Click **Realignment** and then **Print** to print another alignment sheet and repeat this step.


6. Click **Print** to print the color vertical alignment sheet. You see a screen like this:

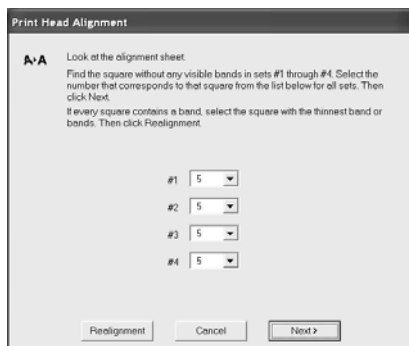

7. Look at the four sets of patterns in your printout. For each set, if you see a pattern with no visible vertical lines, enter its number in the corresponding box on the screen and click **Next**.

If you can't find a pattern without any vertical lines, select the best pattern. Click **Realignment** to print another alignment sheet and repeat this step.


8. Click **Print** to print a black horizontal alignment sheet. After it's printed you see a screen like this:

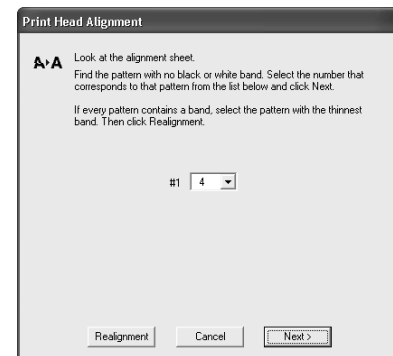

9. In your printout, select the pattern with no gap or line between the rectangles. Enter its number in the box on the screen and click **Next**.

If you can't find an aligned pattern, choose the best pattern. Then click **Realignment** to print another alignment sheet and repeat this step.

10. Click **Print** to print a color horizontal alignment sheet. After it's printed, you see a screen like this:

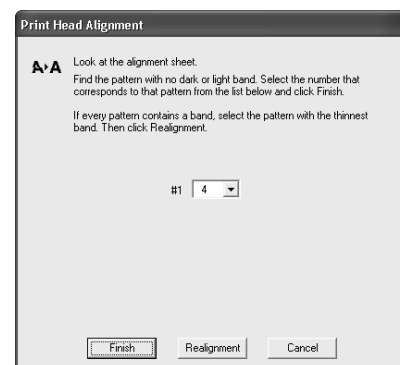

11. In your printout, find the pattern with no gap or line between the rectangles and enter its number in the box on the screen.

If you can't find an aligned pattern, choose the best pattern. Then click **Realignment** to print another alignment sheet and repeat this step.

12. Click **Finish** to close the Print Head Alignment Utility.


---

### Cleaning the Printer

---

To keep your printer working at its best, you should clean it several times a year.

1. Turn off the printer, unplug the power cord, and disconnect the cable.
2. Remove all the paper, then use a soft brush to clean the sheet feeder.
3. If the outer case or inside of the sheet feeder is dirty, clean it with a soft cloth dampened with mild detergent. Keep the printer cover closed to prevent water from getting inside.
4. If ink accidentally gets inside the printer, wipe off the rollers shown below with a damp cloth.

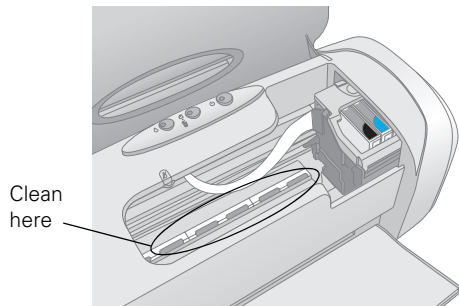

**Warning:** Don't touch the gears or any other parts inside the printer.

**Caution:** Never use a hard or abrasive brush, or benzene, alcohol, or paint thinner for cleaning; they can damage the printer components and case. Don't get water on the printer components and don't spray lubricants or oils inside the printer.

---

### Transporting the Printer


---

If you need to transport your printer some distance, carefully prepare and repack it as described below. Use the original box and packing materials, or a similar box that holds the printer securely.

**Caution:** When storing or transporting the printer, do not tilt it, stand it vertically, or turn it upside down. Otherwise, ink may leak from the cartridges. Be sure to leave the ink cartridges installed. Removing the cartridges can dehydrate the print head and may prevent the printer from printing.

1. Plug in the printer and turn it on. Wait until the print head returns to the home position, then close the printer cover.
2. Turn off the printer, then unplug its power cord and disconnect it from the printer.

3. Disconnect the interface cable.
4. Remove all paper from the sheet feeder and remove the paper support.
5. Secure the ink cartridge holder with tape, as shown below, then close the printer cover and output tray.

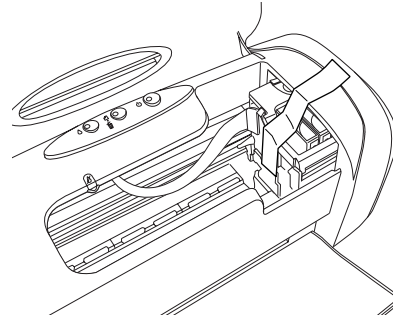

6. Attach the protective materials to both sides of the printer.
7. Repack the printer, paper support, and power cord in the original box.

**Note:** Keep the printer level during transport and be sure to remove the protective materials and tape before using the printer again.

---

### Related Documentation

---

- |           |  |
|-----------|--|
| CPD-19910 | Epson Stylus C88 <i>Start Here</i>               |
| CPD-19911 | Epson Stylus C88 <i>Quick Guide</i>              |
| CPD-19909 | Epson Stylus C88 CD-ROM with <i>User's Guide</i> |