


XP-401

Start Here

Read these instructions before using your product.


1 Unpack

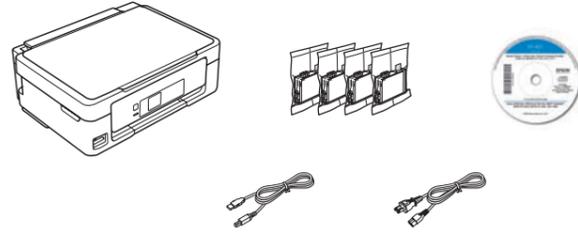

Note: The included ink cartridges must be used for printer setup and are not for resale. For more detailed information, visit www.latin.epson.com/infocartucho (website available only in Spanish).


Caution: Do not open ink cartridge packages until you are ready to install the ink. Cartridges are vacuum packed to maintain reliability.

Remove all protective materials, including from inside the printer.

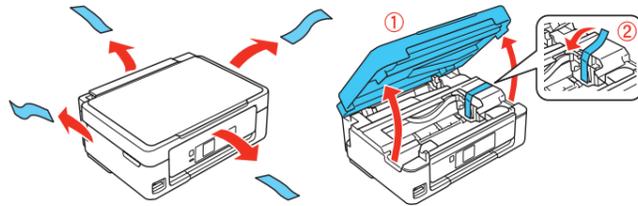


2 Turn on and adjust

1 Raise the paper support, then connect the power cord to the back of the printer and to an electrical outlet.

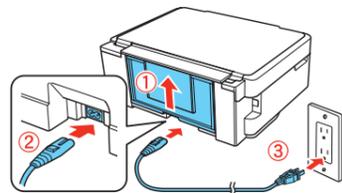

Caution: Do not connect to your computer yet.


2 Raise the control panel, then press the power button.

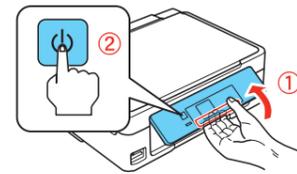

Note: If you want to lower the control panel, squeeze the release bar underneath.

Caution: Do not lower the control panel without first squeezing the release bar underneath or you may damage the product.

3 To select **English** as your language, press ▲ or ▼ to highlight it, then press **OK** to select it. If you want to select a different language, press ▲ or ▼ to select it, then press **OK**.

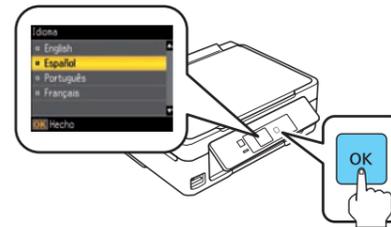

Note: You can change the language later using the product's control panel. For more information, see the on-screen *User's Guide*.


3 Install ink cartridges

Caution: Keep ink cartridges out of the reach of children and don't drink the ink.


Note: The ink cartridges included with your printer have a lower yield due to the ink system charging process. This process is carried out the first time you turn on your printer and guarantees better performance.

Don't load paper yet.


1 Lift up the scanner unit, and wait until the ink cartridge holder stops moving.

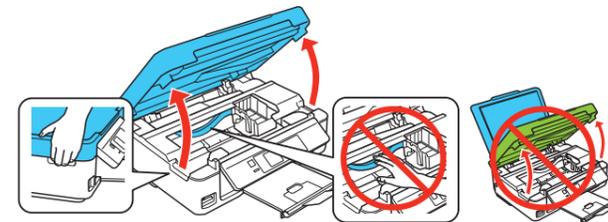

2 Shake the ink cartridges gently 4 or 5 times, then unpack them.

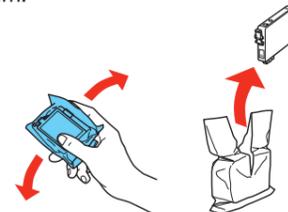


3 Remove only the yellow tape from each cartridge.

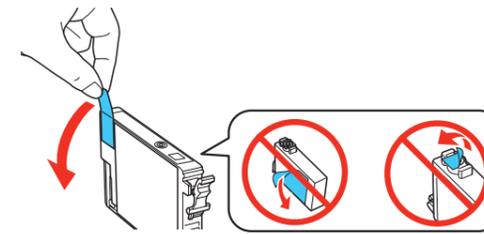


Caution: Don't remove any other seals or the cartridges may leak.

4 Insert the cartridges in the holder for each color, and press each cartridge down until it clicks.

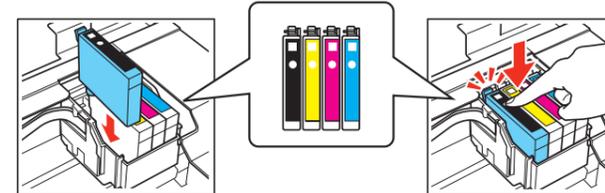

5 Lower the scanner unit.

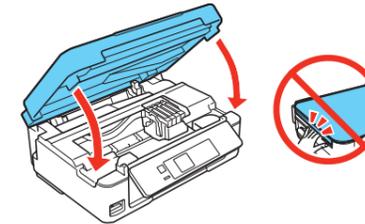


6 Press **OK** to prime the ink delivery system. Priming takes about 4 minutes. When you see a message on the LCD screen indicating that priming is complete, press **OK**.


Caution: Don't turn off the printer while it is priming or you'll waste ink.

4 Load paper


1 Flip the feeder guard forward.

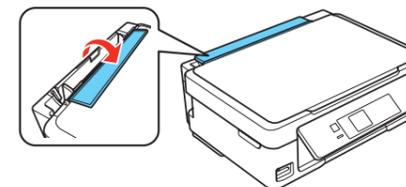


2 Raise the paper support, if necessary. Then pull up the extension and tilt it back slightly.

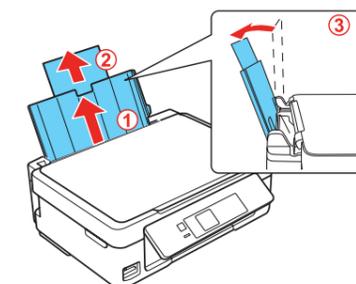


3 Pull out the output tray, then raise the paper stopper.

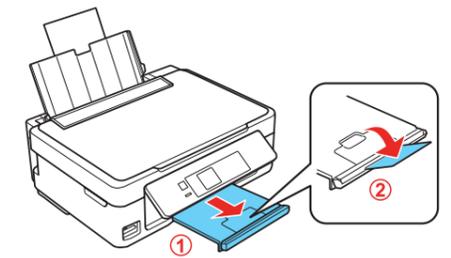


4 Slide the edge guide to the left.

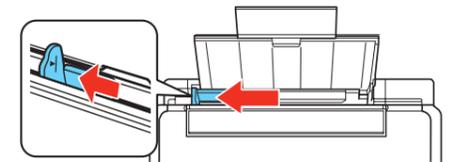

5 Load paper against the right edge guide and behind the tab line on the left edge guide, with the printable side faceup.

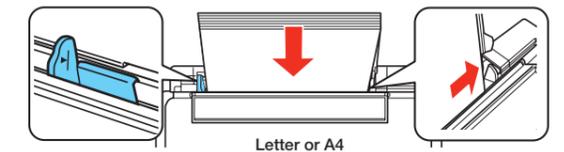

Letter or A4

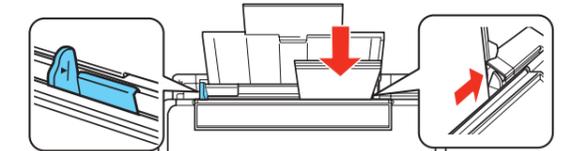


4 x 6 inch
(102 x 152 mm)


Note: Don't load the paper sideways; always load it short edge first.



6 Slide the edge guide over, against the left edge of the paper.

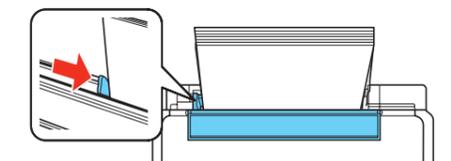

7 Flip the feeder guard back.

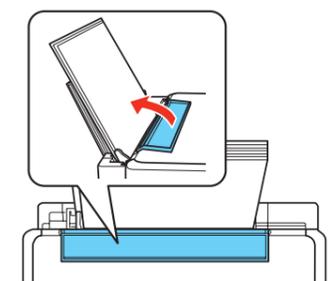

412244900

EPSON
EXCEED YOUR VISION



5 Install software


Note: If your computer does not have a CD/DVD drive, you can download the software from the Epson website. See "Epson technical support".

Caution: Be sure to close your other programs, including any screen savers and virus protection software, before beginning this software installation.

- 1 Make sure the printer is **NOT CONNECTED** to your computer.



Windows®: If you see a Found New Hardware screen, click **Cancel** and disconnect the USB cable. You can't install your software that way.

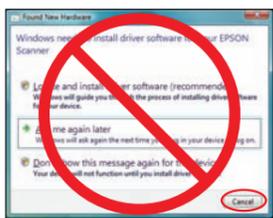


- 2 Insert the product CD.

- 3 **Windows:** If you see the AutoPlay window, click **Run Setup.exe**. If you see the User Account Control screen, click **Yes** or **Continue**.

Mac OS X: Double-click the  **EPSON** icon, if necessary.

- 4 Select your language, if necessary.

- 5 In Windows, accept the license agreement, then click **Install**. In Mac OS X, click **Continue**. Then follow the instructions on your computer screen.

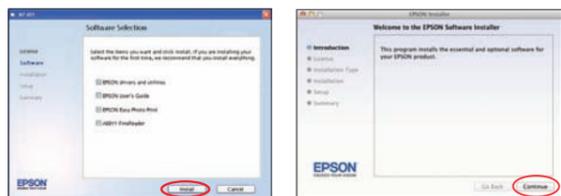

- 6 When you see the Select Your Connection screen, check the "Connection options" section on this sheet for more information.

Choose your connection. Then click **Next** (Windows) or **Continue** (Mac OS X) and follow the instructions on your computer screen.



Connection options

Wireless connection

You must install the software on every computer from which you want to print. For the first installation, we recommend using a USB cable to simplify wireless setup. After the printer is connected to the network, you will be prompted to remove the cable.

If you're using Mac OS X 10.6 or 10.7, you will need to use the buttons on the printer to select wireless settings. Follow the instructions on your computer screen during software installation; they will explain how to connect the printer wirelessly this way.

Make sure you know your network name (SSID) and network password:

- Network name _____
- Network password _____

If you don't have this information, contact the person who set up your network.

Direct USB connection


Make sure you have a USB cable.

Any problems?

If you experience problems during setup, see below:

Network setup was unsuccessful.

- Make sure you select the right network name (SSID).
- If you see a firewall alert message, click **Unblock** or **Allow** to let setup continue.
- If your network has security enabled, make sure you enter your network password (WEP key or WPA passphrase) correctly. Passwords must be entered in the correct case. Use the function buttons to select uppercase (**AB12**), lowercase (**ab12**), symbols (!#%@[**Symbol**]), or spaces (**Space**), and to delete characters (←).

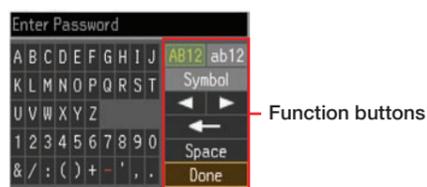

Press ▲, ▼, ◀, or ▶ on the printer to highlight a character or function button. Press **OK** to select it.


When you're finished, highlight **Done** and press **OK**.

The printer's screen is dark.

Press any button to wake your product from sleep mode.

Setup is unable to find my printer after connecting it with a USB cable.

Make sure it is securely connected as shown:

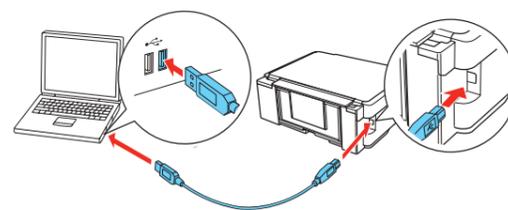

Any questions?

Quick Guide

Basic instructions for copying, printing, scanning, and troubleshooting (available only as PDF document at global.latin.epson.com).



User's Guide

Click the icon  on your desktop (or in the **HD/Applications/EPSON Software/Guide** folder in Mac OS X) to access the on-screen *User's Guide*. If you don't have a User's Guide icon, you can install it from the CD or go to the Epson website (see "EPSON technical support").



On-screen help with your software

Select **Help** or **?** when you're using your software.

Epson technical support

Visit global.latin.epson.com/Soporte to download drivers, view manuals, get FAQs, or e-mail Epson (website available in Spanish and Portuguese).

You may also speak with a support specialist by calling:

Argentina	(54 11) 5167-0300	Mexico	
Bolivia*	800-100-116	Mexico City	(52 55) 1323-2052
Chile	(56 2) 484-3400	Other cities	01-800-087-1080
Colombia	(57 1) 523-5000	Nicaragua*	00-1-800-226-0368
Costa Rica	800-377-6627	Panama*	00-800-052-1376
Dominican Republic*	1-888-760-0068	Peru	
Ecuador*	1-800-000-044	Lima	(51 1) 418-0210
El Salvador*	800-6570	Other cities	0800-10126
Guatemala*	1-800-835-0358	Uruguay	00040-5210067
Honduras**	800-0122	Venezuela	(58 212) 240-1111
	Code: 8320		

*Contact your local phone company to call this toll free number from a mobile phone.

**Dial first 7 digits, wait for a message, then enter code.

If your country does not appear on the list, contact your nearest Epson sales office. Toll or long distance charges may apply.

Need paper and ink?

Try EPSON specialty papers with DURABrite® Ultra Ink for professional results. For the right supplies at the right time, you can purchase them from an EPSON authorized reseller. To find the nearest one, contact Epson.

DESIGNED for EXCELLENCE™
EPSON printers, ink and specialty papers

Genuine EPSON paper

Epson offers a wide variety of papers to meet your needs; see the on-screen *User's Guide* for more information.

Photo Paper Glossy

Bright, instant-drying paper for great looking photos and projects. Available in different sizes, with or without margins.



Genuine EPSON inks

Look for the numbers below to find your cartridges. It's as easy as remembering your number!



XP-401 ink cartridges

Color	Standard-capacity	High-capacity
 Black	196	197
 Cyan	196	--
 Magenta	196	--
 Yellow	196	--

EPSON Connect™, AirPrint, and Google Cloud Print™

Print and share from anywhere. Use your smartphone or tablet to print photos or documents while on the go. Learn more at www.latin.epson.com/connect (website available only in Spanish and Portuguese).



EPSON and DURABrite are registered trademarks, EPSON Connect is a trademark, and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation. Designed for Excellence is a trademark of Epson America, Inc.

AirPrint is a trademark of Apple Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2012 Epson America, Inc. 5/12

CPD-36486

Printed in XXXXX