

Epson® SureColor®

S30675

S50675

S70675

User's Guide

EPSON®
EXCEED YOUR VISION

Copyrights and Trademarks

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation. The information contained herein is designed only for use with this Epson printer. Epson is not responsible for any use of this information as applied to other printers.

Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.

Seiko Epson Corporation shall not be liable for any damages or problems arising from the use of any options or any consumable products other than those designated as Original Epson Products or Epson Approved Products by Seiko Epson Corporation.

Seiko Epson Corporation shall not be held liable for any damage resulting from electromagnetic interference that occurs from the use of any interface cables other than those designated as Epson Approved Products by Seiko Epson Corporation.

EPSON and SureColor are registered trademarks, and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation. Epson Preferred is a service mark of Epson America, Inc.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2015 Epson America, Inc., 4/15

CPD-42714

Contents

Chapter 1 **Introduction**

Important Safety Instructions	7
Printer Parts	10
Front Section - S50675 and S70675	10
Front Section - S30675	13
Inside - S70675 and S50675	15
Inside - S30675	17
Back	18
LAN Port	19
Control Panel	20
Understanding the Display	22
Features	26
Realizing High Productivity	26
High Print Quality	27
Superior Ease of Use	27
Notes on Usage and Storage	29
Installation Space	29
Notes When Using the Printer	29
Notes When Not Using the Printer	31
Handling ink cartridges	32
Handling Media	33
Spot Color Inks	35
Using the Supplied Software	36
Contents of the Software CD	36
Starting Epson LFP Remote Panel 2	36
Exiting Epson LFP Remote Panel 2	37
Uninstalling Software	37

Chapter 2 **Basic Operations**

Loading and Exchanging Media	38
Notes on Loading Media	38
Positioning the Pressure Rollers and Media (S70675, S50675)	40
Loading Media - S70675/S50675	41
Loading Media - S30675	65
Viewing and Changing Media Settings	85
Replacing and Removing Media	87

Using the Auto Take-up Reel Unit	92
Removing the Take-up Roll (Using the Standard Take-up Reel).	107
Removing the Take-up Roll (Using the Optional Heavy Roll Auto Take-up Reel).	108
Before Printing	110
Media Settings	111
Basic Setting Flow	111
Precautions regarding settings	111
Saving Media Settings	112
Auto Media Adjust	113
Media Adjust	116
Changing Settings During Printing.	121
Printable area - S70675/S50675	123
Printable Area - S30675	126

Chapter 3 **Maintenance**

Cleaning Frequency	129
Replacing Consumables Frequency	130
Other Maintenance Frequency	131
Preparing for Cleaning	132
What You'll Need	132
Maintenance Precautions	134
Moving the Print Head	135
Using Ink Cleaner	136
Regular Cleaning	137
Cleaning Around the Print Head (Daily).	137
Cleaning Around the Caps (Daily)	142
Cleaning the Entire Wiper and Attachment Point (Daily)	152
Cleaning Inside the Printer (Daily)	155
Cleaning the Flushing Pad (Daily)	159
Cleaning the Sides of the Auto Take-up Reel Unit (Daily)	161
Regular Cleaning Check Sheet	162
Replacing Consumables	163
Replacing and Shaking Ink Cartridges.	163
Disposing of Waste Ink	166
Replacing the Wiper and Wiper Cleaner	168
Replacing the Flushing Pad	172
Replacing the Media Holding Plates	174
Disposal of Used Consumables.	179
Consumable Replacement Check Sheet.	180
Other Maintenance	181
Checking for Clogged Nozzles.	181
Head Cleaning	183
Head Washing	186

Ink Refresh	188
Long-Term Storage (Pre-Storage Maintenance)	189
Changing Color Mode (S70675 only)	191
Applying Secondary Carriage Rod Grease	194
Parts That Are Periodically Replaced	197

Chapter 4 Using the Control Panel Menu

Menu Operations	198
Menu List	198
Details of the Menu	203
The Media Setup Menu	203
The Printer Setup Menu	208
The Maintenance Menu	211
The Ink Level Menu	212
The Print Logs Menu	212
The Printer Status Menu	213
The Network Setup Menu	213
The Preference Menu	214
The Reset All Settings Menu	214

Chapter 5 Problem Solver

When a Message Is Displayed	215
When a Maintenance Call/Service Call Occurs	217
Troubleshooting	218
You Cannot Print (Because the Printer Does Not Work)	218
The Printer Sounds Like It Is Printing, But Nothing Prints	219
Prints Are Not What You Expected	220
Media Problems	229
Other Problems	232

Chapter 6 Appendix

Options and Consumable Products	234
Supported Media	235
Moving and Transporting the Printer	236
Moving the Printer	236
Transportation	238
Recommended Media Settings	238
Microwave (M/W) Setting and Banding Association Tables	239
System Requirements	241

Specifications.	242
Standards and Approvals.	244
FCC Compliance Statement	244

Appendix A **Where To Get Help**

Contacting Epson Support.	246
-----------------------------------	-----

Appendix B **Software License Terms**

Open Source Software Licenses	247
Bonjour.	247
Other Software Licenses	254
Info-ZIP copyright and license	254

Chapter 1

Introduction

Important Safety Instructions

Read all of these instructions before using the printer. Also be sure to follow all warnings and instructions marked on the printer.

When choosing a place for this product

- ☐ Place this product on a flat, stable surface that is larger than this product. This product will not operate properly if it is tilted or at an angle.
- ☐ Avoid places subject to rapid changes in temperature and humidity. Also keep it away from direct sunlight, strong light, or heat sources.
- ☐ Avoid places subject to shocks and vibrations.
- ☐ Keep this product away from dusty areas.
- ☐ Place this product near a wall outlet where the plug can be easily unplugged.

When setting up this product

- ☐ This product's power cord is for use with this product only. Use with other equipment may result in fire or electric shock.
- ☐ Connect all equipment to properly grounded power outlets. Avoid using outlets on the same circuit as copiers or air control systems that regularly switch on and off.
- ☐ Avoid electrical outlets controlled by wall switches or automatic timers.
- ☐ Keep the entire computer system away from potential sources of electromagnetic interference, such as loudspeakers or the base units of cordless telephones.
- ☐ Use only the type of power source indicated on the product's label.
- ☐ Use only the power cord that comes with this product. Use of another cord may result in fire or electric shock.
- ☐ Do not use a damaged or frayed power cord.

- ❑ If you use an extension cord with this product, make sure the total ampere rating of the devices plugged into the extension cord does not exceed the cord's ampere rating. Also, make sure the total ampere rating of all devices plugged into the wall outlet does not exceed the wall outlet's ampere rating.

- ❑ If you plan to use the printer in Germany, observe the following:

To provide adequate short-circuit protection and over-current protection for this printer, the building installation must be protected by a 10 or 16 amp circuit breaker.

- ❑ If damage occurs to the plug, replace the cord set or consult a qualified electrician. If there are fuses in the plug, make sure you replace them with fuses of the correct size and rating.

When using this product



- ❑ Do not block or cover the openings in this product's cabinet.
- ❑ Do not insert objects through the slots. Take care not to spill liquid on this product.
- ❑ Do not attempt to service this product yourself.
- ❑ Unplug this product and refer servicing to qualified service personnel under the following conditions: The power cord or plug is damaged; liquid has entered the product; the product has been dropped or the cabinet damaged; the product does not operate normally or exhibits a distinct change in performance.
- ❑ Do not move the print heads by hand; otherwise you may damage this product.
- ❑ Always turn the product off using the Power button on the control panel. When this button is pressed, the Power light flashes briefly then goes off. Do not unplug the power cord or turn off the product until the Power light stops flashing.
- ❑ This device has two power systems. There is a risk of electric shock unless the two power cables are unplugged during maintenance.
- ❑ The lithium batteries in the product contain Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

When handling the ink cartridges

- ❑ Keep ink cartridges out of the reach of children and do not drink.
- ❑ Do not touch the green IC chip on the side of the cartridge. This may affect normal operation and printing.

- ❑ The IC chip on this ink cartridge retains a variety of cartridge-related information, such as the ink cartridge status, so that the cartridge may be removed and reinserted freely.
- ❑ If you remove an ink cartridge for later use, protect the ink supply area from dirt and dust, and store it in the same environment as this product. Note that there is a valve in the ink supply port, making covers or plugs unnecessary, but care is needed to prevent the ink from staining items that the cartridge touches. Do not touch the ink supply port or surrounding area.

Warnings, Cautions, Important and Notes


 Warning:	Warnings must be followed to avoid serious bodily injury.
 Caution:	Cautions must be followed to avoid bodily injury.
Important:	Important must be followed to avoid damage to this product.
Note:	Notes contain useful or additional information on the operation of this product.

Illustrations

Unless otherwise noted, the illustrations show the S30675, but the instructions in this manual apply to all three models.

Printer Parts

Front Section - S50675 and S70675

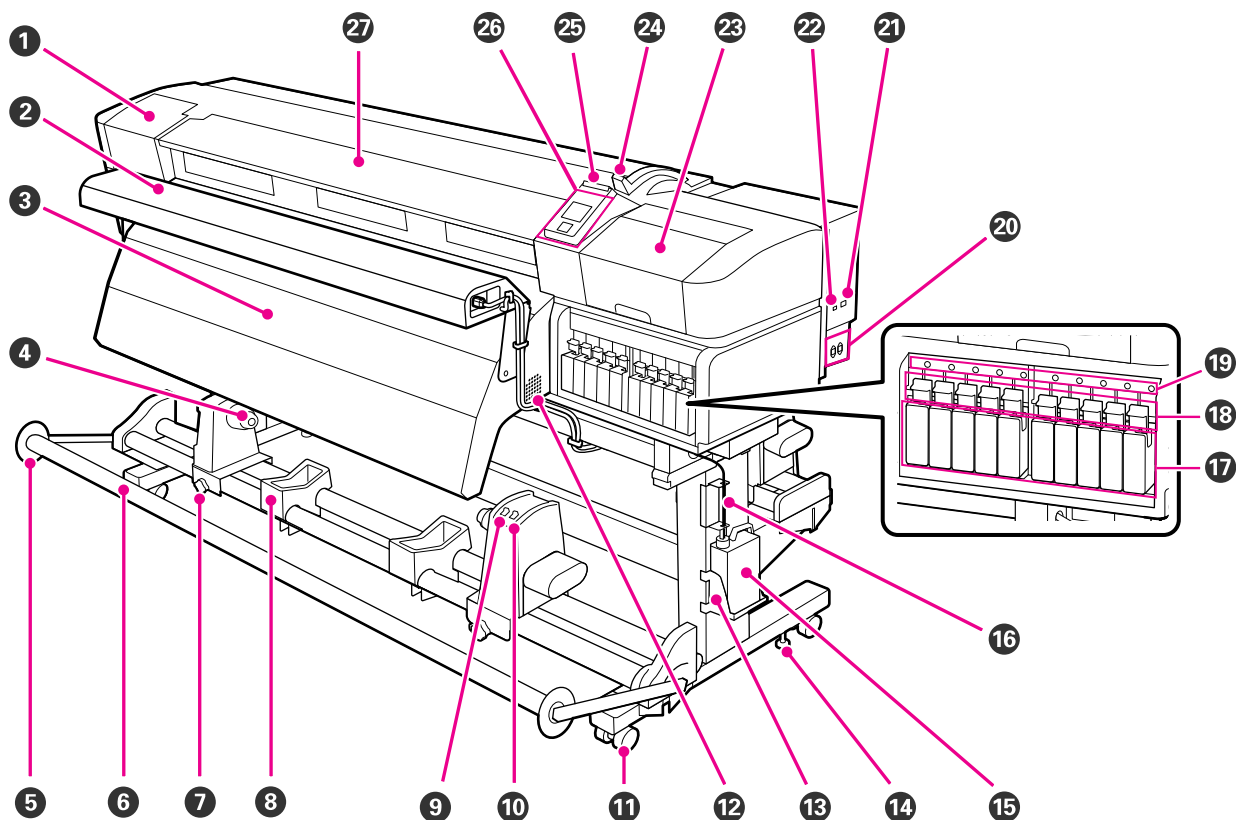

1 Maintenance cover (left)

Open this cover to clean the area around the print head. Normally closed when using the printer.

See "Cleaning Around the Print Head (Daily)" on page 137.

2 Additional print drying system

The additional print drying system can be used to rapidly dry ink after printing. Available separately for the S70675.

See the *Additional Print Drying System Setup Guide*.

3 After heater

The heater can be used to rapidly dry ink after printing.

See "Heating & Drying" on page 114.

4 Roll core holder

Place the roll core for media take-up on these holders. There are two holders: one on the left and one on the right.

See "Loading and Exchanging Media" on page 38.

5 Tensioner media guide

The tensioner media guide prevents the take-up roll from skewing when using the auto take-up reel unit. When not using the auto take-up reel unit, move the guide out of the way toward both edges of the tensioner.

See "Using the Auto Take-up Reel Unit" on page 92.


- 6 Tensioner**
The tensioner maintains tension to prevent the media sagging as it is taken up.
- 7 Roll core holder locking screw**
The locking screws keep the roll core holders in place once they have been attached to the roll core. There are two locking screws: one on the left and one on the right.
- 8 Roll support**
Rest media temporarily on these supports when removing the take-up roll. There are two supports: one on the left and one on the right.
- 9 Auto switch**
Use this switch to select the auto take-up direction. Choose Off to disable auto take-up.
- 10 Manual switch**
Use this switch to select the manual take-up direction. AutoThe selected option takes effect when the Auto switch is in the Off position.
- 11 Casters**
There are two casters on each leg. Once installation is complete, the front casters should be kept locked while the printer is in use.
- 12 Airflow vents**
These vents allow air to flow into the printer. Do not obstruct these vents.
- 13 Waste ink bottle holder**
Place the waste ink bottle in this holder.
- 14 Adjuster**
The adjusters keep the printer in place. After installing the printer, keep it securely in place during use.
- 15 Waste ink bottle**
Waste ink collects in this bottle.
Replace with a new waste ink bottle when the level approaches the line.
- 16 Waste ink tube**
Waste ink is discharged from this tube. Be sure the end of this tube is in the waste ink bottle while the printer is in use.
- 17 Ink cartridges**
Install all ink cartridges into each slot. Depending on the selected ColorMode, install the replacement cartridge or cleaning cartridge.
- 18 Lock levers**
Raise the levers to unlock the ink cartridges prior to removal. Lower the levers to lock the cartridges in place after insertion.
- 19 Cartridge check lamp**
This lamp lights when an ink cartridge error occurs.

On An error occurred. Check the contents of the error on the control panel's screen.

Off No error.
- 20 AC inlet #1/AC inlet #2**
Connects the power cable. Be sure to connect both cables.
- 21 LAN port**
See "LAN Port" on page 19.

- 22 USB port**
Connects the USB cable.
- 23 Maintenance cover (right)**
Open this cover when performing regular maintenance. Normally closed when using the printer.
See "Cleaning Frequency" on page 129.
- 24 Media loading lever**
After loading media, lower the media loading lever to keep the media in place. Raise the lever to release the media prior to removal.
- 25 Alert lamp**
This lamp lights or flashes when an error occurs.
- | | |
|-------------|---|
| On/Flashing | An error occurred; the type of error is indicated by how the lamp lights or flashes. Check the contents of the error on the control panel's screen. |
| Off | No error. |
- 26 Control panel**
See "Control Panel" on page 20.
- 27 Front cover**
Open when loading media, cleaning the inside of the printer, or removing jammed media. Normally closed when using the printer.

Front Section - S30675

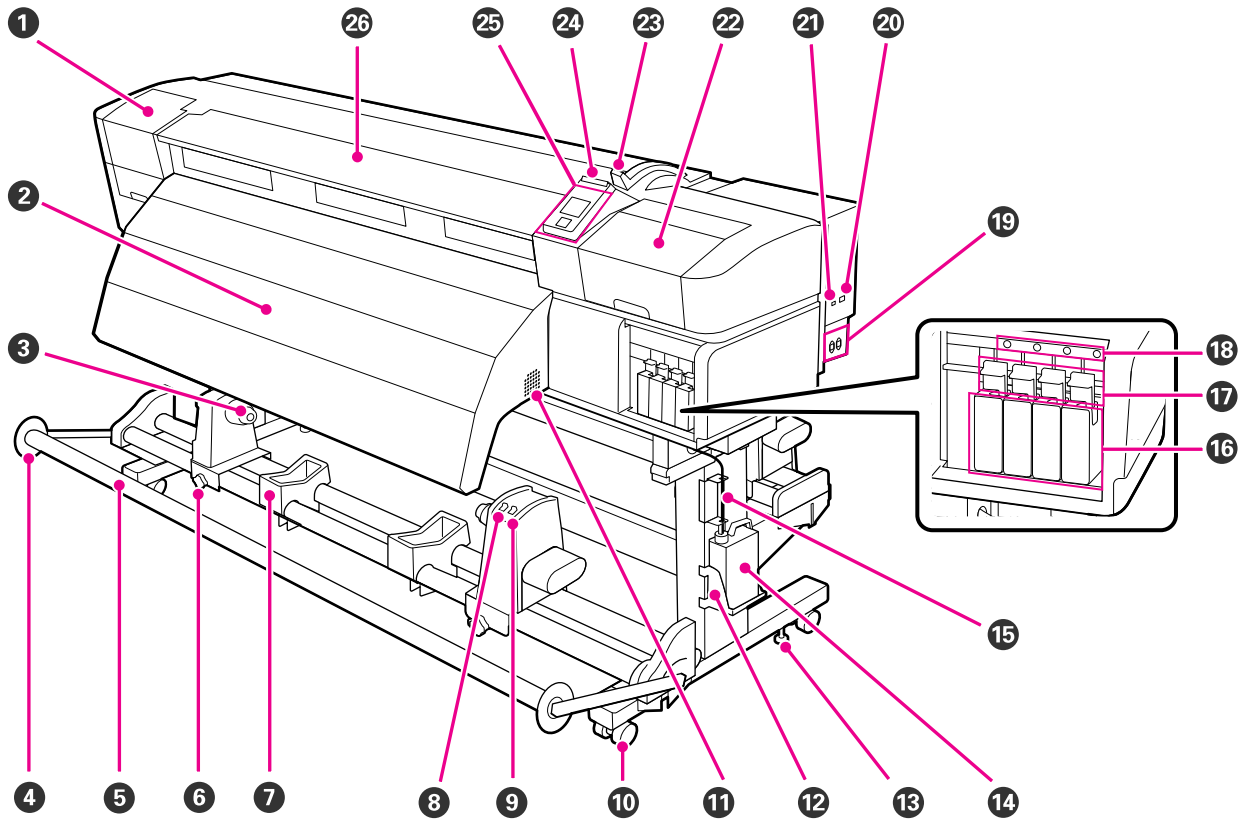

1 Maintenance cover (left)

Open this cover to clean the area around the print head. Normally closed when using the printer.

See "Cleaning Around the Print Head (Daily)" on page 137.

2 After heater

The heater can be used to rapidly dry ink after printing.

See "Heating & Drying" on page 114.

3 Roll core holder

Place the roll core for media take-up on these holders. There are two holders: one on the left and one on the right.

See "Loading and Exchanging Media" on page 38.

4 Tensioner media guide

The tensioner media guide prevents the take-up roll from skewing when using the auto take-up reel unit. When not using the auto take-up reel unit, move the guide out of the way toward both edges of the tensioner.

5 Tensioner

The tensioner maintains tension to prevent the media sagging as it is taken up. See "Using the Auto Take-up Reel Unit" on page 92.

6 Roll core holder locking screw

The locking screws keep the roll core holders in place once they have been attached to the roll core. There are two locking screws: one on the left and one on the right.

7 Roll support

Rest media temporarily on these supports when removing the take-up roll. There are two supports: one on the left and one on the right.

8 Auto switch

Use this switch to select the auto take-up direction. Choose **Off** to disable auto take-up.

9 Manual switch

Use this switch to select the manual take-up direction. The selected option takes effect when the Auto switch is in the **Off** position.

10 Casters

There are two casters on each leg. Once installation is complete, the front casters should be kept locked while the printer is in use.

11 Airflow vents

These vents allow air to flow into the printer. Do not obstruct these vents.

12 Waste ink bottle (tank) holder

Place the waste ink bottle in this holder.

13 Adjuster

The adjusters keep the printer in place. After installing the printer, keep it securely in place during use.

14 Waste ink bottle (tank)

Waste ink collects in this bottle.

Replace with a new waste ink bottle when the level approaches the line.

15 Waste ink tube

Waste ink is discharged from this tube. Be sure the end of this tube is in the waste ink bottle while the printer is in use.

16 Ink cartridges

Install all ink cartridges into each slot.

17 Lock levers

Raise the levers to unlock the ink cartridges prior to removal. Lower the levers to lock the cartridges in place after insertion.

18 Cartridge check lamp

This lamp lights when an ink cartridge error occurs.

On : An error occurred. Check the message on the control panel's screen.

Off : No error.

19 AC inlet #1/AC inlet #2

Connects the power cable. Be sure to connect both cables.

20 LAN port

Connects the LAN cable.

21 USB port

Connects the USB cable.

22 Maintenance cover (right)

Open this cover when performing regular maintenance. Normally closed when using the printer.

See "Cleaning Frequency" on page 129.

23 Media loading lever

After loading media, lower the media loading lever to keep the media in place. Raise the lever to release the media prior to removal.

24 Alert lamp

This lamp lights or flashes when an error occurs.

On/flashing : An error has occurred; the type of error is indicated by how the lamp lights or flashes. Check the message on the control panel's screen.

Off : No error.

25 Control panel


See "Control Panel" on page 20.

26 Front cover

Open when loading media, cleaning the inside of the printer, or removing jammed media. Normally closed when using the printer.

Inside - S70675 and S50675

Dirt on any of the following parts may reduce print quality. Regularly clean or exchange these parts as described in the chapters listed in the reference sections below. The illustration shows the S70675.

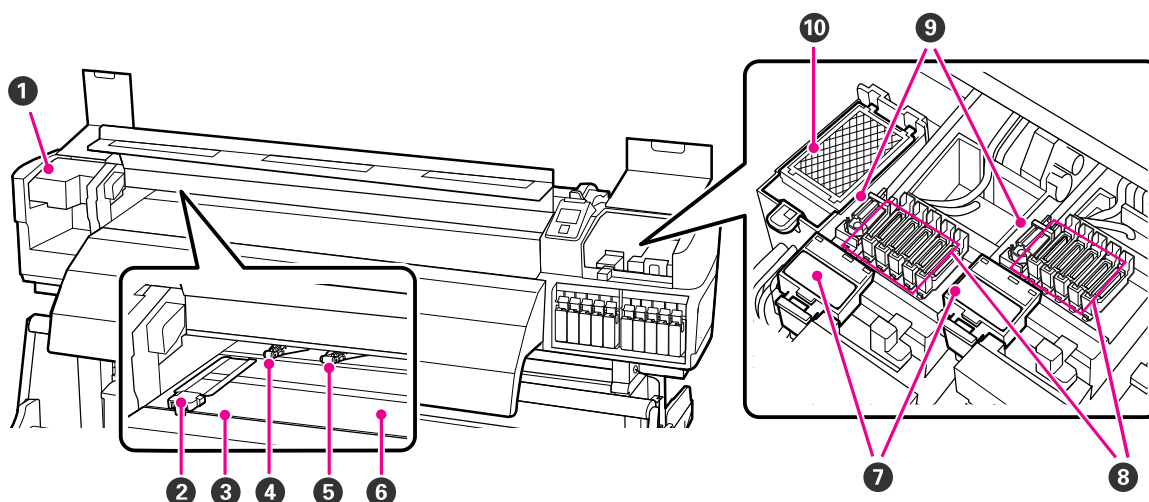

1 Print head

The print head prints by moving left and right while emitting ink. The print head on the left is Head 1, the print head on the right Head 2. We recommend that you clean the area around this unit at the end of each workday.

See "Cleaning Around the Print Head (Daily)" on page 137.

2 Media holding plate (edge guide)

The media holding plates prevent the media riding up and keep fibers on the cut edge of the media from touching the print head. Position the plates at either side of the media before printing.

See "Loading Media - S70675/S50675" on page 41 and "Loading Media - S30675" on page 65.

3 Cutter groove

Pass the blade of a cutter (not included) down this groove to cut media.

4 Pressure rollers (high)

There are ten rollers in total; the high pressure rollers are the two on the outside edges. They press down on the edges of the media when transparent or white film is used and during ink layering.

See "Positioning the Pressure Rollers and Media (S70675, S50675)" on page 40.

See "Cleaning Inside the Printer (Daily)" on page 155.

5 Pressure rollers (low)

There are ten rollers in total; all of which are low pressure rollers apart from the two on the outside edges. They press down on the media during normal printing (excluding transparent or white film and ink layering). The number used varies with the width of the media.

See "Positioning the Pressure Rollers and Media (S70675, S50675)" on page 40.

See "Cleaning Inside the Printer (Daily)" on page 155.

6 Platen heater

The platen heater ensures that the ink adheres evenly.

See "Heating & Drying" on page 114.

See "Cleaning Inside the Printer (Daily)" on page 155.

7 Wiper cleaner

The wiper cleaner removes ink from the wiper. It is included in the maintenance kit and needs to be replaced about once every three months.

See "Replacing the Wiper and Wiper Cleaner" on page 168.

8 Caps

Except during printing, these caps cover the print head nozzles to prevent them drying out. We recommend that this unit be cleaned at the end of each workday.

See "Regular Cleaning" on page 137.

9 Wiper

The wiper removes ink from the print head nozzles. We recommend that this unit be cleaned once a week. It is included in the maintenance kit and needs to be replaced about once every three months.

See "Regular Cleaning" on page 137.

See "Replacing the Wiper and Wiper Cleaner" on page 168.


10 Flushing pad

Ink is discharged onto this pad during flushing. It is included in the maintenance kit and needs to be replaced about once every three months.

See "Replacing the Flushing Pad" on page 172.

Inside - S30675

Dirt on any of the following parts may reduce print quality. Regularly clean or exchange these parts as described in the chapters listed in the reference sections below.

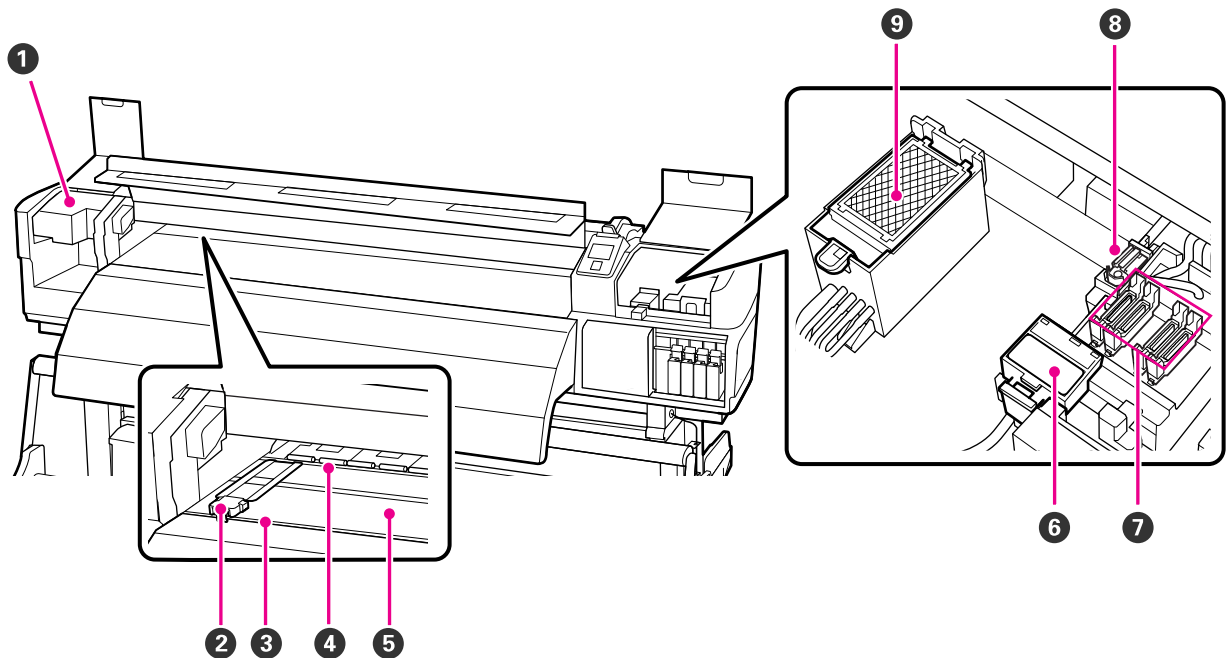

1 Print head

The print head prints by moving left and right while emitting ink. We recommend that you clean the area around this unit at the end of each workday. Make sure the print head is at the far left side of the printer before cleaning.

See "Cleaning Around the Print Head (Daily)" on page 137.

2 Media holding plate (edge guide)

The media holding plates prevent the media riding up and keeps fibers on the cut edge of the media from touching the print head. Position the plates at either side of the media before printing.

See "Loading Media - S30675" on page 65.

3 Cutter groove

Pass the blade of a cutter (not included) down this groove to cut media.

4 Pressure rollers

These rollers press down on the media during printing.

See "Cleaning Inside the Printer (Daily)" on page 155.

5 Platen heater

The platen heater ensures that the ink adheres evenly.

See "Heating & Drying" on page 114.

See "Cleaning Inside the Printer (Daily)" on page 155.

6 Wiper cleaner

The wiper cleaner removes ink from the wiper. It is included in the maintenance kit and needs to be replaced about once every three months (or more often, depending on usage).

See "Cleaning the wiper cleaner and wiper rail (daily)" on page 148.

7 Caps

Except during printing, these caps cover the print head nozzles to prevent them from drying out. We recommend that the caps be cleaned at the end of each workday.

See "Regular Cleaning" on page 137.

8 Wiper

The wiper removes ink from the print head nozzles. We recommend that this unit be cleaned at the end of each workday. It is included in the maintenance kit and needs to be replaced about once every three months (or more often, depending on usage).

See "Regular Cleaning" on page 137.


See "Cleaning the wiper cleaner and wiper rail (daily)" on page 148.

9 Flushing pad

Ink is discharged onto this pad during flushing. It is included in the maintenance kit and needs to be replaced about once every three months (or more often, depending on usage).

See "Replacing the Flushing Pad" on page 172.

Back

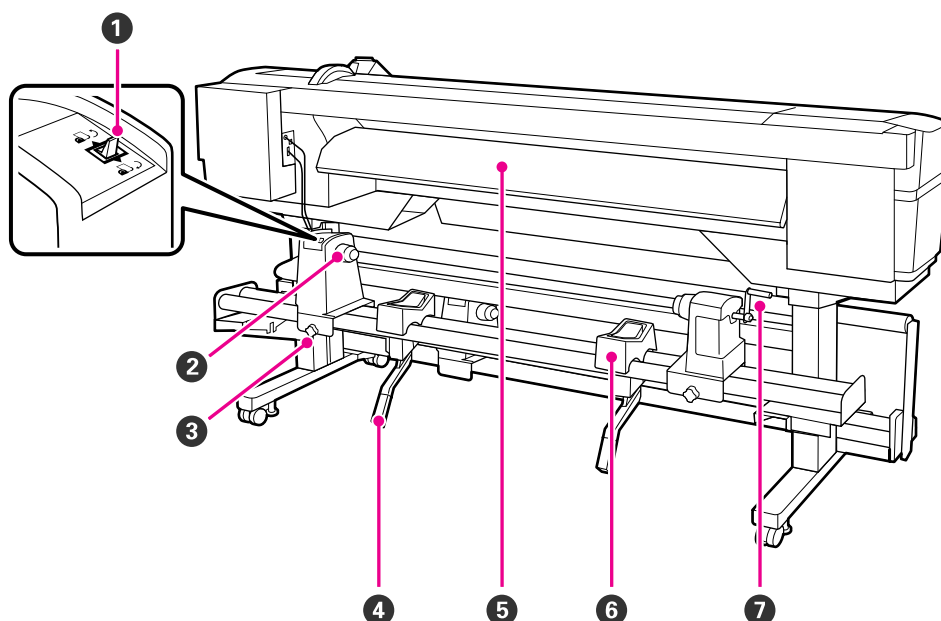

1 Drive switch

The drive switch is used to feed the media during loading and to rewind the media for replacement.

2 Roll holder

Place media on these holders. There are two holders: one on the left and one on the right.

3 Roll holder fixing screw

These screws fix the roll holders in place once the media has been installed. There are two screws: one on the left and one on the right.

4 Epson LiftAssist lever

If the media to be mounted on the roll holders seems heavy, use these levers to raise the media effortlessly to the level of the roll holders. There are two LiftAssist levers: one on the left and one on the right.

5 Pre-heater

Heats the media before printing so that the print area is not subject to sudden changes in temperature.


6 Roll support

Rest media on these supports before placing it on the roll holders. There are two supports: one on the left and one on the right.

7 Handle

After placing media on the right roll holder, rotate the handle to press the holder and apply pressure to the roll core.

LAN Port

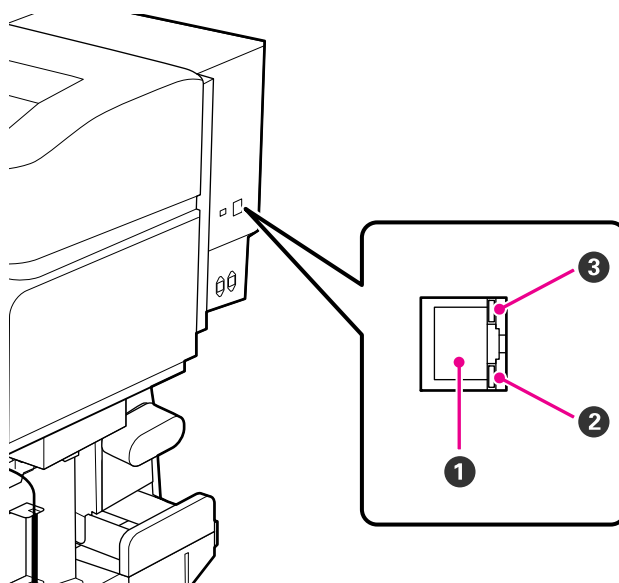

1 RJ-45 connector

Connects the LAN cable. Use a shielded twisted pair cable (category 5 or higher).

2 Data lamp

The data lamp shows connection status and indicates whether the printer is receiving data.


3 Status lamp (green/red)

The status lamp indicates network connection speed.

Data lamp	Status lamp (green/red)	Status
On	On (green)	The printer is connected using a 1000base-T connection.
Flashing		The printer is receiving data over a 1000base-T connection.

Data lamp	Status lamp (green/red)	Status
On	On (red)	The printer is connected using a 100base-TX connection.
Flashing		The printer is receiving data over a 100base-TX connection.

Control Panel

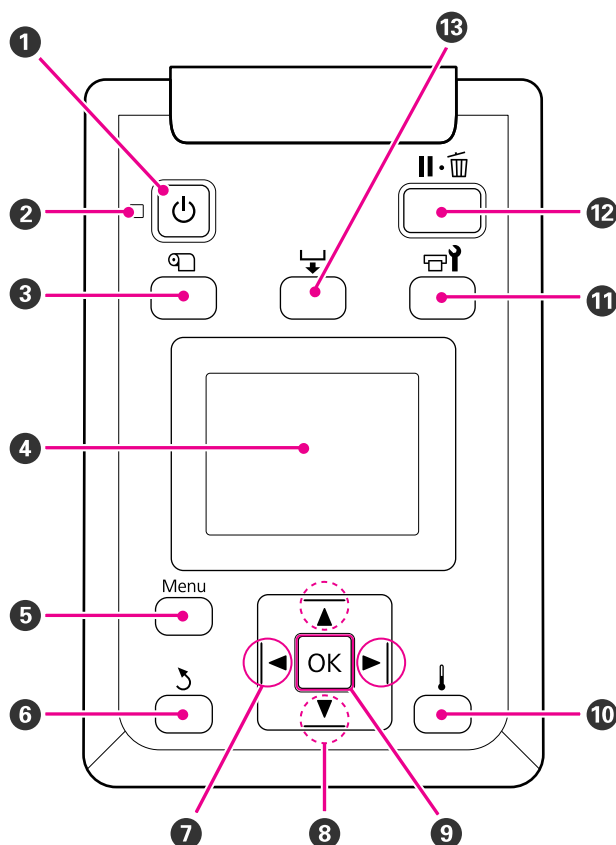

1 button (power button)

Turns the power on and off.

2 light (power light)

The printer's operational status is indicated by a lit or flashing light.

On : The power is on.

Flashing : The printer is receiving data or performing head cleaning or other operations during shut-down.

Off : The power is off.

3 button (media setup button)

Press this button to display the Media Setup menu, which contains such items as **Media Remaining**, **Select Media**, **Customize Settings**, and **Print Media List**. This button is disabled during printing.

See “The Media Setup Menu” on page 203.

4 **Display**

Displays the printer's status, menus, error messages, and so on. See “Understanding the Display” on page 22.

5 **Menu button**

Press this button to display menus. See “Using the Control Panel Menu” on page 198.





6 button (back button)


Press this button to exit to the previous menu when options are displayed. See “Menu Operations” on page 198.


7 buttons (left and right arrow buttons)


Use to position the cursor when performing such tasks as entering a **Setting Name** or **IP Address** in the setup menu.

8 buttons (media feed buttons)

When the media loading lever is in a lowered position and the  button is pressed, media is fed. If the  button is pressed, media is rewound. This occurs regardless of the way the loaded media is rolled. Press and hold the  button while at an adjustment, check pattern, or media feed screen to feed the media the maximum length (103 cm [40.6 in]) into the printer. Keep the  button pressed to rewind the media up to 25 cm (9.8 in.).

Note that when the  button is used to rewind, the media will stop when its edge reaches the starting print position. Rewind can be resumed by releasing the button and then pressing it again.

When the media loading lever in a raised position, the button to rewind media depends on how the loaded media is rolled.
Printable Side Out: Press the  button.

Printable Side In: Press the  button.

Keep the button pressed to rewind the media up to 25 cm (9.8 in.).

When the menus are displayed, these buttons can be used to select menu items and options. See “Menu Operations” on page 198.

9 **OK button**

Pressing this button when a menu item is highlighted displays options for the selected item.

Pressing this button when an option is highlighted selects the highlighted item or performs the selected operation.

When an alarm sounds, press the button to turn off the alarm.

10 button (heating and drying button)

Pressing this button displays the Heating & Drying menu, where you can adjust the **Heater Temperature**. If the optional additional print drying system is attached, you can also adjust **Additional Dryer** settings. These options can be adjusted during printing.


See "Heating & Drying" on page 114.

11 button (maintenance button)

Pressing this button displays the Maintenance menu, which contains such items as **Nozzle Check, Cleaning, Head Washing, Head Maintenance**, and **Waste Ink Counter**. This button is disabled during printing.

See "The Maintenance Menu" on page 211.

12 button (pause/cancel button)

The printer enters pause status if this is pressed while printing. To release the pause status, press the  button again, or select **Pause Cancel** on the screen and then press the OK button. To cancel print jobs being processed, select **Job Cancel** on the screen and then press the OK button.

Pressing this button when menus are displayed closes the menus and returns the printer to ready status.


13 button (media feed button)

When the printer is in the ready state, you can feed the media to the cut position by pressing this button and then OK. See "Cutting media" on page 88.

When printing is in progress, you can use this button to adjust media feed. See "Feed Adjustment" on page 117.

Understanding the Display

The following illustration shows the display for the S50675.

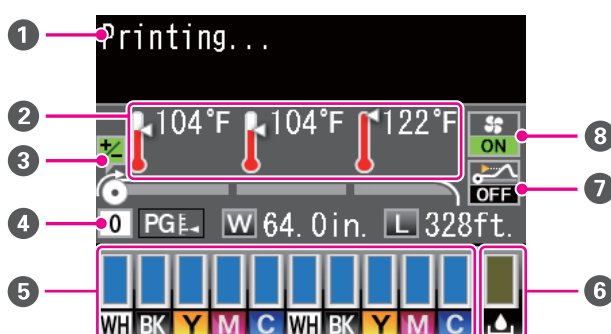



1 Messages

Displays the printer's status, operation, and error messages. See "When a Message Is Displayed" on page 215.

2 Heater temperature

From left to right, this display shows the temperature settings for the pre-heater, platen heater, and after heater. The thermometer icons give a rough indication of the current temperatures of the heaters.

 : The heater has reached the selected temperature.

 : The heater has not reached the selected temperature.

3 Feed adjustment information during printing

This information is displayed when the adjustment value is specified during printing.


See "Feed Adjustment" on page 117.


4 Media info


From left to right, this display shows the selected media, platen gap, media width, and media remaining.

If a media setting bank number created with this printer is selected as the print media, the number (from 1 to 30) will be displayed. When **RIP Settings** is selected, 0 will be displayed.

The selected platen gap is shown as follows:

 : 1.5

 : 2.0


 : 2.5

The media remaining is not displayed if **Off** is selected for **Remaining Setup** in the **Media Remaining** menu.
See "The Media Setup Menu" on page 203.

5 Ink cartridge status


Displays the approximate level of remaining ink and the current status. When ink runs low or an error occurs, the display changes as shown below:

Normal Warning or error

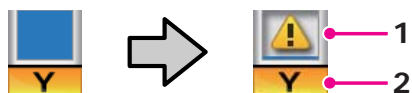

1 Status indicators

The ink cartridge status is indicated as follows:

 : Ready to print. The height of the indicator changes with the level of ink remaining.



: Ink is low. You need to prepare a new ink cartridge.



: The level of ink remaining has reached the limit; replace with a new cartridge. When using spot color inks, replace the ink cartridge promptly. If the old cartridge is not replaced, the print head or other parts may be damaged.



: The ink cartridge is not locked. Lower the lock lever to engage the lock.



: No ink cartridge is inserted. Insert the ink cartridge and lower the lock lever to engage the lock.



: An error occurred. Check the message on the screen, and clear the error.



: A cleaning cartridge is installed. The height of the indicator shows the amount of cleaning liquid remaining in the cartridge in three levels.

Note:

*You can also check the level of ink remaining using the **Ink Level** option in the menus. See “The Ink Level Menu” on page 212.*

2 Ink color codes

BK : Black

Y : Yellow

M : Magenta

C : Cyan

MS Metallic Silver

LK Light Black

OR+ Orange Plus

LC Light Cyan

LM Light Magenta

WH White

6 Waste ink bottle status

Displays the approximate amount of space available in the waste ink bottle. The display changes as shown below when the waste ink bottle is nearly full or an error occurs .

Normal



Warning or error



Status indicators

The status of the waste ink bottle is shown as follows:



: No error. The indicator changes to show the amount of space available.



: The waste ink bottle is almost full. Ready a new waste ink bottle.



: The waste ink bottle is full. Replace with a new waste ink bottle.

7 Media rise detection status

This is displayed by the S50675 only.



: The printer checks whether the media rises during printing.



: The printer does not check whether the media rises during printing.

See the “The Maintenance Menu” on page 211.

8 Additional print drying system status (system included with the S50675 and optional for other models)

This display shows settings for the optional additional print drying system.

No icon : Not installed, or it is not installed correctly.



: The drying fan is enabled.



: The drying fan is not enabled. To start the fan, select **Additional Dryer** for **On** in the setup menu.

See “Heating & Drying” on page 114.

Features

This wide-format color ink jet printer supports roll media up to 1626 mm (64 inches) in width. The main features of this printer are described below.

Realizing High Productivity

Triple heaters

The three heaters listed below support improved productivity and print quality.

The pre-heater: Warms media before printing to protect the print area from sudden changes in temperature.

The platen heater: Ensures that the ink adheres evenly.

The after heater: Can be used to rapidly dry ink after printing.

Media feeding unit accommodates high-capacity rolls

The standard media feeding unit can handle high-capacity rolls with external diameters of up to 250 mm (9.8 inches) and weights of up to 40 kg (88.2 lb), ensuring that media require less frequent replacement.

With the optional heavy roll media system, the printer can handle even larger 80 kg (176.4 lb) rolls with external diameters of 300 mm (11.8 inches).

Auto take-up reel unit comes standard

The auto take-up reel unit automatically takes up printed media cleanly, with no wrinkles. You'll find it comes in handy for banner printing, high-volume print jobs, and continuous overnight printing.

High-capacity ink cartridges

The printer uses high-capacity, 700 ml ink cartridges (white cartridges 600 ml, metallic silver cartridges 350 ml) to ensure productivity, reducing the need for frequent ink cartridge replacement.

High-speed printing

The S50675 is equipped with two heads for faster printing. High speeds are supported by using two cartridges for each color of ink.

High speed dryer available

The high speed dryer (included with the S50675; optional with other models) can be used for increased drying performance and improved productivity. It is recommended when using the S70675 in 10 color mode, as the white and metallic silver inks are slow to dry.

High Print Quality

Smooth tone gradations, high-fidelity color reproduction

The S70675 is equipped for light-colored inks (light black, light cyan and light magenta), reducing grain for continuous tone gradation, while the use of orange ink increases the color gamut for high-fidelity color reproduction. It is capable of print quality of a level sufficient for car wraps and indoor display advertising that can be inspected at close range.

Support for white and metallic silver inks

A variety of print effects are available when using the S70675 with white and metallic silver inks or the S50675 with white ink. The white ink is high opacity, making it suitable for masking on transparent media (window graphics). Other inks can be printed over white or metallic silver inks (ink layering), preventing color inks showing through and allowing for a variety of metallic colors.

When using spot color inks, see “Spot Color Inks” on page 35.

Superior Ease of Use

Easy media installation and take up

The roll and roll core holders require no spindles, eliminating the need to attach spindles before installing media. Just bring the media to the printer and install it directly. Never having to juggle long spindles makes installing media a snap even where space is limited.

In addition to roll supports that give you a place to rest media during installation, the printer offers lift levers that allow heavy media to be effortlessly raised to the level of the roll holders.

Virtually odorless solvent ink

The distinctive odor of solvent-based inks has been reduced with our solvent inks. This not only improves the work environment during printing but ensures that items intended for indoor display can be exhibited in any venue.

Media rise detection

The S50675 is equipped with a system for detecting media rise during printing. If the media rises during printing, printing will stop to prevent the media coming into contact with the print head. Stopping printing avoids printing errors and prevents waste of ink and media.

Ease of maintenance

Print quality can only be ensured through daily maintenance, and the design of this printer leaves plenty of space for maintenance.

E-Mail error/warning notification

The EpsonNet Config with Web Browser system built into the printer's network interface offers e-mail notification. Once configured for e-mail notification, the printer will send errors and warnings to selected e-mail addresses, ensuring peace of mind when the printer is left unmanned during overnight operation and in other similar situations.

Lamp and alarm error alerts

When an error occurs, a alarm will sound and the alert lamp will light. The large alert lamp is highly visible, even at a distance.

A alarm sounds simultaneously to prevent time wasted while stoppages due to errors go unnoticed.

High-speed USB/Gigabit Ethernet

The printer comes equipped with high-speed USB and 100 Base-TX/1000 Base-T network interfaces.


Notes on Usage and Storage

In this document, white and metallic silver ink are called “spot color ink.”

Installation Space

Make sure that you secure the following space, clear of any other objects, so that paper ejection and consumable replacement are not obstructed.

For the external dimensions of the printer, see “Specifications” on page 242.

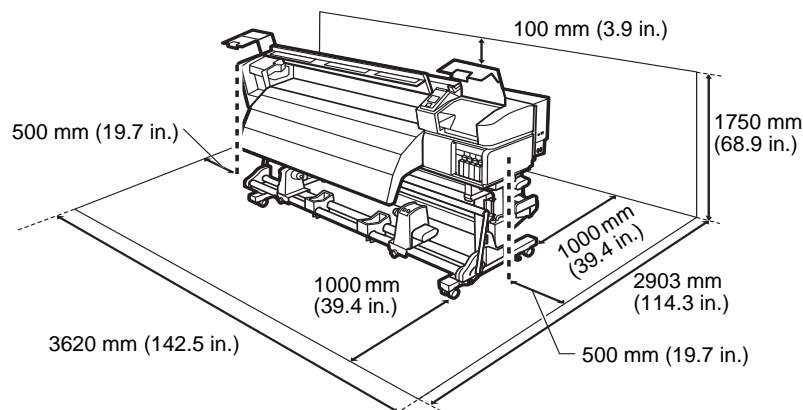

Notes When Using the Printer

Note the following points when using this printer to avoid breakdowns, malfunctions, and print quality decline.

Additional precautions are required for white and metallic silver inks. See “Spot Color Inks” on page 35.

- ❑ When using the printer, observe the operating temperature and humidity range described in the “Specifications” on page 242.

Note, however, that the desired results may not be achieved if the temperature and humidity are within the limits for the printer but not within those for the media. Be sure the operating conditions suit the media. For more information, see the documentation supplied with the media.

Also, when operating in dry areas, air conditioned environment, or under direct sunlight, maintain the appropriate humidity.

- ❑ Avoid using the printer in locations with heat sources or locations that are exposed to direct drafts from ventilators or air conditioners. The print head nozzles could dry out and clog.
- ❑ Do not bend or tug the waste ink tube. Ink could spill inside or around the printer.
- ❑ Maintenance such as cleaning and replacement must be performed according to usage frequency or at recommended intervals. Failure to perform regular maintenance could result in loss of print quality. In the absence of the appropriate maintenance, continued use could damage the print head.

See “Cleaning Frequency” on page 129.

- ❑ The print head may not be capped (the print head may not return to the right side) if the printer is turned off when the media is jammed or an error has occurred. Capping is a function for automatically covering the print head with a cap (lid) to prevent the print head from drying out. In this case, turn on the power and wait until capping is performed automatically.
- ❑ When the power is on, do not remove the power plug or cut the power at the breaker. The print head may not be capped properly. In this case, turn on the power and wait until capping is performed automatically.
- ❑ The print head is automatically cleaned at a fixed interval after printing to keep the nozzle from clogging.

Be sure that the waste ink bottle is installed whenever the printer is on.

- ❑ As well as being expended during printing, ink is used during head cleaning and other maintenance required to keep the print head in working order.

Notes When Not Using the Printer

If you are not using it, note the following points when storing the printer. If it is not stored correctly, you may not be able to print properly the next time it is used.

Additional precautions are required for white and metallic silver inks. See “Spot Color Inks” on page 35.

- ❑ If the printer will not be used for an extended period (and switched off), use cleaning cartridges (available separately) and perform Pre-Storage Maintenance. Leaving the heads unwashed causes permanent clogs. See “Long-Term Storage (Pre-Storage Maintenance)” on page 189 for more information.
- ❑ If you do not print for a long time and do not perform pre-storage maintenance, turn the printer on at least once every seven days.

If you do not print for a long time, the print head nozzles may become clogged. Head cleaning will be performed automatically after the printer is turned on and started. Head cleaning prevents clogged print heads and maintains print quality. Do not turn the printer off until cleaning is complete.

- ❑ If you have not used the printer for a long time, check the print head for clogging before you start printing. Perform head cleaning if the print head is clogged. See “Checking for Clogged Nozzles” on page 181.
- ❑ The pressure rollers may crease media left in the printer. The media may also become wavy or curled, causing jams or resulting in the media coming into contact with the print head. Remove the media before putting the printer in storage.
- ❑ Store the printer after confirming that the print head has been capped (the print head is positioned at the far right). If the print head is left uncapped for a long time, the print quality may decline.

Note:

If the print head is not capped, turn the printer on, and then turn it off.

- ❑ Close all covers before placing the printer in storage. If you are not using the printer for a long time, put an anti-static cloth or cover on the printer to prevent dust build-up. The print head nozzles are very small, and they can become clogged easily if fine dust gets on the print head, and you may not be able to print properly.
- ❑ When storing the printer, be sure that it is level; do not store it on an angle, on end, or upside down.


Handling ink cartridges

Note the following points when handling ink cartridges to maintain good print quality.

Additional precautions are required for white and metallic silver inks. See “Spot Color Inks” on page 35.

- ☐ Extra ink is required to fully charge the print head nozzles the first time the printer is used; replacement cartridges will be needed earlier than usual.
- ☐ Store ink cartridges at room temperature in a location that is not exposed to direct sunlight.
- ☐ Store ink cleaner at room temperature out of direct sunlight.
- ☐ To ensure print quality, use all the ink in the cartridge before the earlier of the following dates:
 - ☐ The expiration date shown on the ink cartridge packaging
 - ☐ Six months after opening the ink cartridge package
- ☐ If you move ink cartridges from a cold place to a warm place, leave it at room temperature for more than four hours before using the ink cartridge.
- ☐ Do not touch the ink cartridge IC chip. You may not be able to print properly.
- ☐ In 8 Color (Fixed) mode or 4C Mode, use replacement cartridges to fill all slots with cartridges. In 8 Color (Unfixed) mode or 9 Color mode, use cleaning cartridges to fill all slots with cartridges. You cannot print if any of the slots are empty.
- ☐ Do not leave the printer without ink cartridges installed. The ink in the printer will dry out and the printer will not function as expected. Leave ink cartridges or replacement cartridges in all slots even while you are not using the printer.
- ☐ Because the green IC chip contains the cartridge's own information such as the remaining ink level, you can still reinstall and use the ink cartridge after removing it from the printer.

- ❑ Use a cleaning stick from the supplied maintenance kit to wipe ink from the ink supply port of cartridges that have been removed from the printer before all the ink is used. Dried ink on the supply port may cause ink leaks when the cartridge is reinserted and used.

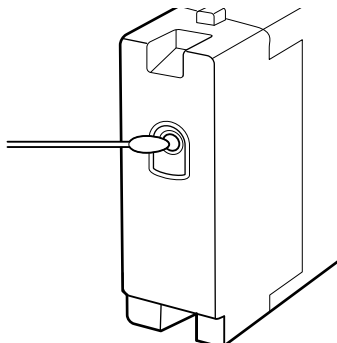

While cartridges are in storage, keep the ink supply ports free of dust. The ink supply port has a valve in it so it does not need to be capped.

- ❑ Removed ink cartridges may have ink around the ink supply port, so be careful not to get any ink on the surrounding area when removing the cartridges.
- ❑ To maintain the quality of the print head, this printer stops printing before ink cartridges are completely expended.
- ❑ Although the ink cartridges may contain recycled materials, this does not affect printer function or performance.
- ❑ Do not dismantle or remodel ink cartridges. You may not be able to print properly.
- ❑ Do not drop or knock cartridges against hard objects; otherwise, the ink may leak.
- ❑ With the exception of spot color inks, ink cartridges must be removed and shaken thoroughly once every three weeks.

See “Replacing and Shaking Ink Cartridges” on page 163.

- ❑ Do not insert or remove replacement cartridges during printing.

Handling Media

Note the following when handling or storing media. Media that is in poor condition will not produce good quality prints.

Be sure to read the documentation provided with each type of media.

Notes on handling media

- ☐ Do not fold the media or damage the printable surface.
- ☐ Do not touch the printable surface. Moisture and oils from your hands can affect print quality.
- ☐ When handling media, hold it by both edges. We recommend wearing cotton gloves.
- ☐ Keep the media dry.
- ☐ Packaging materials can be used to store media and should not be thrown away.
- ☐ Avoid locations that are subject to direct sunlight, excessive heat, or humidity.
- ☐ When not in use, media should be removed from the printer, rewound, and inserted in its original packaging for storage. Leaving media in the printer for extended periods may cause it to deteriorate.

Handling media after printing


To maintain long lasting, high quality print results, note the following points.

- ☐ Do not rub or scratch the printed surface. If it is rubbed or scratched, the ink may peel off.
- ☐ Do not touch the printed surface, as this may remove the ink.
- ☐ Make sure printouts are completely dry before folding or stacking, as otherwise discoloration or other marks may appear where the prints touch. These marks will disappear if the prints are immediately separated and dried but will become permanent if the surfaces are not separated.
- ☐ Avoid direct sunlight.
- ☐ To prevent discoloration, display and store prints as instructed in the documentation supplied with the media.

Spot Color Inks

Spot color inks may be sedimented (components settling to the bottom of the liquid) due to ink characteristics. Sedimentation triggers tint unevenness in printing results or clogged nozzles.

Before using spot color inks, take note of the following cautions.

- ❑ The printer provides a function (auto ink circulation) that automatically circulates inks in the print head or tube at periodic intervals to prevent inks from being sedimented.
 - ❑ When using this function, we recommend that you do not turn the printer off. If the power is turned off, auto ink circulation is not performed at the appropriate times. This causes irresolvable sedimentation, which results in damage. When not using the printer for a long period of time, see “Long-Term Storage (Pre-Storage Maintenance)” on page 189.
 - ❑ To cancel auto ink circulation, press the  button while **Circulating ink...** is being displayed on the control panel screen. However, it cannot be canceled while ink circulation is required. If auto ink circulation is canceled to make prints using spot color inks, tint unevenness may occur in printing results. To avoid cancellation of the auto ink circulation process, we recommend that you perform **Ink Circulation** before starting printing. See “The Maintenance Menu” on page 211.
- ❑ Spot color ink cartridges must be removed and thoroughly shaken once every 24 hours. See “Shaking cartridges” on page 163.
- ❑ Spot color ink cartridges must be stored flat (laid on their sides). If the cartridges are stored vertically, even shaking the cartridges before use may fail to dissolve the materials that have sedimented in the ink during storage.
- ❑ When tint unevenness is detected in printing results, perform **Ink Refresh** from the menu on the control panel. See “Ink Refresh” on page 188.
- ❑ Note the following when using ink layering.
 - ❑ Use media at least 2% longer than specified in document size settings.
 - ❑ Note that the auto take-up reel unit may not function as expected, causing a decline in print quality.
 - ❑ Some media do not support ink layering. For details, refer to the documentation supplied with the media or contact the manufacturer.

Using the Supplied Software

Contents of the Software CD

The following applications are available on the supplied software CD. Install as required.

For information about these applications, see the on-line help for the application in question.

Note:

- ☐ *The supplied disk does not contain printer drivers. A software RIP is required for printing.*
- ☐ *The latest applications can be downloaded from the Epson website.*

Software Name	Summary
Epson LFP Remote Panel 2	Epson LFP Remote Panel 2 is used to update firmware from a computer and copy the media settings bank created in the printer's setup menu to a computer. See "Starting Epson LFP Remote Panel 2" on page 36 and "Exiting Epson LFP Remote Panel 2" on page 37.
Epson Drivers and utilities	Install the Epson communications driver. The Epson communications driver is required if the Epson LFP Remote Panel 2 is to be used to copy media settings. It is not a printer driver. In addition, the software RIP may not display printer status if the Epson communications driver is not installed when the printer is connected to a computer via USB. See the software RIP documentation for more information on the status display.
Epson Network utility	Install and launch a wizard that will help you enter IP addresses for a simple network connection.
EpsonNet Config	With this software, you can configure various network settings for the printer from your computer. This is useful as it allows you to enter addresses and names using the keyboard.

Starting Epson LFP Remote Panel 2

Launch Epson LFP Remote Panel 2 after confirming that the printer displays **Ready**.

1. The application can be launched using either of the following two methods.

- ☐ Double-click the **Epson LFP Remote Panel 2** icon on the desktop. The **Epson LFP Remote Panel 2** icon is created when the application is installed.
- ☐ Click **Start > All Programs (or Programs) > Epson LFP Remote Panel 2 > Epson LFP Remote Panel 2**.

2. Click the desired item in the Epson LFP Remote Panel 2 main window.

See Epson LFP Remote Panel 2 help for more information.

Exiting Epson LFP Remote Panel 2

Click **Finish** in the Epson LFP Remote Panel 2 main window.

Uninstalling Software

Important:

- ☐ Log in to an “Computer administrator” account (an account with Administrators group privileges).
- ☐ Enter the administrator password when prompted and then proceed with the remainder of the operation.
- ☐ Exit any other applications that may be running.

This section describes how to uninstall Epson LFP Remote Panel 2 and the Epson communications driver.

1. Turn off the printer, and unplug the interface cable.
2. Go to the **Control Panel** and click **Uninstall a program** from the **Programs** category.

In Windows XP, go to the **Control Panel** and click **Add or Remove Programs**.

3. Select the software you want to remove and then click **Uninstall/Change** (or **Change/Remove**).

Selecting the following deletes the Epson communications drivers:

- ☐ Epson SC-S70675 Series Comm Driver Printer Uninstall
- ☐ Epson SC-S50675 Series Comm Driver Printer Uninstall
- ☐ Epson SC-S30675 Series Comm Driver Printer Uninstall

To uninstall Epson LFP Remote Panel 2, select **Epson LFP Remote Panel 2**.

4. Select the target printer icon, and then click **OK**.
5. Follow the on-screen instructions to continue. When the delete confirmation message appears, click **Yes**.

If you are reinstalling the Epson communications driver, restart the computer.

Chapter 2

Basic Operations

Loading and Exchanging Media

The process for loading media varies with the model of printer or type of media feeding unit used. Choose the method suited to your particular setup.

Using the S70675 or S50675

Positioning of the pressure rollers depends on the printing type or media width. The media loading process varies based on the positioning of the pressure rollers. Therefore, check the positioning of the pressure rollers in advance.

See “Positioning the Pressure Rollers and Media (S70675, S50675)” on page 40 and “Loading Media - S70675/S50675” on page 41.

Using the S30675

See “Loading Media - S30675” on page 65.

Notes on Loading Media

Whenever you attempt to load the media, check the following cautions beforehand.

For information on the media that can be used in the printer, see “Supported Media” on page 235.



Caution:

- ❑ *The heaters and media holding plates may be hot; observe all necessary precautions. Failure to observe the necessary precautions could result in burns.*
- ❑ *Be careful not to trap your hands or fingers when opening or closing the front cover. Failure to observe this precaution could result in injury.*
- ❑ *Do not rub your hands along the edges of the media. The edges of the media are sharp and can cause injury.*
- ❑ *Because the media is heavy it should not be carried by one person.*

Load media just before printing.

The pressure rollers may crease media left in the printer. The media may also become wavy or curled, causing jams or resulting in the media coming into contact with the print head.

Observe the following points when handling media:


If the following points are not observed when handling media, small amounts of dust and lint may stick to the media surface and cause ink drops in the print results.

- ☐ Do not place exposed media directly on the floor.

Media should be rewound and inserted in its original packaging for storage.


- ☐ Do not carry media with the media surface pressed against clothing.

Handle media in its individual packaging until just before loading the media in the printer.

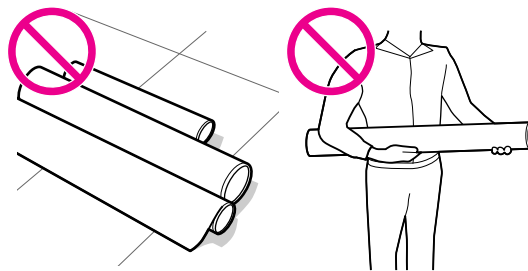

Do not load media if its right and left edges are uneven.

If the right and left edges of the roll are uneven, media feeding problems may cause the media to move around during printing. Either rewind to align the edges or use a roll without any issues.

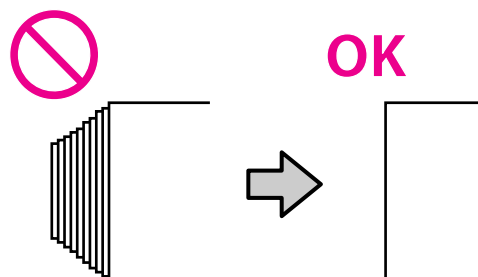

Positioning the Pressure Rollers and Media (S70675, S50675)


Pressure rollers must be set in the correct position to obtain good print results.

Positioning of media

There are square holes to indicate the pressure roller positions on the rear side of the printer.

Observe the following cautions when positioning media to ensure that the positioning of pressure rollers is appropriate for the media width.


- ☐ Ensure that the left edge of the media always passes within the range of **1**.
- ☐ The right edge of the media must pass within the squares of **2** through **8** according to the media width.

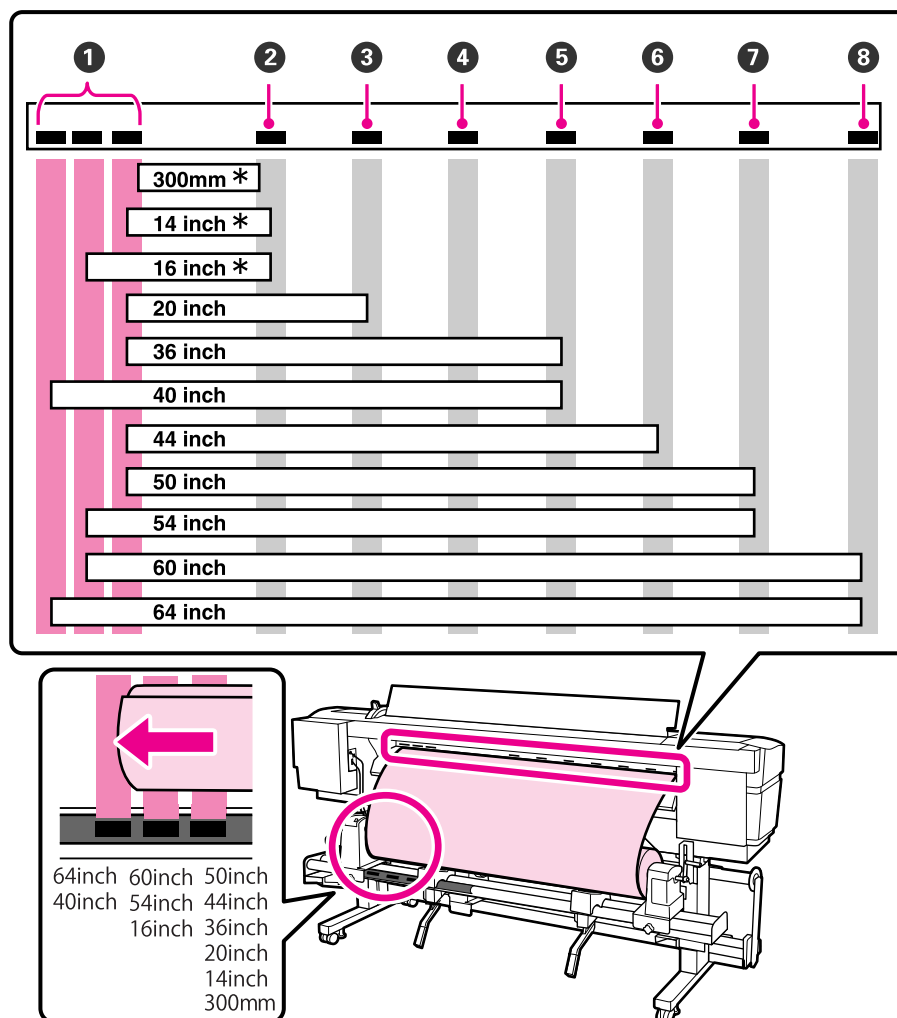

* Transparent film, white film, and ink layering are not supported for these widths.

Pressure roller types

There are two types of pressure rollers. As shown below, the pressure roller to use depends on the type of printing.

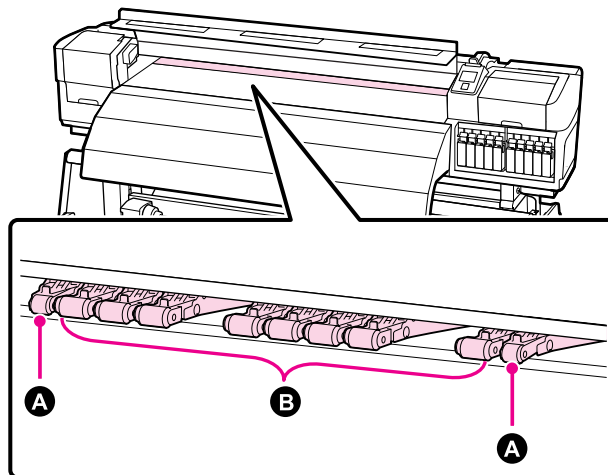

- ☐ For normal printing, use low pressure rollers **B**. Note that the quantity of rollers to use depends on the media width.
- ☐ When transparent or white film is loaded or during ink layering, use high pressure rollers **A**.

Note:

- ☐ When loading transparent or white film, low pressure rollers may leave traces in the print area.
- ☐ During ink layering, the use of low pressure rollers will interfere with the ink layering process.

Loading Media - S70675/S50675

Follow the steps below when using the supplied media feeding unit.

When the Heavy Roll Media Feeding Unit is installed, see “Using the optional heavy roll media feeding unit” on page 53.

Using the standard media feeding unit

This section uses the S70675 to illustrate the process of loading media when the supplied media feeding unit is installed.

Before loading media, be sure to read “Notes on Loading Media” on page 38.

1. Turn on the printer and wait until **Load media** appears on the screen.

Important:


When spot color inks are installed, circulation will be performed automatically to prevent ink accumulating in the printer and causing clogs when the printer is not in use. Because turning the printer off prevents automatic circulation from being performed, leading to printer malfunction, we recommend that the printer not be turned off.

2. Open the front cover and move the media holding plates out of the way.

Important:


If the media holding plates are not moved out of the way, media insertion may fail or damage may occur to the edge of the media.

Hold the tabs on the media holding plates and move the plates to the right and left sides of the platen.

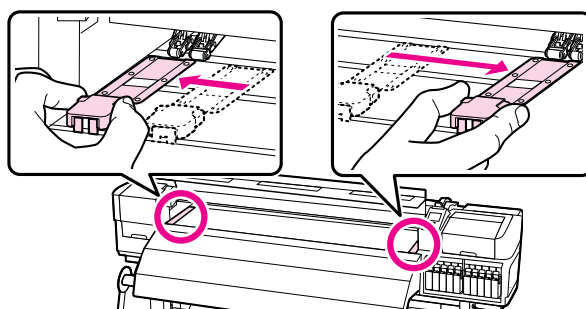


3. Loosen the roll holder fixing screws sufficiently and adjust the roll holders so that the gap between the two is wider than the media.

Center the roll supports between the roll holders.

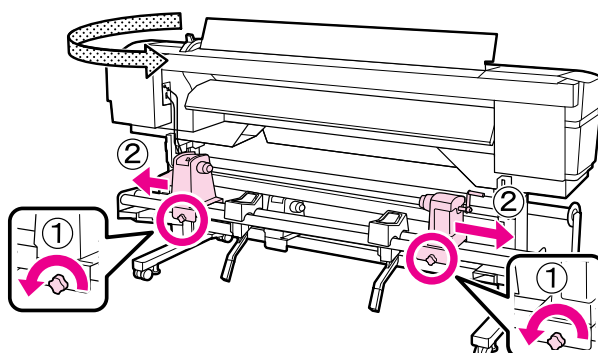


Important:

If the right holder handle shaft is not visible, rotate the holder forward until it stops. The media can not be properly loaded if the handle shaft is not visible.

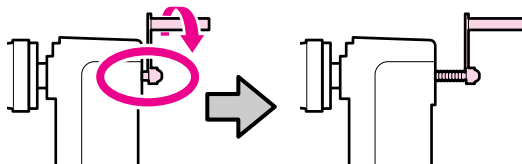


4. Place media on the roll support oriented according to how it is rolled (see below).

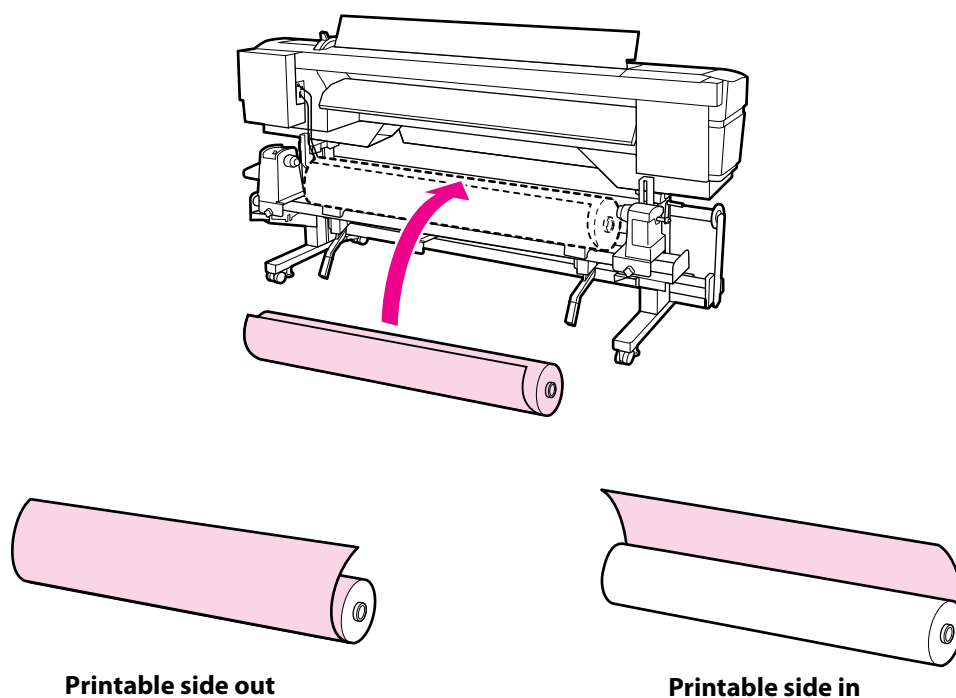

5. Align the left and right edges of the media with the set positions according to the media width.


See “Positioning the Pressure Rollers and Media (S70675, S50675)” on page 40.

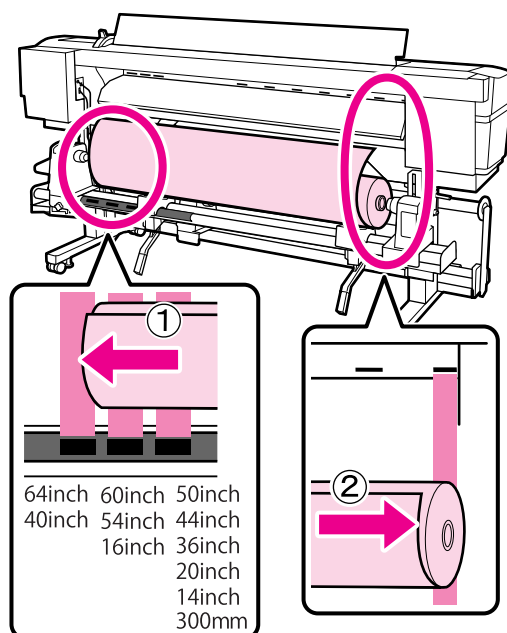

Note:


If the label with black squares is not in place, affix the label as described in the Setup Guide.

6. Raise the lift lever on the left side of the printer to lift the media into position, then firmly insert the roll holder.

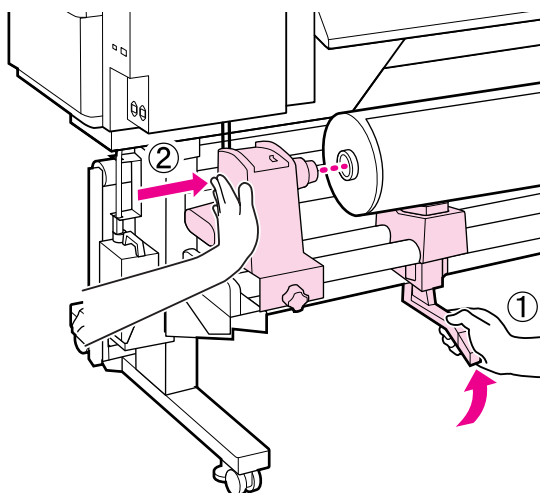


If the roll has an outer diameter of less than 140 mm (5.5 inches), lift it manually and place it on the roll holder. The roll core will not reach the holder when raised using the lift lever.

7. Tighten the roll holder screw until the screw no longer turns to fix the roll holder in place.

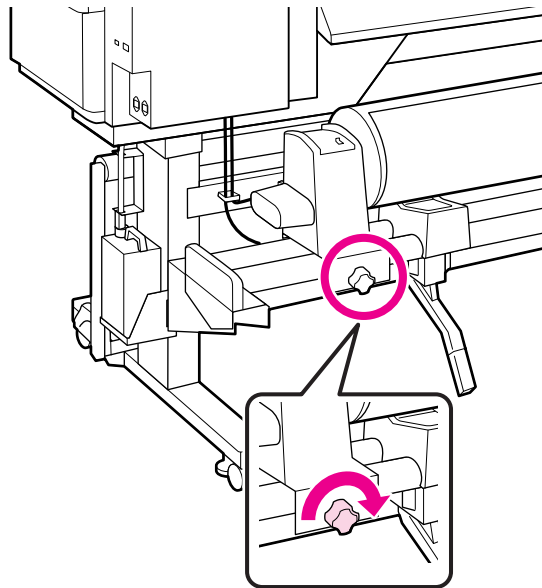


8. Raise the lift lever on the right side of the printer to lift the media into position, then firmly insert the roll holder.

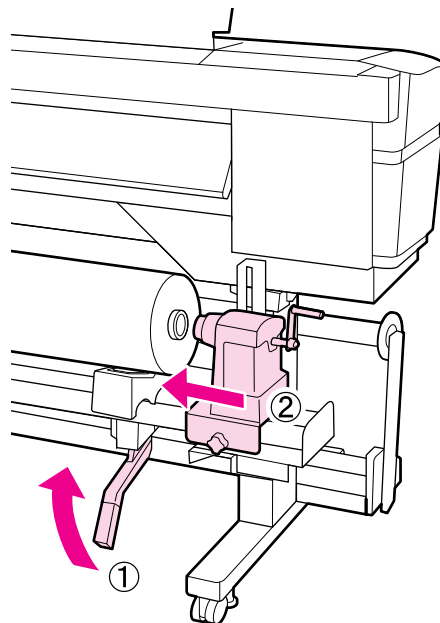

If the roll has an outer diameter of less than 140 mm (5.5 inches), lift it manually and place it on the roll holder.


9. To ensure the roll holder is inserted into the roll core sufficiently, push the center section on the side of the roll holder toward the roll end twice.

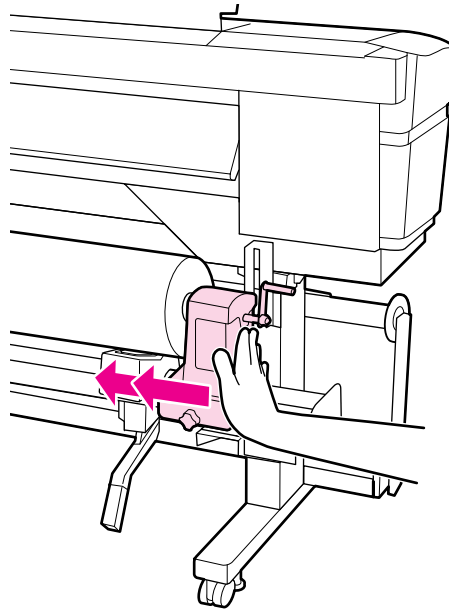

Important:

If the roll holder is inserted into the roll core insufficiently, media will not be fed correctly during printing because of slippage between the roll holder and roll core. This may cause banding in the print results.


10. Tighten the roll holder screw until it no longer turns to fix the roll holder in place.

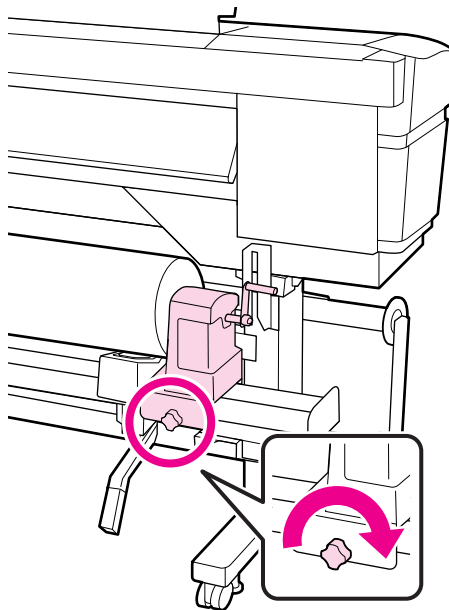

Important:

If the roll holder screw is loose, the roll holder may move during printing. This could cause stripes and unevenness in the print results.

11. Rotate the handle until part A in the illustration below is fully inserted.

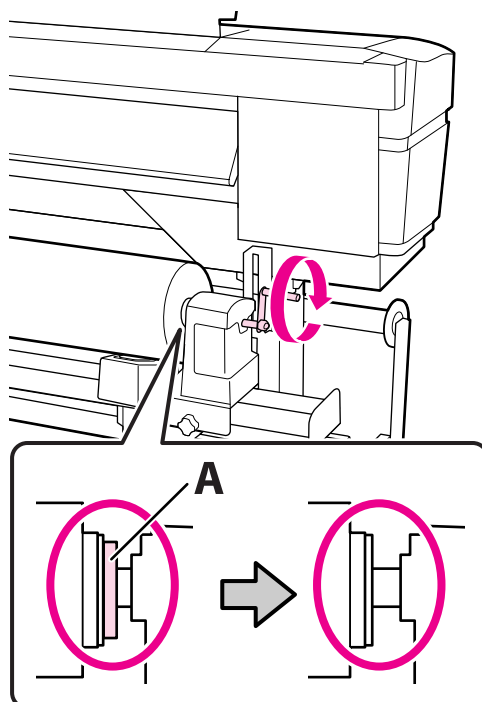


Important:


Once part A is hidden, do not turn the handle any further. Failure to observe this precaution could damage the roll holder.

If part A is still visible even after the handle has been turned fully, rewind the handle. Loosen the roll holder screw on the right side, and then restart from Step 9.

12. Raise the media loading lever.

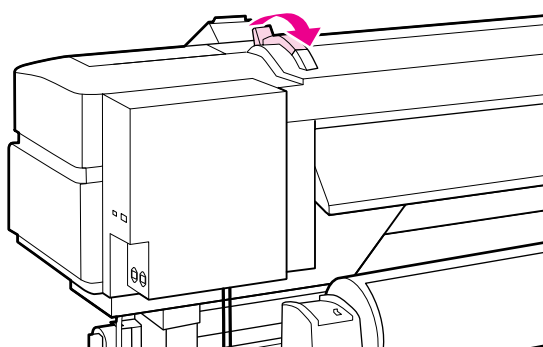


13. Insert the media approximately 30 cm (12 inches) into the opening, then lower the media loading lever.

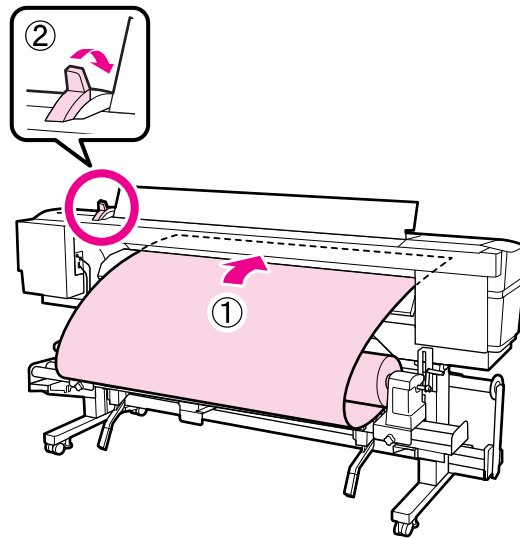

14. Check that the edges of the media pass within the dimensions of the square that was adjusted in step 5.


Example of media with a width of 64 inches:

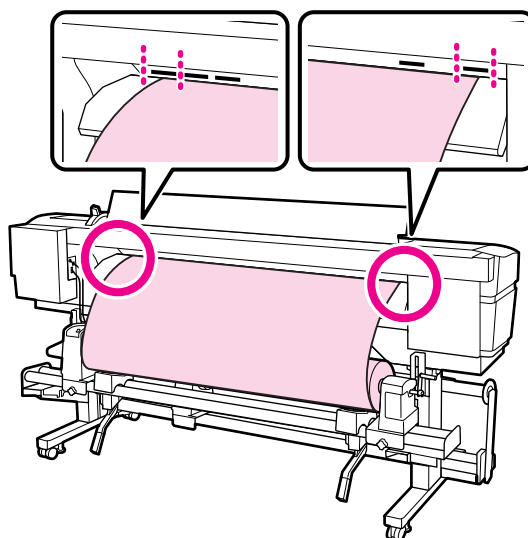


Important:

Perform steps 13 to 5 in reverse order and repeat the loading process if the edges of the media are not within the square holes. Do not attempt to reposition the roll holders while they are inserted in the media.


15. Hold the center of the media and raise the media loading lever.

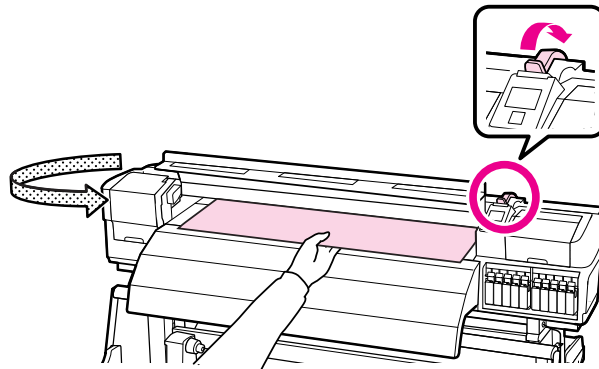

16. Pull the media straight to the center of the after heater.

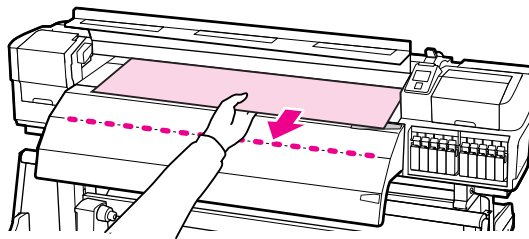


- ☐ Do not pull the media with both hands. This could cause the media to skew or move around.
- ☐ The labels on the after heater are not used when media is loaded. If it is adjusted too forcefully, the media may move around or become loose.

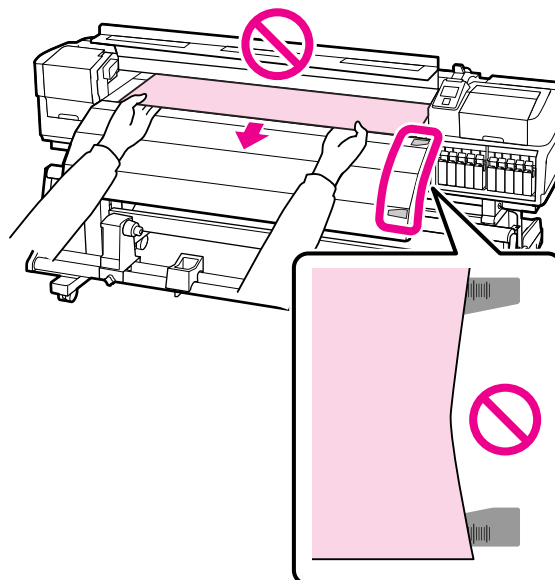


17. Hold both sides of the pressure roller and move it while pressing it down.

Note:


To avoid getting grease on your skin, do not touch the shaft (gray part in the figure) at the top of the roller.

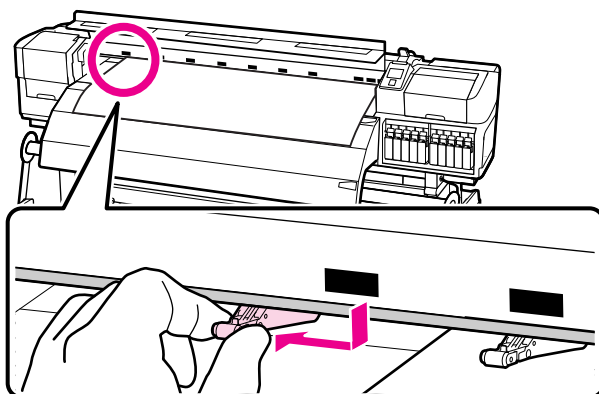**Normal printing**


- ☐ Use low pressure rollers. Move the high pressure rollers right or left until they contact the ends.
- ☐ We recommend setting the low pressure rollers within 5 mm (0.20 inch) of the edges.
- ☐ Position the remaining low pressure rollers within the black square labels. There may be extra low pressure rollers depending on the media width. Position the extra low pressure rollers away from the black square labels.

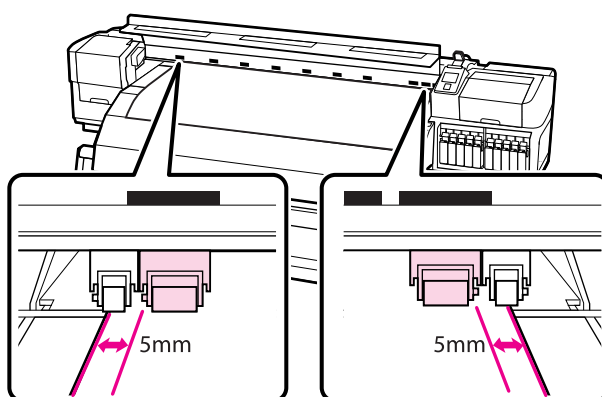**When transparent or white film is loaded or during ink layering**

- ☐ Use high pressure rollers only.
- ☐ We recommend positioning the rollers within 10 mm (0.39 inch) from the left and right edges of the media.
- ☐ Position the low pressure rollers away from the black square labels.

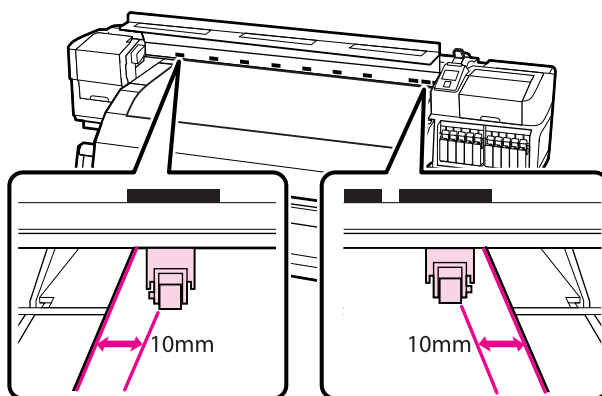


18. When the media loading lever is lowered, the pressure rollers set at the black square labels secure the media.

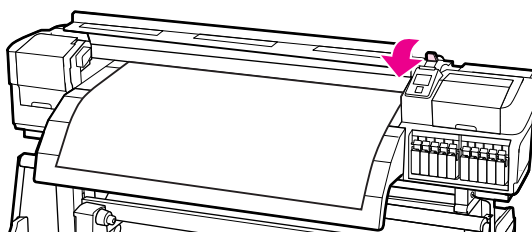

19. Position the media holding plates at both sides of the media.


While holding the tabs on both sides, move the plates to the edges of the media. Adjust so that both edges of the media are aligned to the center of the row of round holes in the plates.

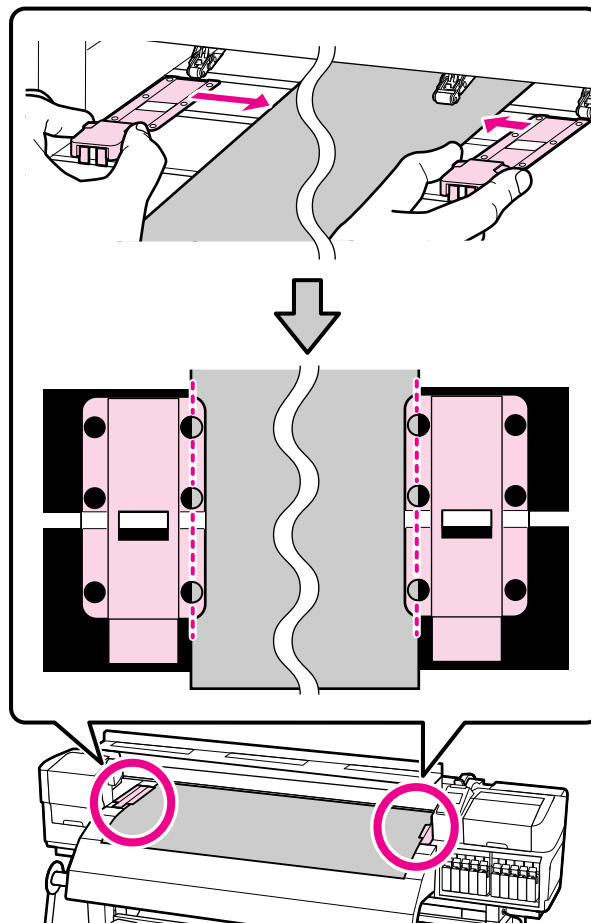

Important:

- ❑ Do not use the media holding plates with media that is more than 0.4 mm (0.02 inch) thick. The media holding plates could touch and damage the print head.
- ❑ Always position the plates so that the edges of the media are at the centers of the round holes. Incorrect positioning causes banding (horizontal lines, tint unevenness, or stripes).
- ❑ Move the media holding plates to the left and right edges of the platen when they are not in use.
- ❑ Do not use the media holding plates if the sides of the printed media are smudged or torn.

20. Close the front cover.

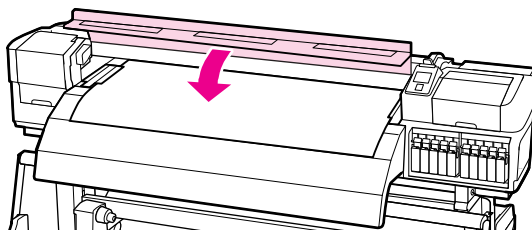

When using the auto take-up reel, see “Using the Auto Take-up Reel Unit” on page 92.

When not using the auto take-up reel, proceed to check the media and change settings. See “Viewing and Changing Media Settings” on page 85.

Using the optional heavy roll media feeding unit

This section uses the S70675 to illustrate how to load media when the optional heavy roll media feeding unit is installed.



Caution:

Because the media is heavy, it should not be carried by one person. When loading or removing the media, use at least two persons. Using a lifter is recommended when handling a media that is 40 kg (88.3 lb) or heavier.

The explanation that follows assumes that a lifter is used.

The following types of lifter can be used:

- ☐ Fork or platform thickness: 28 mm (1.10 inches) or less
- ☐ The fork or platform can be lowered to approximately 190 mm (7.5 inches) from the floor.

Before loading, be sure to read “Notes on Loading Media” on page 38.

1. Turn on the printer and wait until **Load media** appears on the screen.

Important:


When spot color inks are installed, circulation will be performed automatically to prevent ink accumulating in the printer and causing clogs when the printer is not in use. Because turning the printer off prevents automatic circulation from being performed, leading to printer malfunction, we recommend that the printer not be turned off.

2. Open the front cover and move the media holding plates out of the way.


Important:

If the media holding plates are not moved out of the way, media insertion may fail or damage may occur to the edge of the media.

Hold the tabs on the media holding plates and move the plates to the right and left sides of the platen.

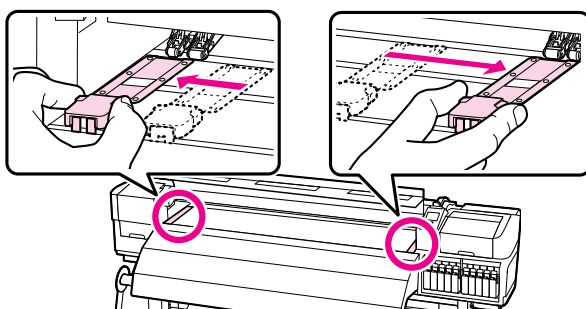


3. Loosen the left and right roll holder fixing screws sufficiently and separate the roll holders so that the gap between the two is wider than the media.

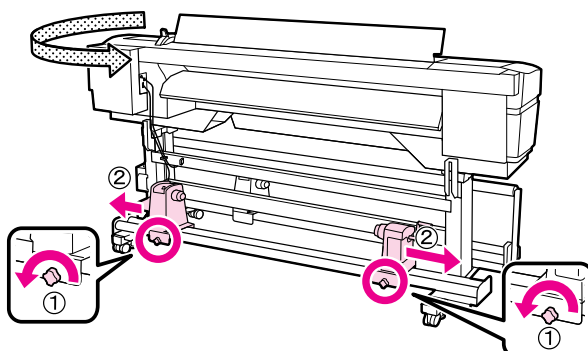


Important:


If the right holder handle shaft is not visible, rotate the holder forward until it stops. The media can not be properly loaded if the handle shaft is not visible.

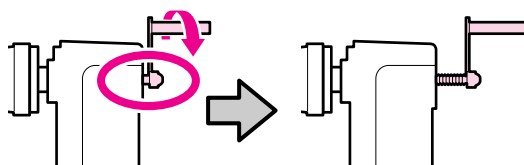

4. Temporarily place media on the lifter oriented according to how it is rolled (see below)

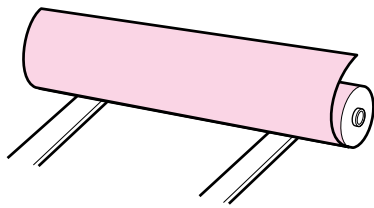


Printable side out

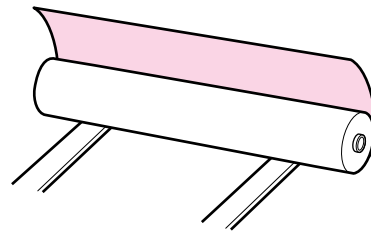

Printable side in

5. Align the left and right edges of the media with the set positions according to the media. See “Positioning the Pressure Rollers and Media (S70675, S50675)” on page 40.

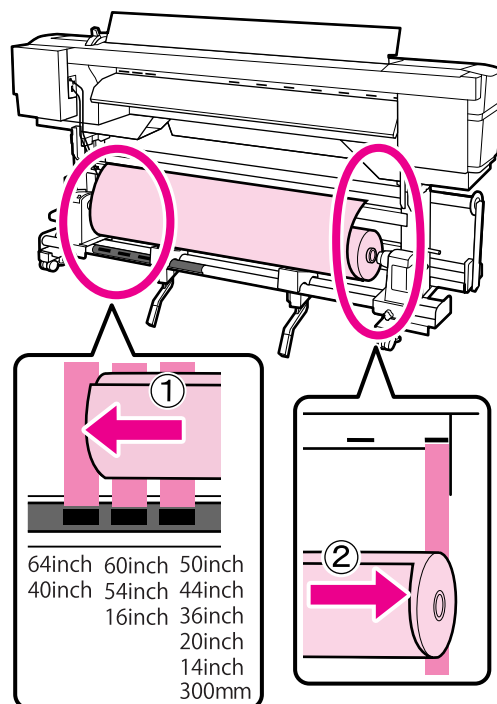


Note:


If the label with black squares is not in place, affix the label as described in the Setup Guide.

6. Align the media and the roll holders.


Raise or lower the lifter until the media roll core is level with the roll holders.

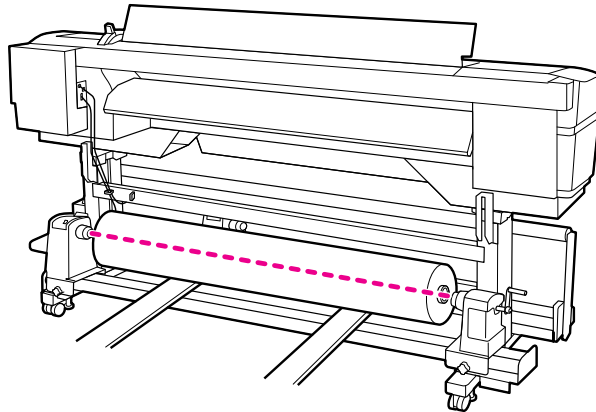


7. Fully insert the left roll holder. Next, tighten the roll holder screw until the screw no longer turns to fix the roll holder in place.

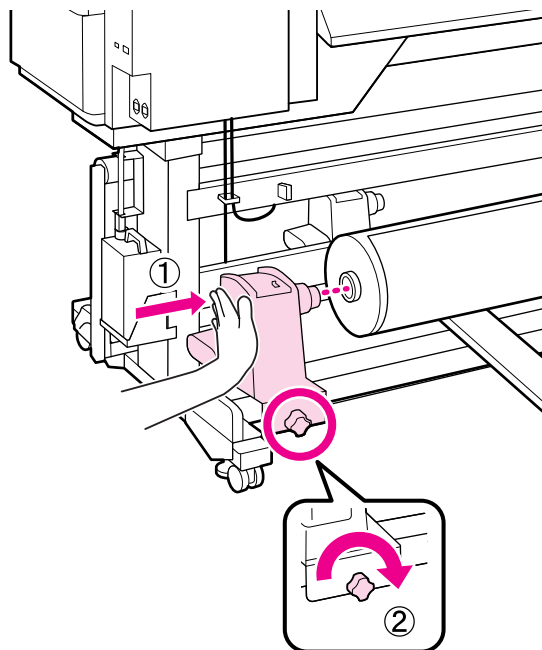

8. Fully insert the right roll holder.

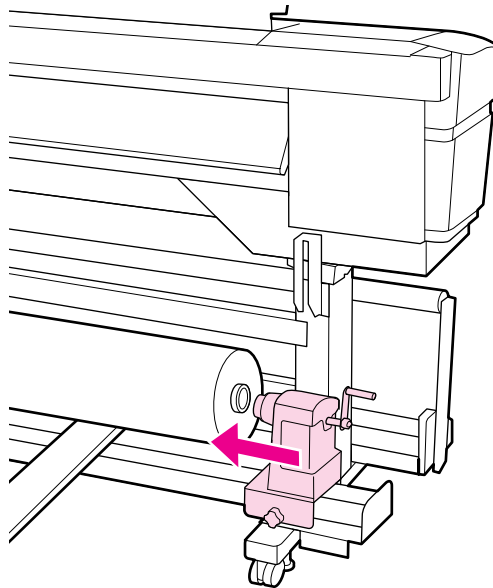


9. To ensure the roll holder is inserted into the roll core sufficiently, push the center section on the side of the roll holder towards the roll end twice.

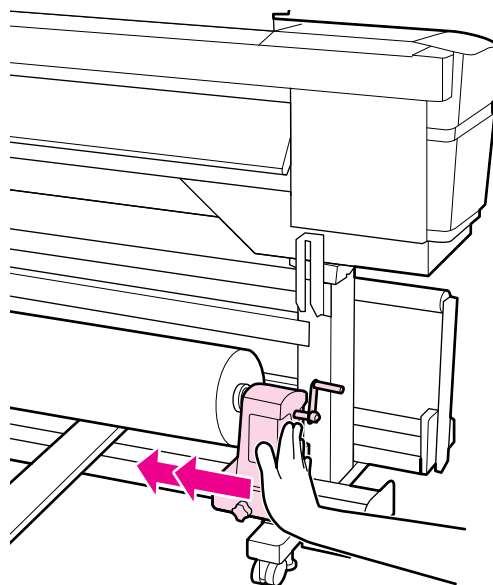

Important:

If the roll holder is inserted into the roll core insufficiently, media is not fed correctly during printing because of slippage between the roll holder and roll core. This may cause banding in the print results.

10. Tighten the roll holder screw until the screw no longer turns to fix the roll holder in place.

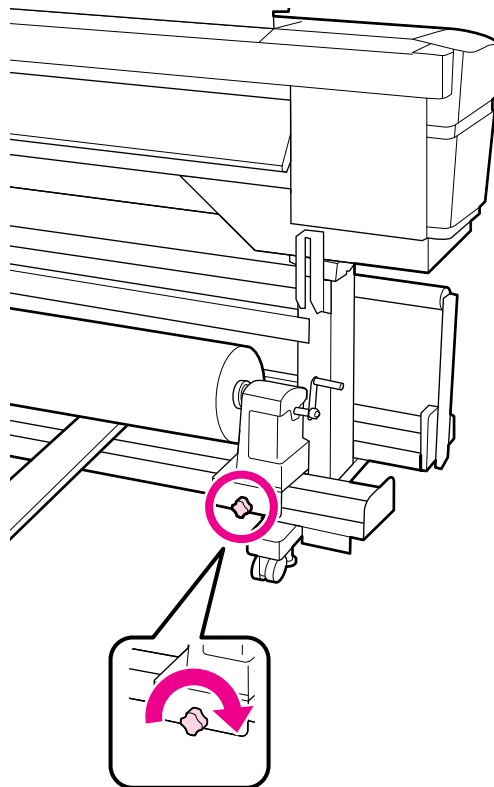


Important:

If the roll holder screw is loose, the roll holder may move during printing. This could cause stripes and unevenness in the print results.

11. Remove the lifter.

12. Rotate the handle until part A in the illustration below is fully inserted.

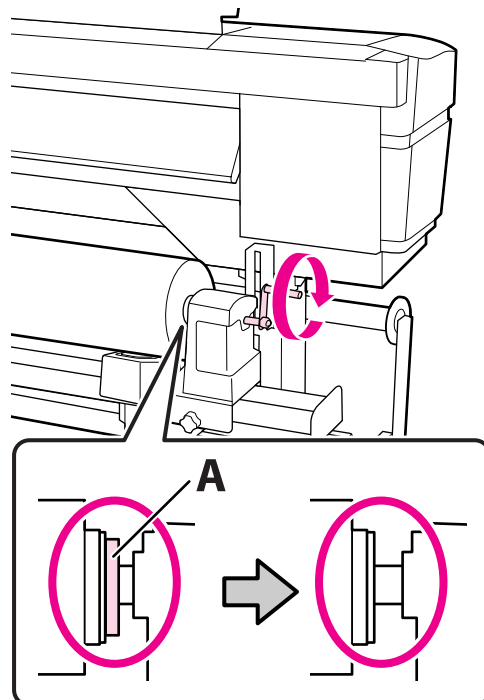


Important:


Once part A is hidden, do not turn the handle any further. Failure to observe this precaution could damage the roll holder.

If part A is still visible even after the handle has been fully turned, rewind the handle. Loosen the roll holder screw on the right side, and then restart from step 8.

13. Raise the media loading lever.

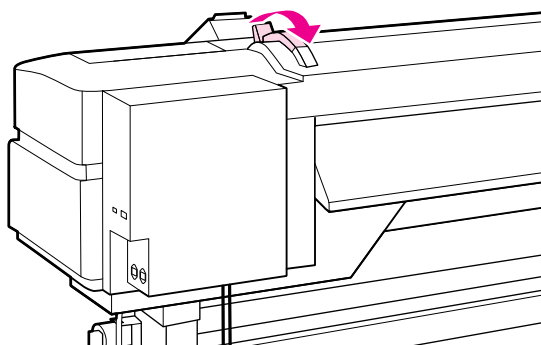


14. Insert the media approximately 30 cm (12 inches) into the opening, then lower the media loading lever.

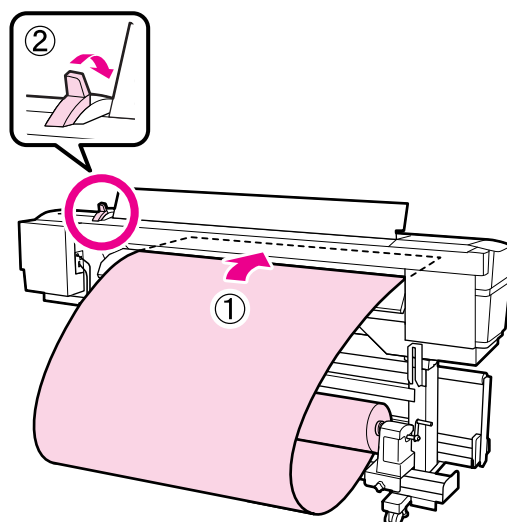

15. Check that the edges of the media pass within the dimensions of the square that was adjusted in step 5.


Example of setting media with a width of 64 inches:

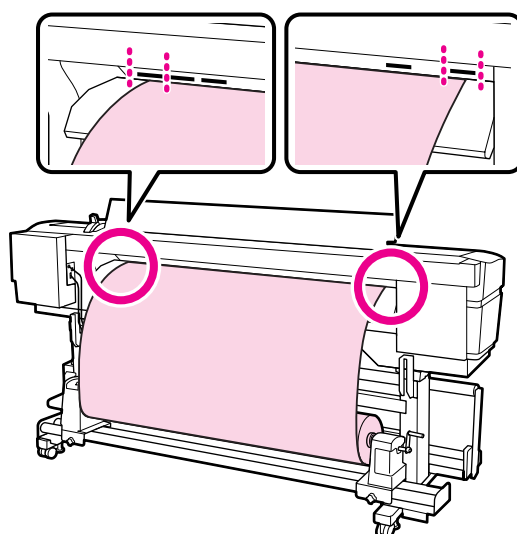


Important:

Perform Steps 14 to 5 in reverse order and repeat the loading process if the edges of the media are not within the square holes. Do not attempt to reposition the roll holders while they are inserted in the media.


16. Hold the center of the media and raise the media loading lever.

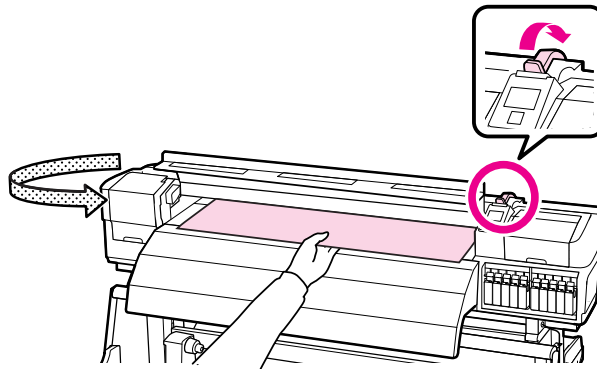

17. Pull the media straight to the center of the after heater.

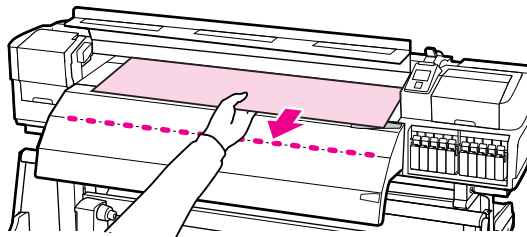


- ☐ Do not pull the media with both hands. This could cause the media to skew or move around.
- ☐ The labels on the after heater are not used when media is loaded. If it is adjusted too forcefully, the media may move around or become loose.

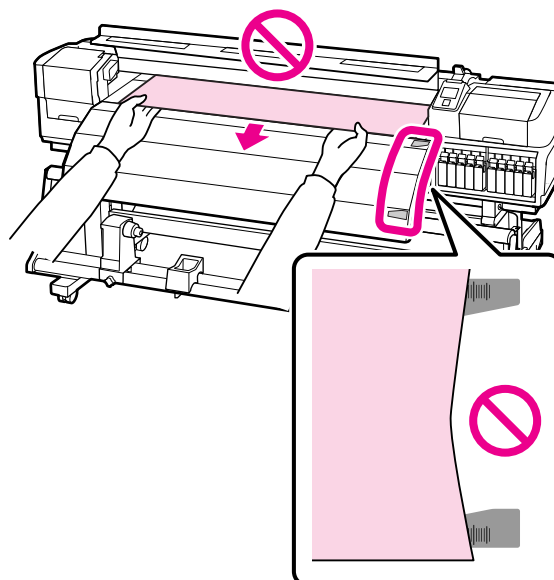

18. Hold both sides of the pressure roller and move it while pressing it down.


Note:

To avoid getting grease on your skin, do not touch the shaft (gray part in the figure) at the top of the roller.

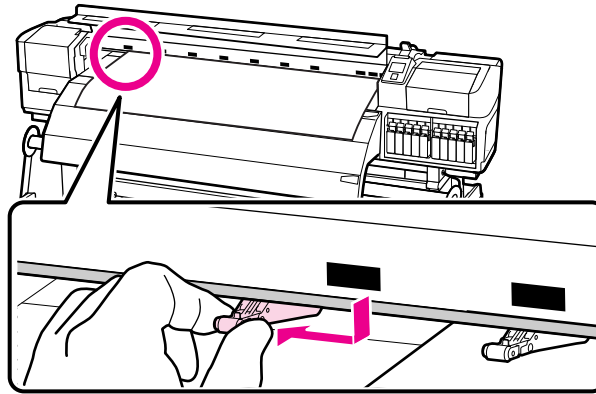


Normal printing

- ❑ Use low pressure rollers. Move the high pressure rollers to the right or left until they contact the ends.
- ❑ We recommend setting the low pressure rollers within 5 mm (0.20 inch) of the edges.
- ❑ Position the remaining low pressure rollers within the black square labels. There may be extra low pressure rollers depending on the media width. Position the extra low pressure rollers away from the black square labels.

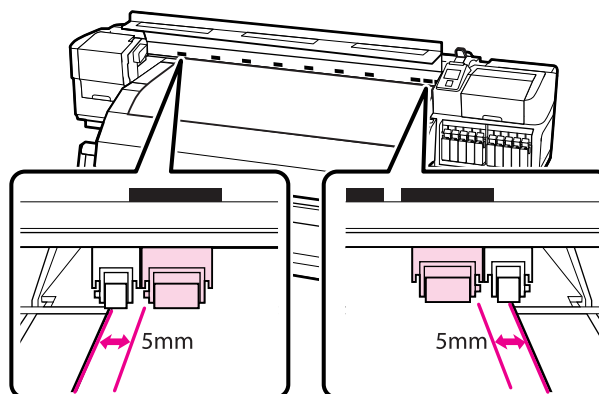


When transparent or white film is loaded or during ink layering

- ❑ Use high pressure rollers only.
- ❑ We recommend positioning the rollers within 10 mm (0.39 inch) from the left and right edges of the media.
- ❑ Position the low pressure rollers away from the black square labels.

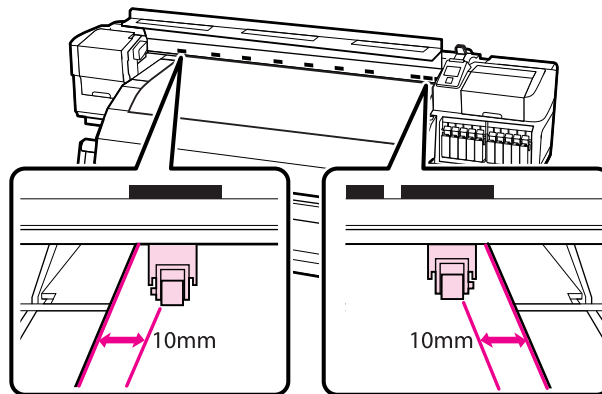


19. When the media loading lever is lowered, the pressure rollers on the black square labels secure the media.

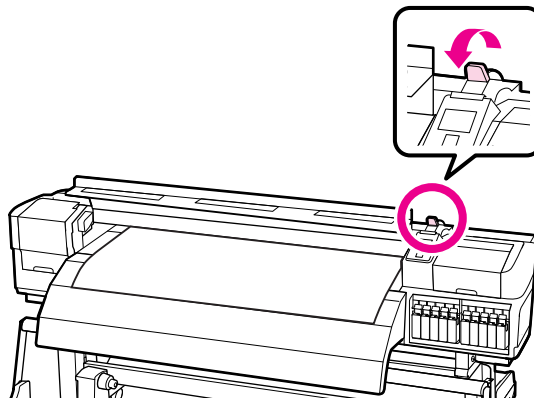

20. Position the media holding plates at both sides of the media.


While holding the tabs on both sides, move the plates to the edges of the media. Adjust so that both edges of the media are aligned to the center of the round holes in the plates.

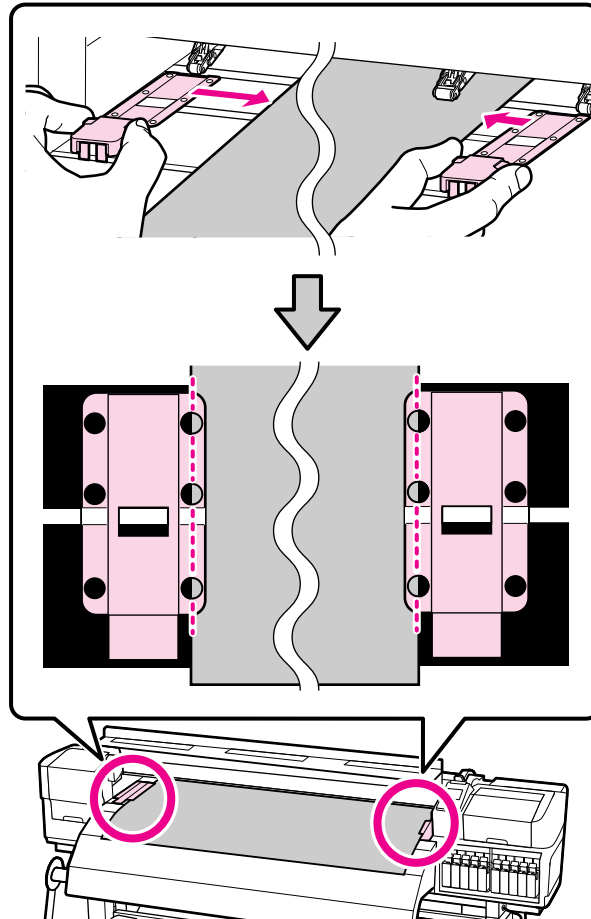

Important:

- ❑ Do not use the media holding plates with media that is more than 0.4 mm (0.02 inch) thick. The media holding plates could touch and damage the print head.
- ❑ Always position the plates so that the edges of the media are at the centers of the round holes. Incorrect positioning causes banding (horizontal lines, tint unevenness, or stripes).
- ❑ Move the media holding plates to the left and right edges of the platen when they are not in use.
- ❑ Do not use the media holding plates if the sides of the printed media are smudged or torn.

21. Close the front cover.

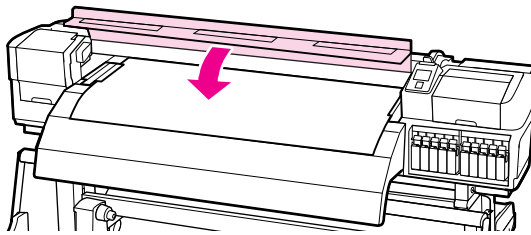

When using the auto take-up reel, see “Using the Auto Take-up Reel Unit” on page 92.

When not using the auto take-up reel, proceed to check the media and change settings. See “Viewing and Changing Media Settings” on page 85.

Loading Media - S30675


Follow the steps below when using the supplied media feeding unit.

When the Heavy Roll Media Feeding Unit is installed, see “Using the optional heavy roll media feeding unit” on page 75.

Using the standard media feeding unit

This section describes how to load media when the standard media feeding unit is installed.


Before loading media, be sure to read “Notes on Loading Media” on page 38.

1. Press the  button, and wait until **Load media** appears on the screen.
2. Open the front cover, and move the media holding plates out of the way.

Important:


If the media holding plates are not moved out of the way, media insertion may fail or damage may occur to the edge of the media.

Hold the tabs on the media holding plates and move the plates to the right and left sides of the platen.

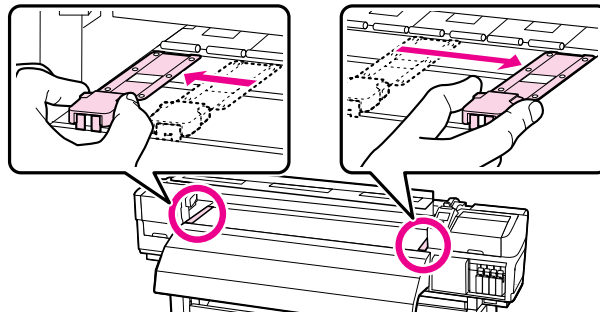


3. Loosen the roll holder fixing screws sufficiently and adjust the roll holders so that the gap between the two is wider than the media.

Center the roll supports between the roll holders.

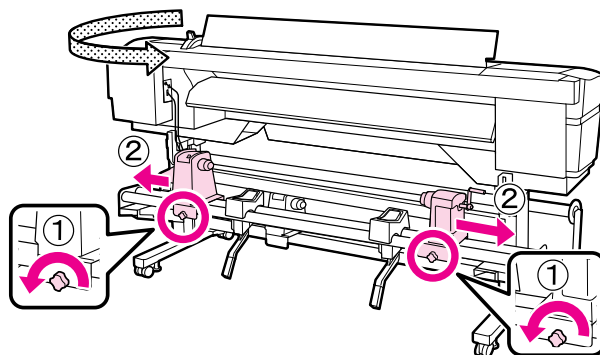


Important:


If the right holder handle shaft is not visible, rotate the holder forward until it stops. The media can not be properly loaded if the handle shaft is not visible.

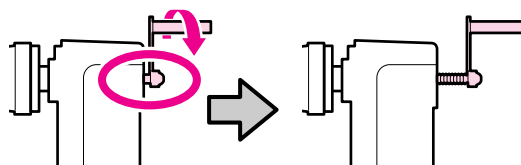

4. Place media on the roll support oriented according to how it is rolled (see below).

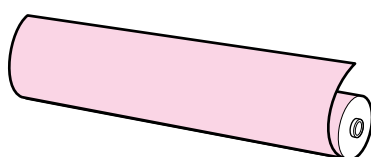


Printable side out

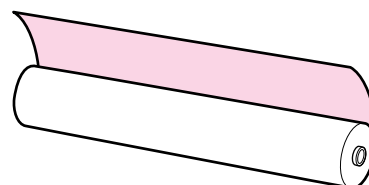


Printable side in

5. Align the left edge of the media with the position on the label.

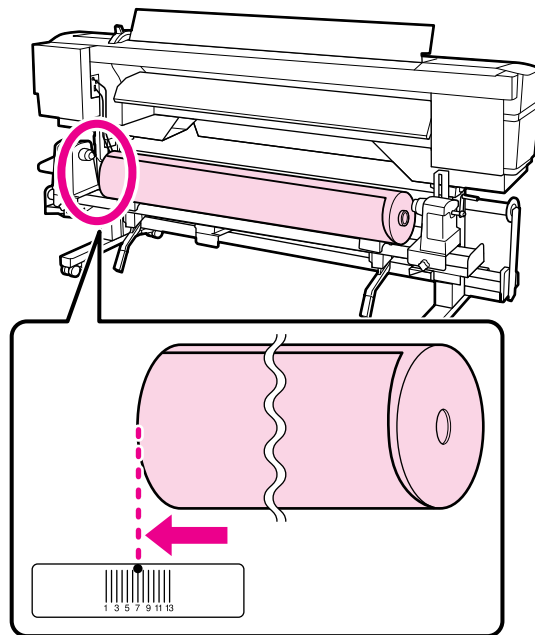


If the label does not have the loading position, mark it on the label as instructed in the *Setup Guide*.

6. Raise the lift lever on the left side of the printer to lift the media into position, then firmly insert the roll holder.

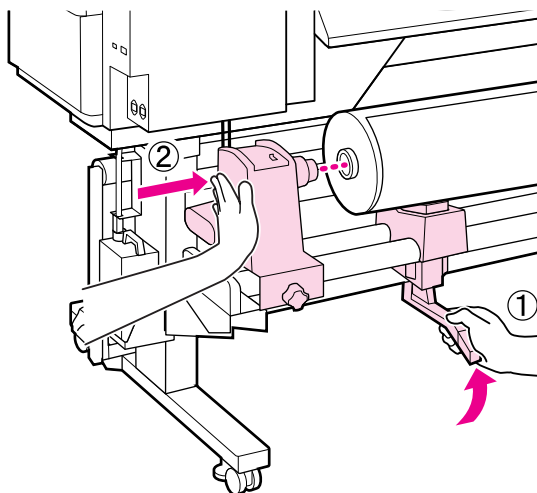


If the roll has an outer diameter of less than 140 mm (5.5 inches), lift it manually and place it on the roll holder. The roll core will not reach the holder when raised using the lift lever.

7. Tighten the roll holder screw until the screw no longer turns to fix the roll holder in place.

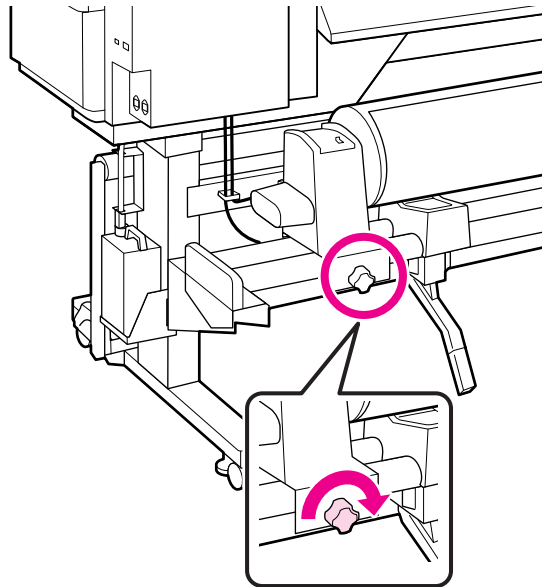


8. Raise the lift lever on the right side of the printer to lift the media into position, then firmly insert the roll holder.

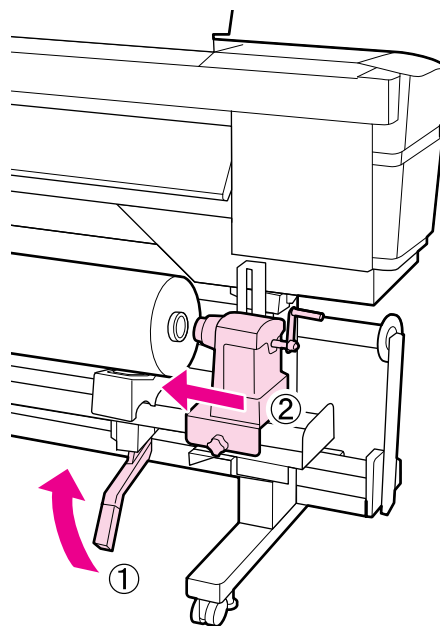

If the roll has an outer diameter of less than 140 mm (5.5 inches), lift it manually and place it on the roll holder.


9. To ensure the roll holder is inserted into the roll core sufficiently, push the center section on the side of the roll holder towards the roll end twice.

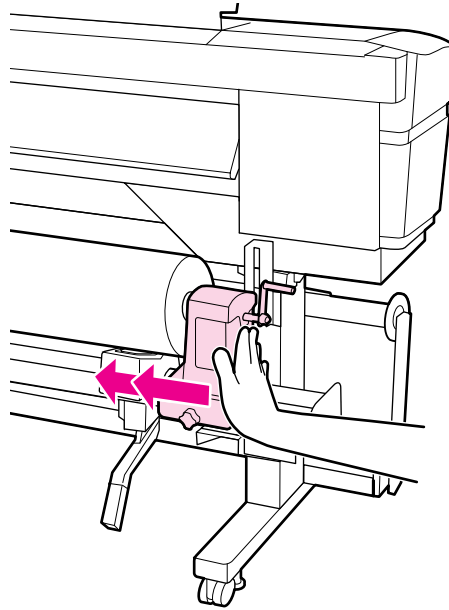

Important:

If the roll holder is inserted into the roll core insufficiently, media will not feed correctly during printing because of slippage between the roll holder and roll core. This may cause banding in the print results.


10. Tighten the roll holder screw until the screw no longer turns to fix the roll holder in place.

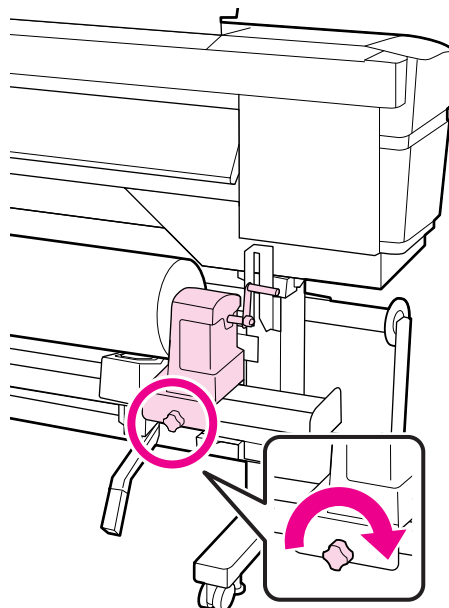

Important:

If the roll holder screw is loose, the roll holder may move during printing. This could cause stripes and unevenness in the print results.

11. Rotate the handle until part A in the illustration below is fully inserted.

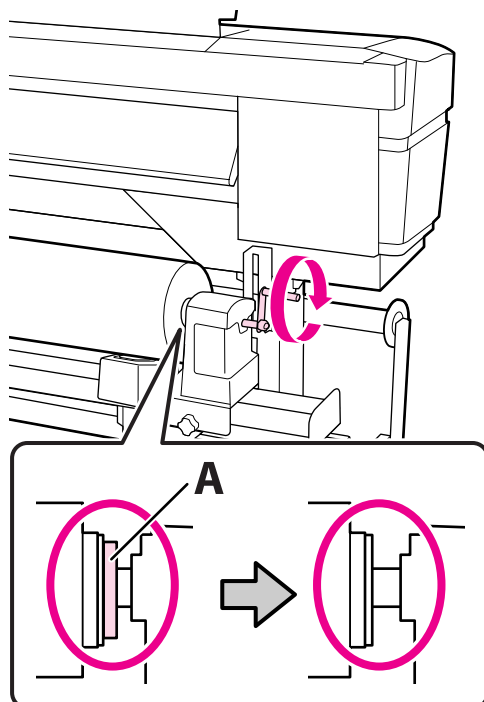


Important:


Once part A is hidden, do not turn the handle any further. Failure to observe this precaution could damage the roll holder.

If part A is still visible even after the handle has been turned fully, rewind the handle. Loosen the roll holder screw on the right side, and then restart from Step 8.


12. Raise the media loading lever.

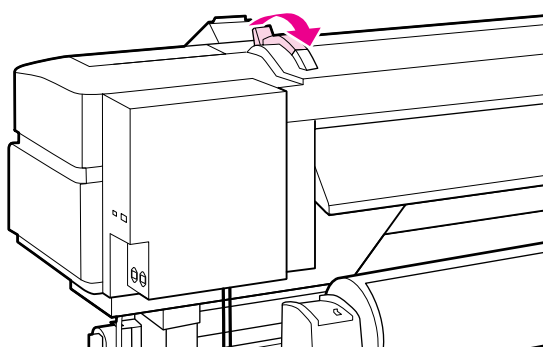

13. Insert the media approximately 30 cm (12 inches) into the opening, then lower the media loading lever.

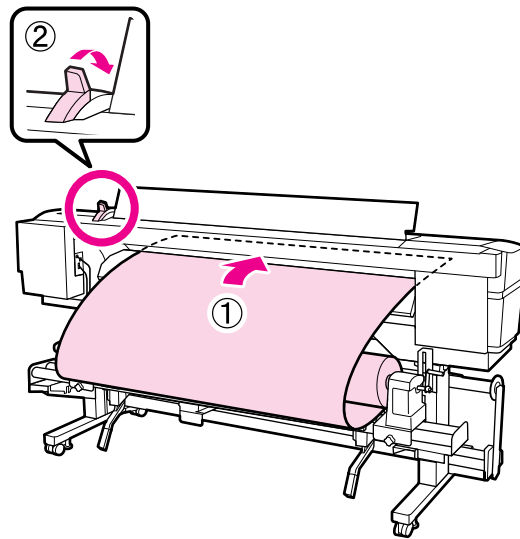


14. Confirm that the left edge of the media passes over the center of the square in the label on the pre-heater.

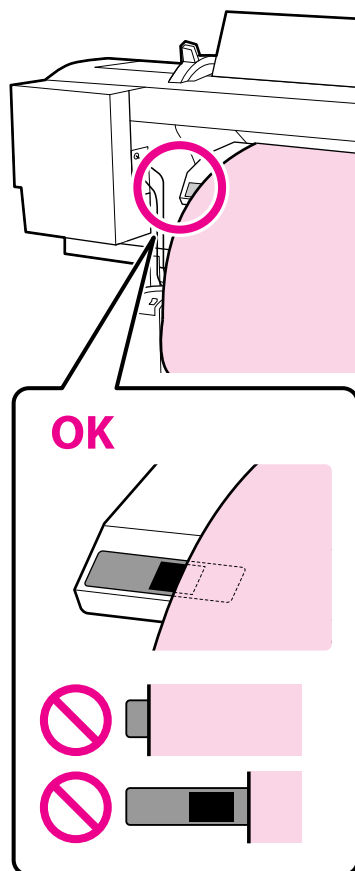


Important:

Perform Steps 13 to 5 in reverse order and repeat the loading process if the left edge of the media is not within the guides. Do not attempt to reposition the roll holders while they are inserted in the media.

15. Hold the center of the media and raise the media loading lever.

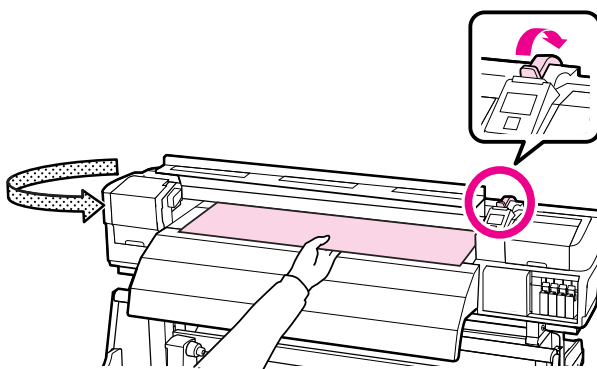


16. Pull the media straight to the center of the after heater.

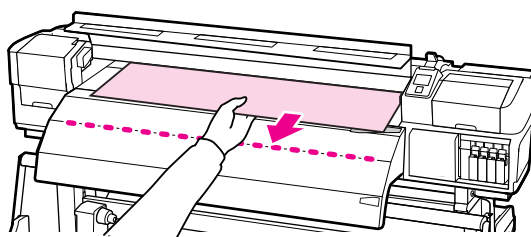


- ☐ Do not pull the media with both hands. This could cause the media to skew or move around.

- ❑ The labels on the after heater are not used when media is loaded. If it is adjusted too forcefully, the media may move around or become loose.

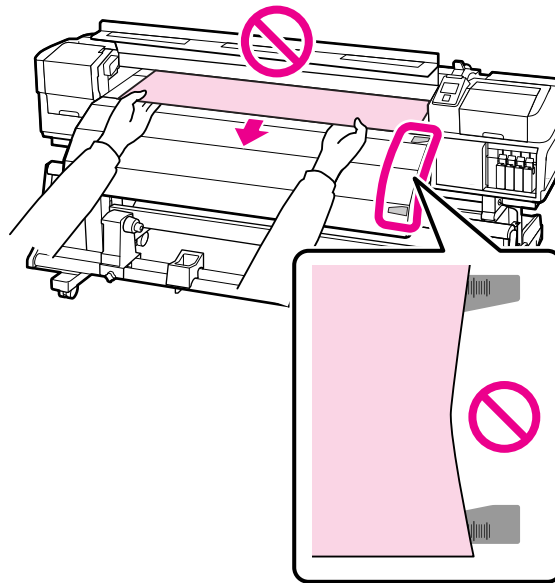


17. Lower the media loading lever to hold the media in place.

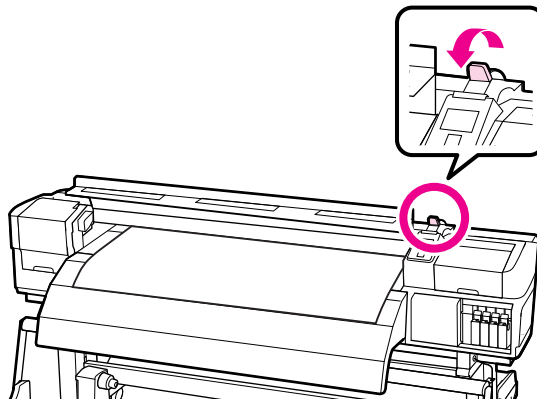

18. Position the media holding plates at both sides of the media.


While holding the tabs on both sides, move the plates to the edges of the media. Adjust so that the edges of the media are aligned to the center of the round holes in the plates.

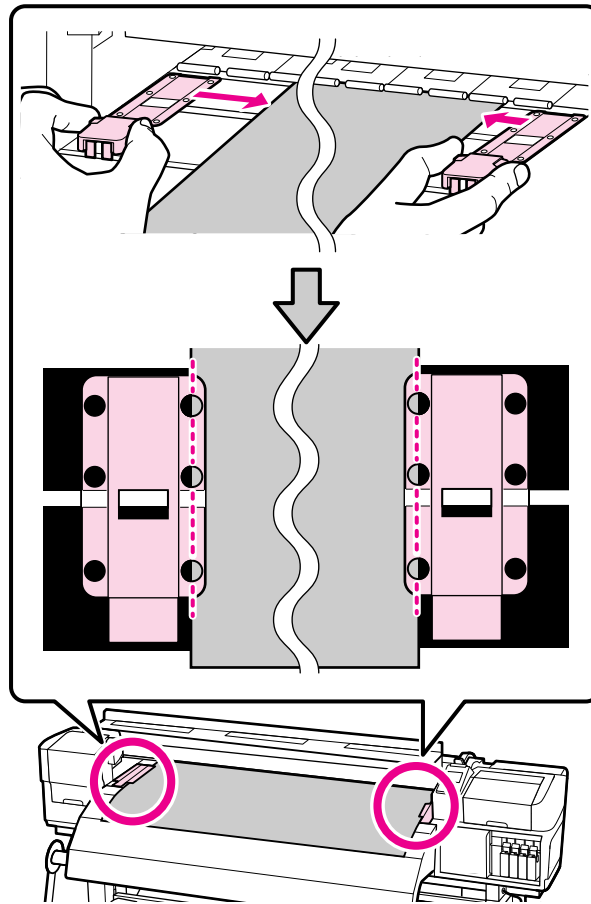

Important:

- ❑ Do not use the media holding plates with media that is more than 0.4 mm (0.02 inch) thick. The media holding plates could touch and damage the print head.
- ❑ Always position the plates so that the edges of the media are at the centers of the round holes. Incorrect positioning causes banding (horizontal lines, tint unevenness, or stripes).
- ❑ Move the media holding plates to the left and right edges of the platen when they are not in use.
- ❑ Do not use the media holding plates if the sides of the printed media are smudged or torn.

19. Close the front cover.

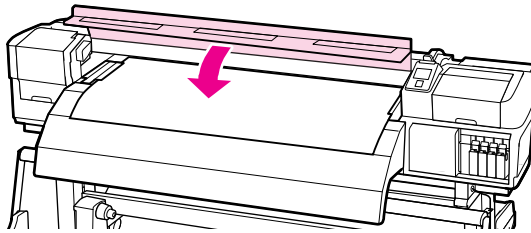

When using the auto take-up reel, see “Using the Auto Take-up Reel Unit” on page 92.

When not using the auto take-up reel, proceed to check the media and change settings. See “Viewing and Changing Media Settings” on page 85.

Using the optional heavy roll media feeding unit

This section describes how to load media when the optional heavy roll media feeding unit is installed.



Caution:


Because the media is heavy, it should not be carried by one person. When loading or removing the media, use at least two persons. Using a lifter is recommended when handling a media that is 40 kg (88.2 lb) or heavier.

The explanation that follows assumes that a lifter is used.

The following types of lifter can be used:

- ☐ Fork or platform thickness: 28 mm (1.10 inches) or less.
- ☐ Fork or platform can be lowered to approx. 190 mm (7.5 inches) from the floor.


Before loading media, be sure to read “Notes on Loading Media” on page 38.

1. Press the  button, and wait until **Load media.** appears on the screen.
2. Open the front cover, and move the media holding plates out of the way.


Important:

If the media holding plates are not moved out of the way, media insertion may fail or damage may occur to the edge of the media.

Hold the tabs on the media holding plates and move the plates to the right and left sides of the platen.

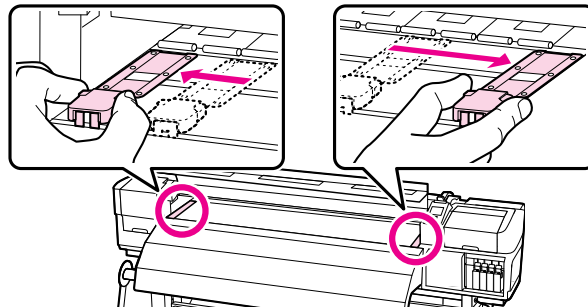


3. Loosen the left and right roll holder fixing screws and adjust the roll holders so that the gap between the two is wider than the media.

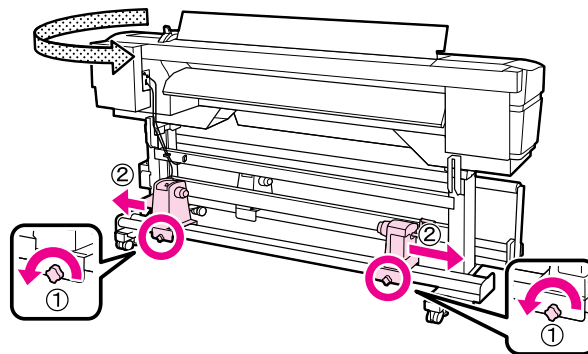


Important:


If the right holder handle shaft is not visible, rotate the holder forward until it stops. The media can not be properly loaded if the handle shaft is not visible.

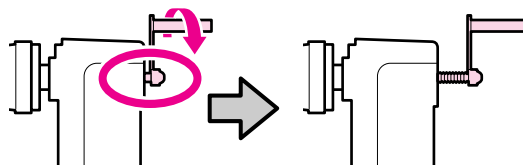

4. Place the media on the lifter oriented according to how it is rolled (see below).

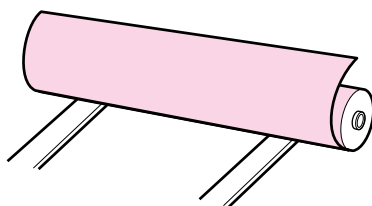


Printable side out

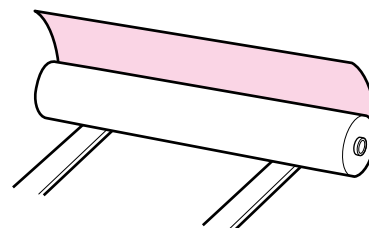

Printable side in


Move the lifter so that the left edge of the media matches the set position on the label.

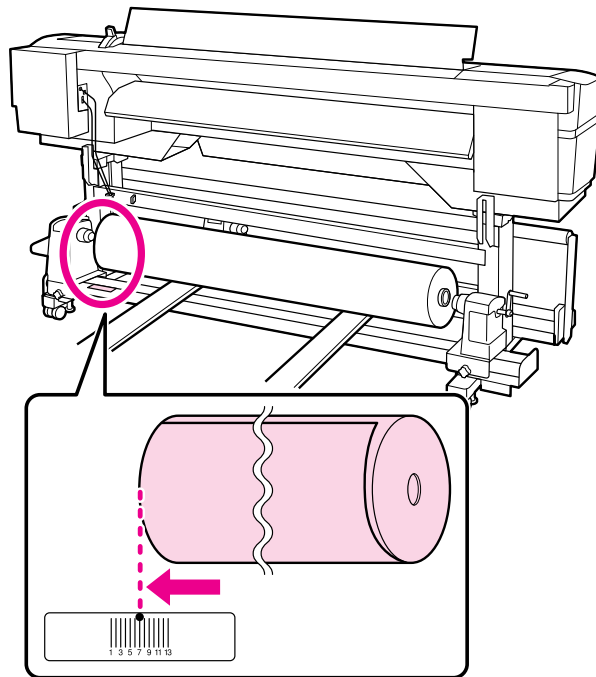


If the label does not have the loading position, mark it on the label as instructed in the *Setup Guide*.

5. Align the media and the roll holders.


Raise or lower the lifter until the media roll core is level with the roll holders.

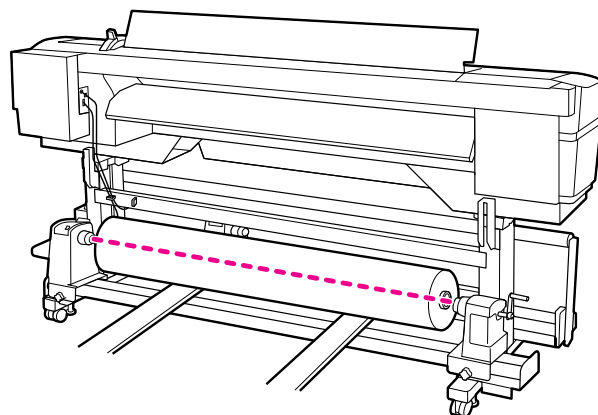


6. Fully insert the left roll holder. Next, tighten the roll holder screw until the screw no longer turns to fix the roll holder in place.

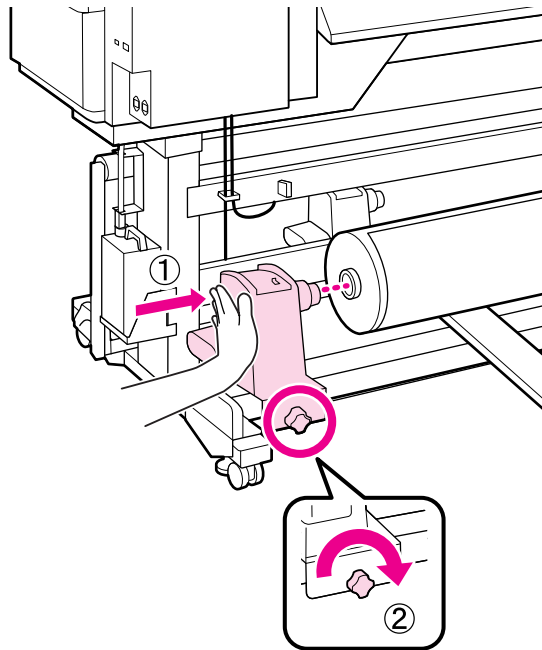

7. Fully insert the right roll holder.

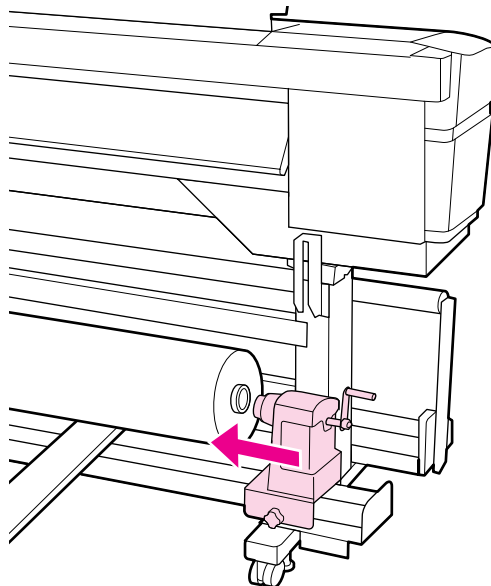


8. To ensure the roll holder is inserted into the roll core sufficiently, push the center section on the side of the roll holder towards the roll end twice.

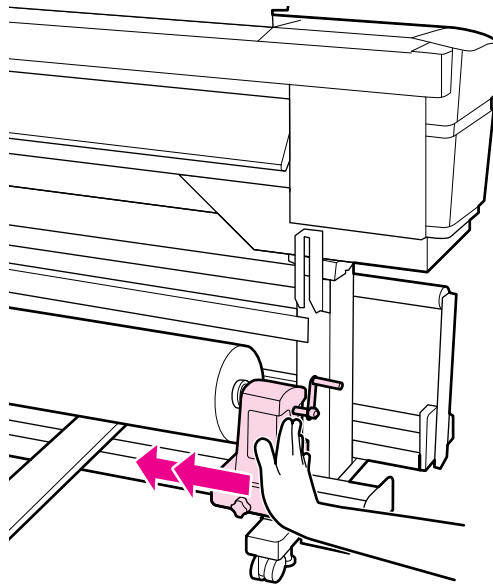

Important:

If the roll holder is inserted into the roll core insufficiently, media will not feed correctly during printing because of slippage between the roll holder and roll core. This may cause banding in the print results.

9. Tighten the roll holder screw until the screw no longer turns to fix the roll holder in place.

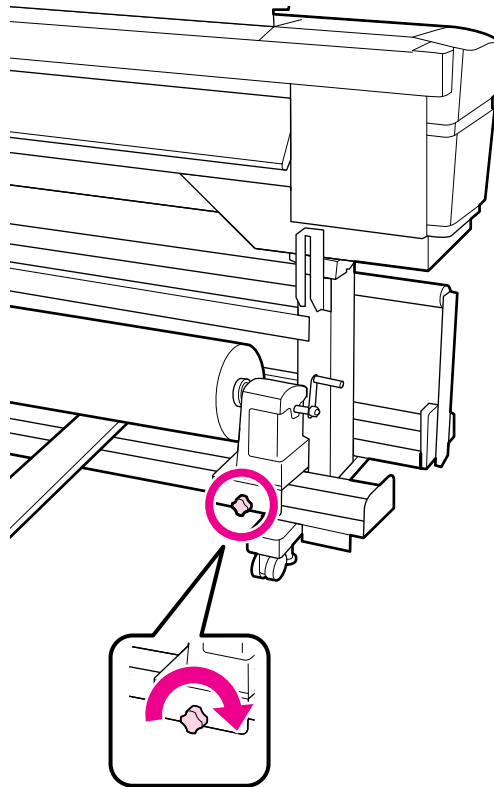


Important:

If the roll holder screw is loose, the roll holder may move during printing. This could cause stripes and unevenness in the print results.

10. Remove the lifter.

11. Rotate the handle until part A in the illustration below is fully inserted.

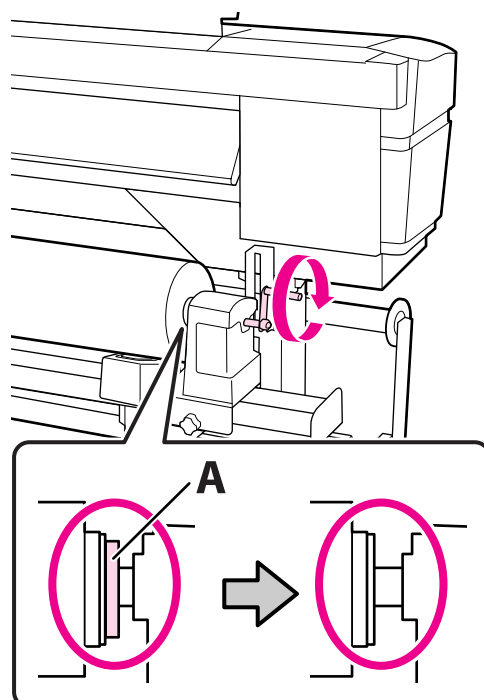


Important:


Once part A is hidden, do not turn the handle any further. Failure to observe this precaution could damage the roll holder.

If part A is still visible even after the handle has been turned fully, rewind the handle. Loosen the roll holder screw on the right side, and then restart from Step 7.


12. Raise the media loading lever.

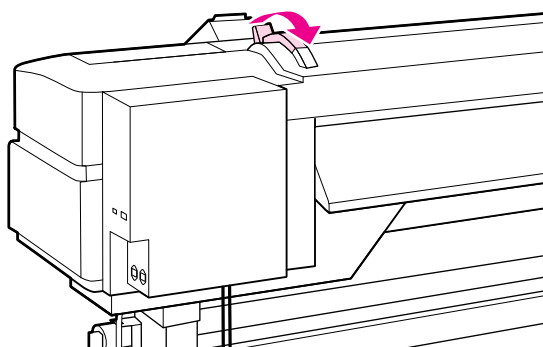

13. Insert the media approximately 30 cm (12 inches) into the opening, then lower the media loading lever.

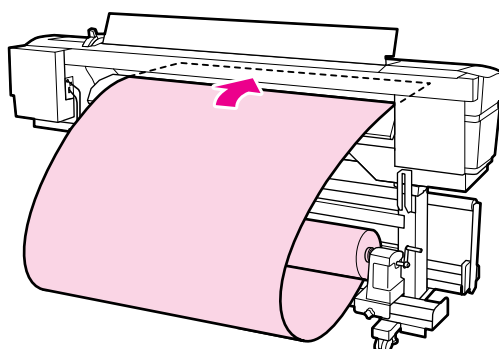


14. Confirm that the left edge of the media passes within the square in the label on the pre-heater.

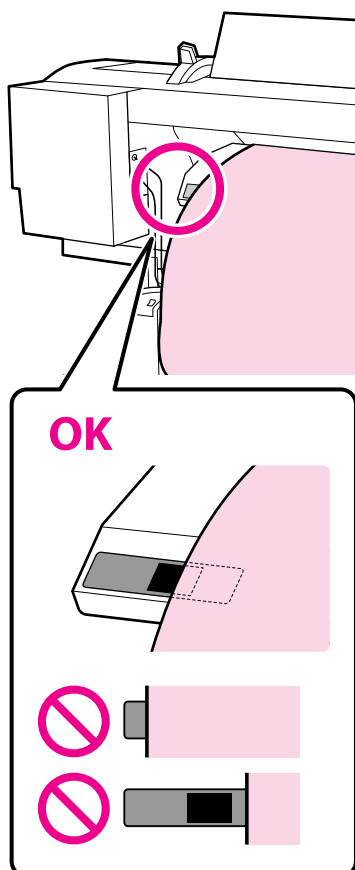


Important:

Perform Steps 13 to 4 in reverse order and repeat the loading process if the left edge of the media is not within the guides. Do not attempt to reposition the roll holders while they are inserted in the media.


15. Hold the center of the media and raise the media loading lever.

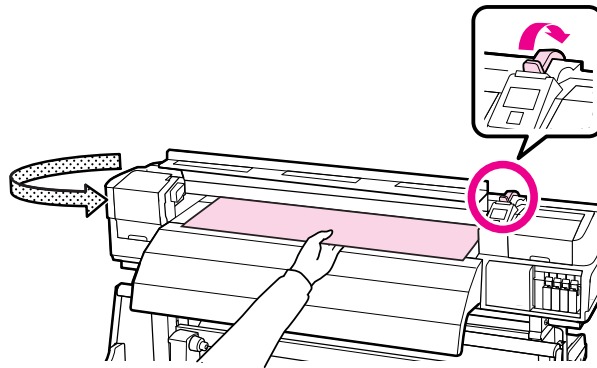


16. Pull the media straight to the center of the after heater.

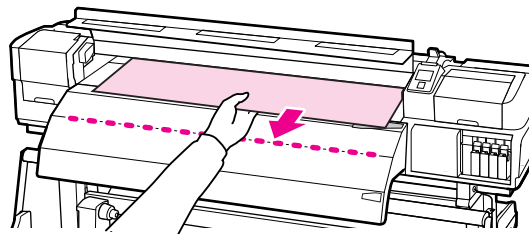

- ☐ Do not pull the media with both hands. This could cause the media to skew or move around.
- ☐ The labels on the after heater are not used when media is loaded. If it is adjusted too forcefully, the media may move around or become loose.

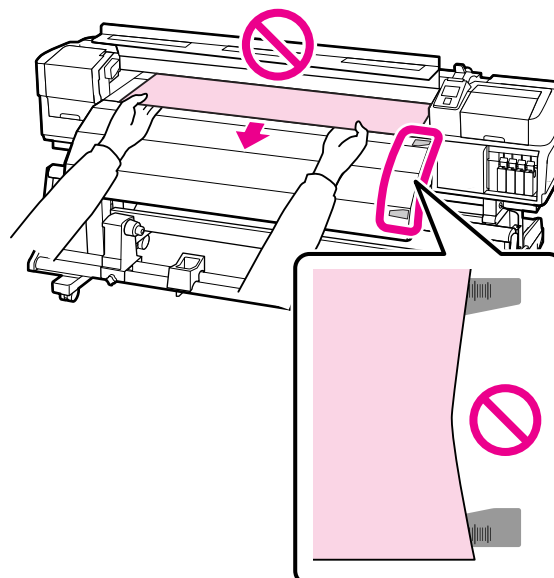


17. Lower the media loading lever to hold the media in place.

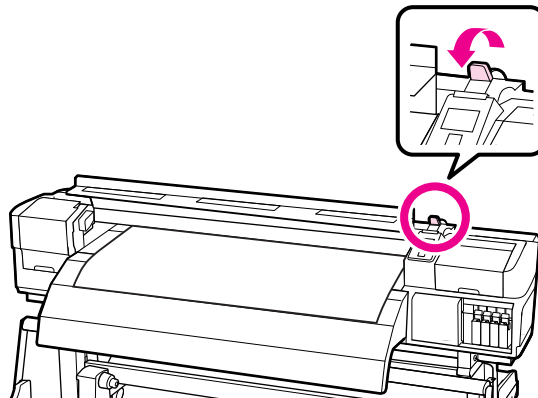

18. Position the media holding plates at both sides of the media.


While holding the tabs on both sides, move the plates to the edges of the media. Adjust so that both edges of the media are aligned with the center of the round holes in the plates.

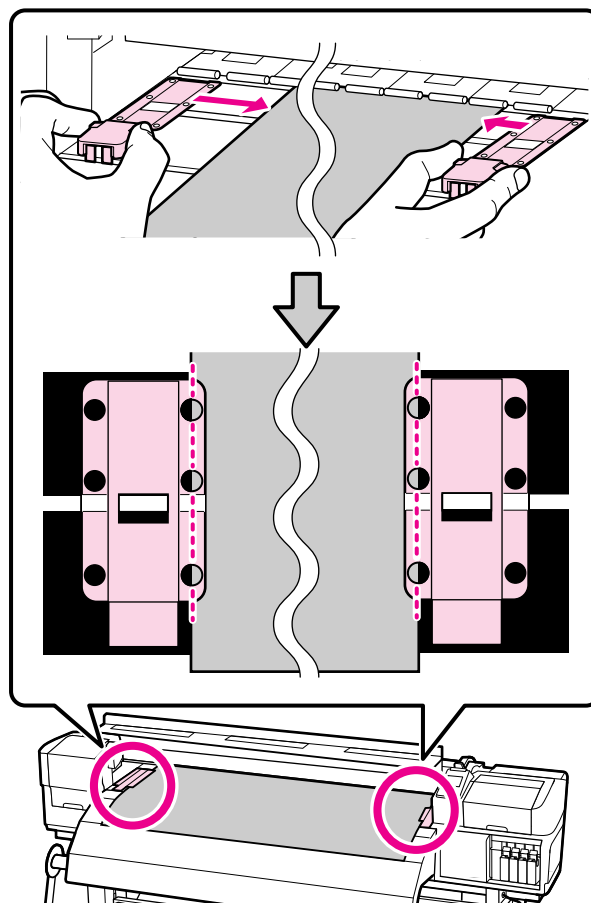

Important:

- ❑ Do not use the media holding plates with media that is more than 0.4 mm (0.02 inch) thick. The media holding plates could touch and damage the print head.
- ❑ Always position the plates so that the edges of the media are at the centers of the round holes. Incorrect positioning causes banding (horizontal lines, tint unevenness, or stripes).
- ❑ Move the media holding plates to the left and right edges of the platen when they are not in use.
- ❑ Do not use the media holding plates if the sides of the printed media are smudged or torn.

19. Close the front cover.

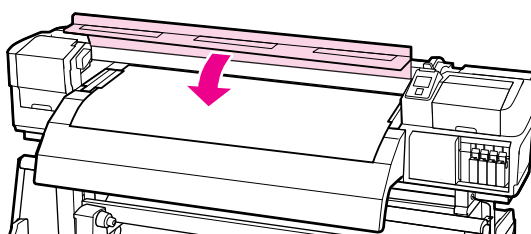


When using the auto take-up reel, see “Using the Auto Take-up Reel Unit” on page 92.

When not using the auto take-up reel, proceed to check the media and change settings. See “Viewing and Changing Media Settings” on page 85.

Viewing and Changing Media Settings

The control panel displays the following information once the media is loaded.

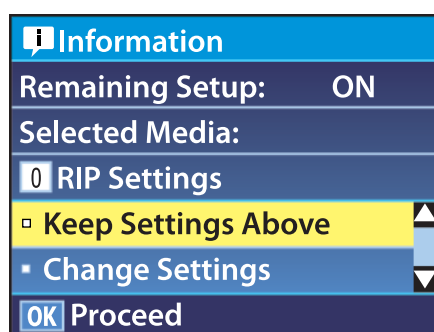

This display can be used to view or change the following two options:

- ❑ **Remaining Setup**

On: The printer displays the amount of media remaining.

Off: The printer does not display the amount of media remaining.

When **Remaining Setup** is **On**, the printer will calculate the approximate amount of media remaining based on the length of the roll and the amount used for printing and display this information in the control panel. The display gives a rough idea of the amount of media available before printing, making it easier to know when media requires replacement.

In addition, a warning will be displayed when the amount of media remaining reaches a specified level.

❑ **Selected Media**


Displays the parameters on which media settings are based as shown below.

0 **RIP Settings:** Media settings are based on those in the RIP.

1 **XXXXXXXXXXXXXXXXXXXX:** Media settings are based on those stored in the printer in media settings bank No. 1.

Media settings banks can store a variety of settings for different media based on the options selected in the Heater Temperature, Media Suction, Head Alignment, and other menus. Up to 30 combinations of settings can be stored by assigning them to banks No. 1 to 30.

See “Saving Media Settings” on page 112.

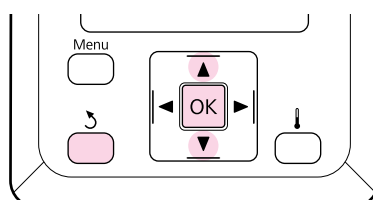

1. Select an option.

To print at current settings, use the ▼/▲ buttons to select **Keep Settings Above** and press the OK button. Proceed to Step 6.

To change settings, use the ▼/▲ buttons to select **Change Settings** and press the OK button.

2. Select the items you want to change and press the OK button.

3. Select the desired option and press the OK button.

4. Press the **↵** button to display the dialog shown in Step 2 and then press the **↵** button again.
5. After confirming that the settings are correct, use the **▼/▲** buttons to select **Keep Settings Above** and press the OK button.
6. When the roll type selection screen appears, use the **▼/▲** buttons to select the roll type that matches the loaded roll and press the OK button.
7. If **On** is selected for **Remaining Setup**, you will be prompted to enter the length of the current media. Use the **▼/▲** buttons to choose a length between 1.0 and 999.5 m (3 and 3,300 feet) and press the OK button. You can set the length in 0.5 m increments. If the display is in feet, lengths are given in increments of 1 foot.

The printer will display **Ready** after a brief pause, showing that it is ready to print. Transmit the data to be printed from the computer.

Replacing and Removing Media

To replace or remove the media after printing, print the amount of media remaining, cut the media, and remove the roll.

Printing the amount of media remaining

The printer displays the amount of media remaining and any media low warnings in the control panel. This makes it possible to determine whether the media requires replacement before printing.


The amount of media remaining can only be displayed if the correct length is entered when the media is loaded.


You can print the amount of media remaining on the leading edge of the roll before it is removed from the printer and then enter this number the next time the media is loaded for accurate information on the amount remaining.

Note:

*The printer does not calculate or display the amount of media remaining when **Off** is selected for **Remaining Setup** in the setup menu. See “Viewing and Changing Media Settings” on page 85.*

The following section describes how to print the amount of media remaining.

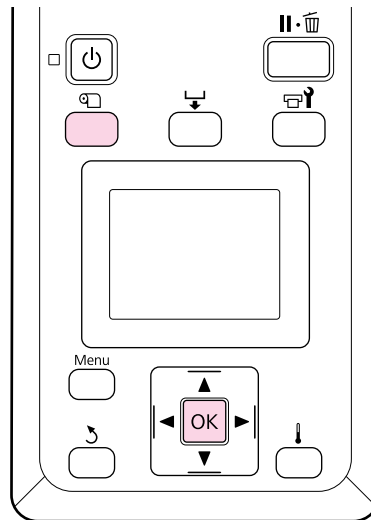

1. Confirm that the printer is ready to print.
2. Press the  button, select **Media Remaining** in the menu, and press the OK button.
3. Select **Print Remaining Length** and press the OK button.
4. Press the OK button to print the amount of media remaining.


Cutting media


Use a cutter (not included) to cut the media when printing is complete.


**Caution:**


The heaters and media holding plate may be hot; observe all necessary precautions. Failure to observe the necessary precautions could result in burns.

When cutting media, be careful not to cut your fingers or hands with the cutter or other blades.

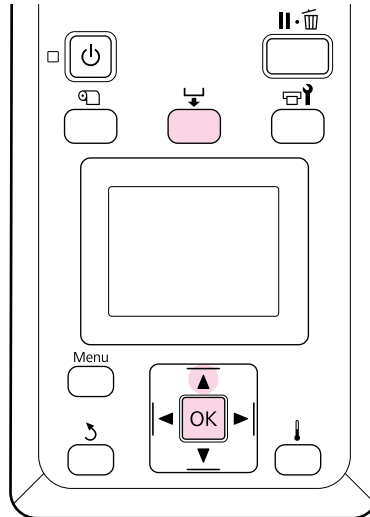


1. After checking that the printer is ready, press the  button and the OK button.
2. Check that the trailing edge of the printed media is fed to a position over the cutter groove, and open the front cover.


If you have printed the amount of media remaining, press the  button to rewind the media so that this information will remain on the roll after the media is cut.

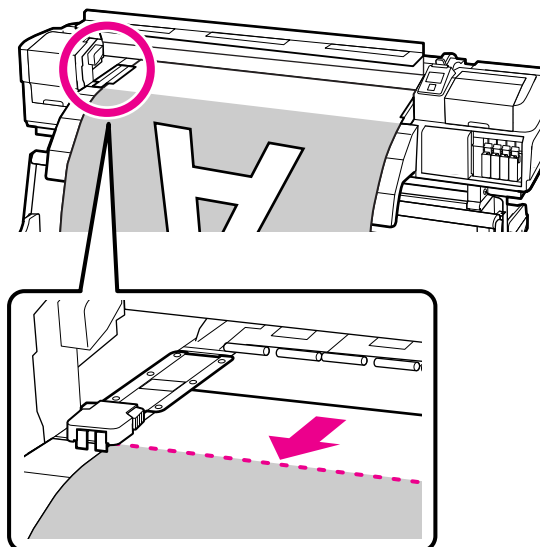

When the auto take-up reel unit is used, raise the tensioner.

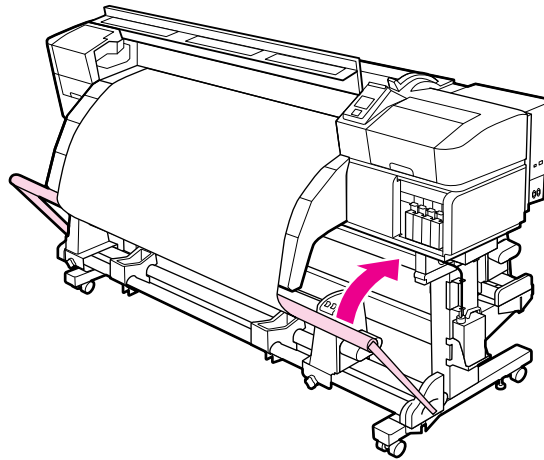


3. Open the front cover, and move the media holding plates out of the way. Hold the tabs and move the plates to the right and left sides of the platen.

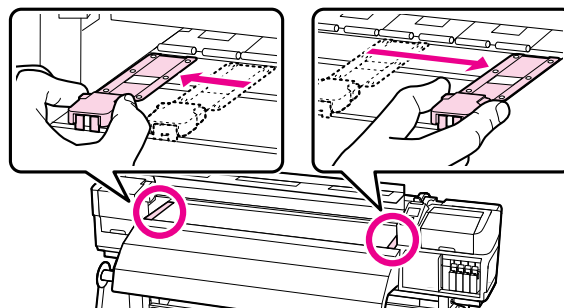


4. Cut the media with the cutter.

Pass the blade of the cutter down the cutting groove.

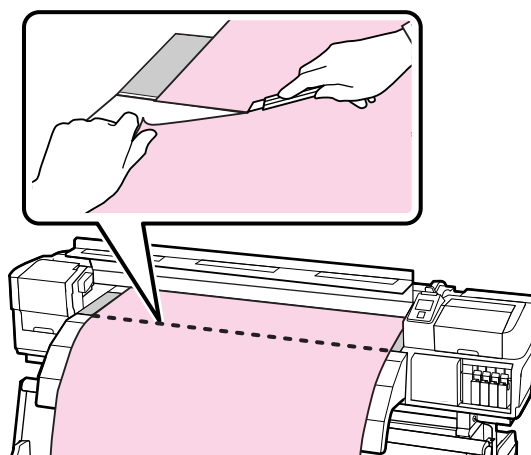

When the auto take-up reel unit is used, proceed to Step 5. Otherwise, proceed to Step 7.

5. Set the Auto switch to **off**. Take up the cut media completely by operating the Manual switch according to how the media is rolled.

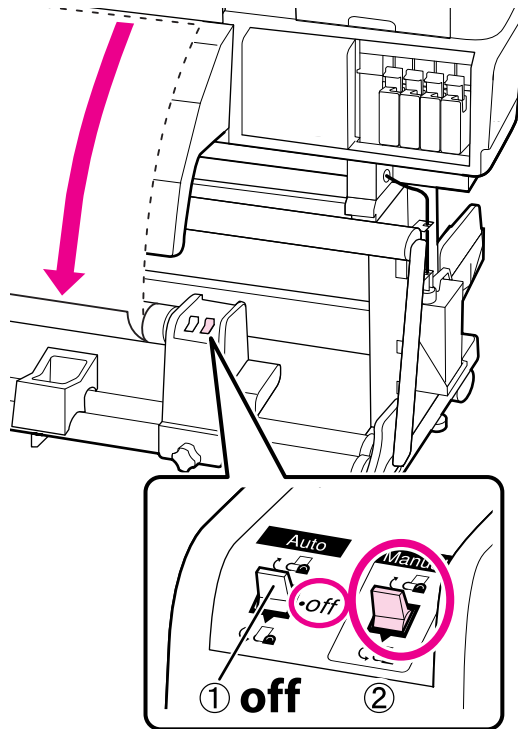

6. Remove the take-up roll. See “Removing the Take-up Roll (Using the Standard Take-up Reel)” on page 107.
7. To remove the media, reverse the steps you followed to load it. See “Loading Media - S70675/S50675” on page 41 or “Loading Media - S30675” on page 65.


Important:

To finish the procedure on the S70675 or S50675, raise the media loading lever. Otherwise, the pressure rollers will be deformed.

Using the Auto Take-up Reel Unit

The auto take-up reel unit automatically takes up media as it is printed, improving the efficiency of unmanned operation.

The auto take-up reel unit for this printer can take up media in either of the following directions.

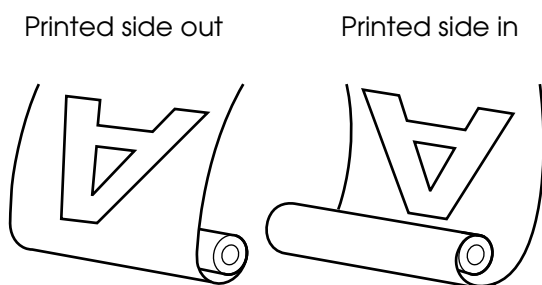

Taking-up with printed side out places the printed surface on the outside of the roll.

Taking-up with printed side in places the printed surface on the inside of the roll.

Follow the procedures below to attach the roll core to the auto take-up reel unit, and then attach the media to the roll core depending on how the media is rolled.

The explanation that follows uses the supplied auto take-up reel unit for illustrative purposes, but the same procedure can be followed when using the optional auto take-up reel unit for heavy media (unless otherwise noted).

See “Attaching the Roll Core” on page 93, “Take up with the printed side facing out” on page 97, or “Take up with the printed side facing in” on page 102.



Caution:

- ☐ *Follow the instructions in the manual when loading media or roll cores or removing the take-up roll.*

Dropping media, roll cores, or take-up rolls could result in injury.

- ☐ *Be sure that your hands or hair do not get caught in the auto take-up reel unit while it is in operation.*

Failure to observe this precaution could result in injury.


- ☐ Use a roll core that is longer than the width of the media. This allows the media to be taken up without protruding from the core.

- ❑ Attach media to the roll core using the paper tape supplied. Using the paper tape reduces take-up roll misalignment errors. When the tape has been completely used, purchase commercially available paper tape (that is not easily stretched or cut) with a width of 20 to 25 mm (about one inch).
- ❑ For ink layering, the auto take-up reel unit is not recommended (S70675 and S50675 only). Take-up may not be possible, or print quality may decline.


Attaching the Roll Core

Important:

When using the optional heavy roll media system and before starting this procedure, check that the handle shaft of the unit on the left is visible. If the shaft is not visible, turn the handle in the direction shown below until it does not turn any more.

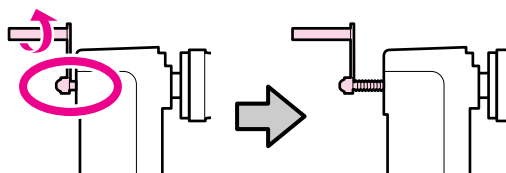

1. After confirming that the media is loaded correctly, press the ▼ button until the leading edge of the media reaches the roll core holder.

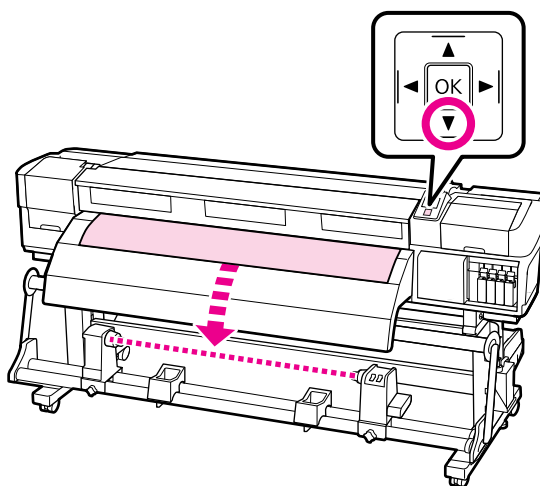


Important:


Always press the ▼ button to feed the media as far as the roll core holder. If the media is pulled by hand, the media may twist during take-up.

2. Loosen the roll core holder fixing screws at both sides and adjust the left roll core holder.

Center the roll supports between the roll holders.

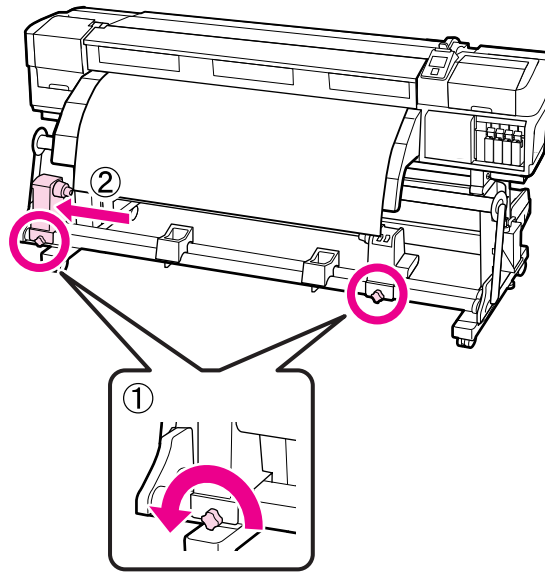


3. Align the right roll core holder with the right edge of the media and tighten the fixing screw.

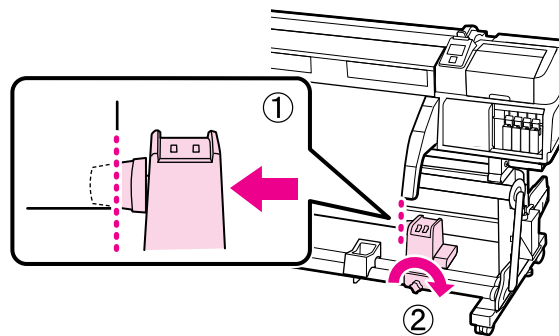


4. Cut the left and right corners of the media edges as shown below.

Cutting the media prevents feeding problems, such as the left and right corners of media being folded and caught at the start of take-up. This process also allows the media to stay centered on the core.

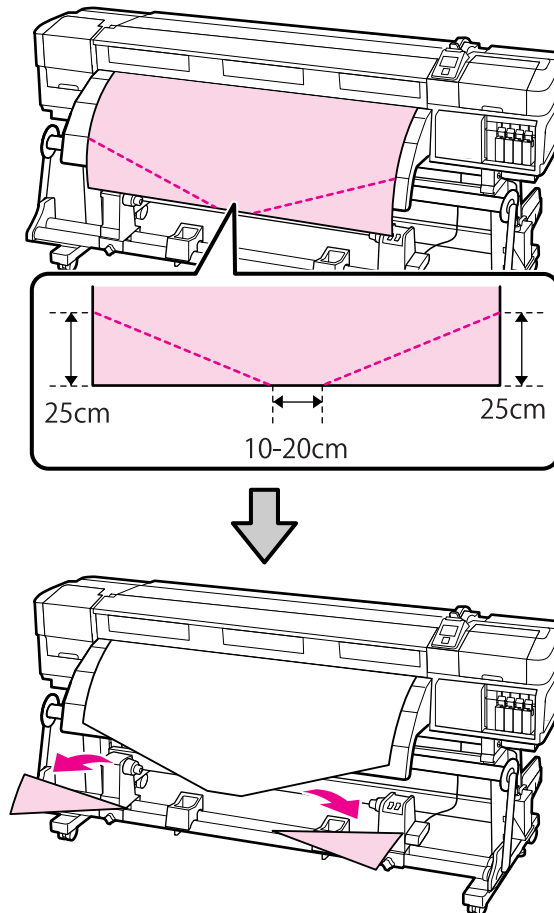


5. Insert the roll core onto the right holder.

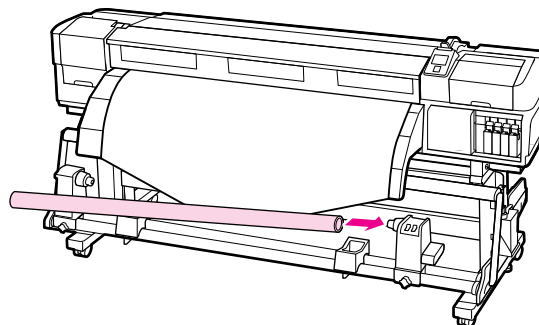

6. Insert the left holder into the roll core.


- ❑ When using the standard roll media system, push the holder until part A shown in the illustration below is fully inserted, and tighten the screw.

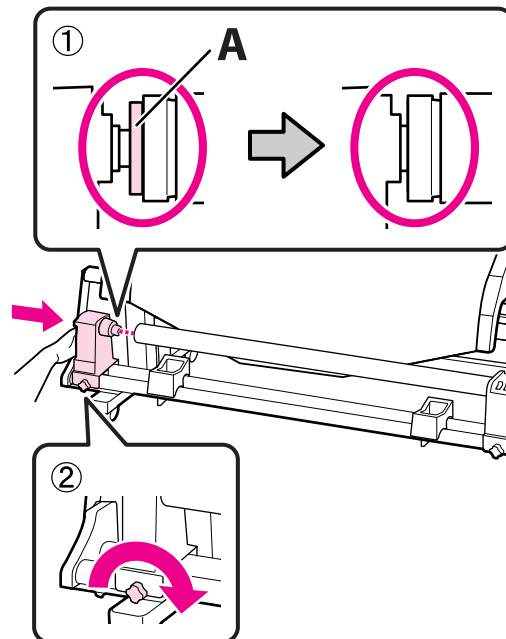

Important:

Stop when part A is no longer visible. The take-up reel unit may not function as expected if the holder is inserted too far.

- ❑ When using the optional heavy roll media system, securely push the roll core holder into the roll core using both hands, and then tighten the fixing screws. Rotate the handle until part A in the illustration below is fully inserted.

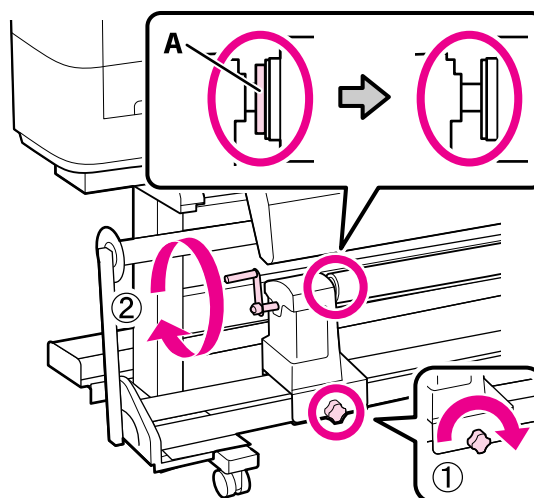


Important:

Once part A is hidden, do not turn the handle any further. Failure to observe this precaution could damage the roll core holder. If part A is still visible even after the handle has been turned fully, rewind the handle. Then loosen the left roll core holder fixing screw and reattach the roll core.


For the subsequent steps, see the next section or “Take up with the printed side facing in” on page 102.

Take up with the printed side facing out


1. Cut the paper tape approximately 60 cm (24 inches) in length, and paste it approximately in the center of the media using adhesive tape.

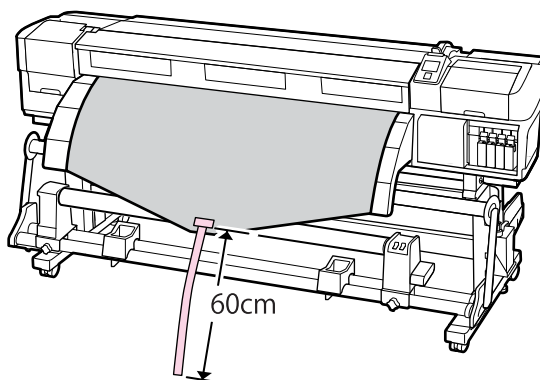

2. Hold down the ▲ button until the tip of the tape reaches the center of the pipe.

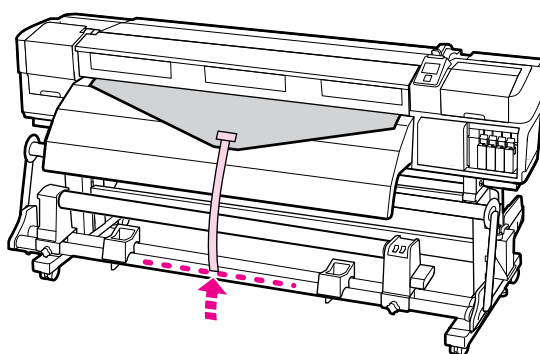


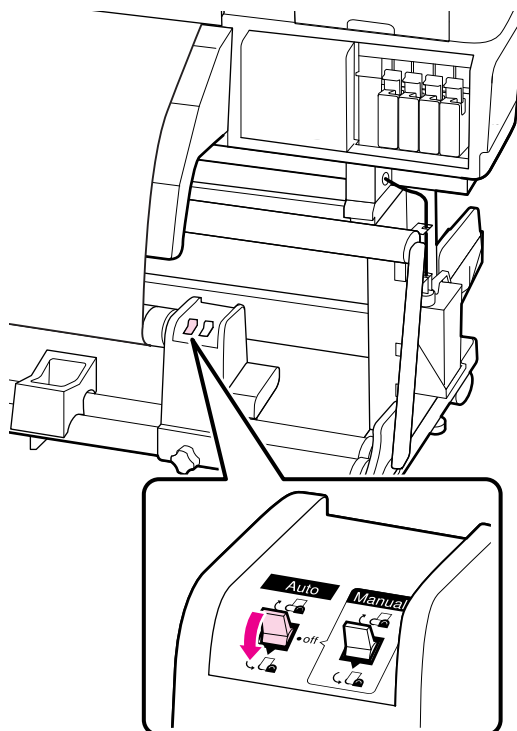
3. Turn the paper tape over from the front of the roll core, and stick using adhesive tape.

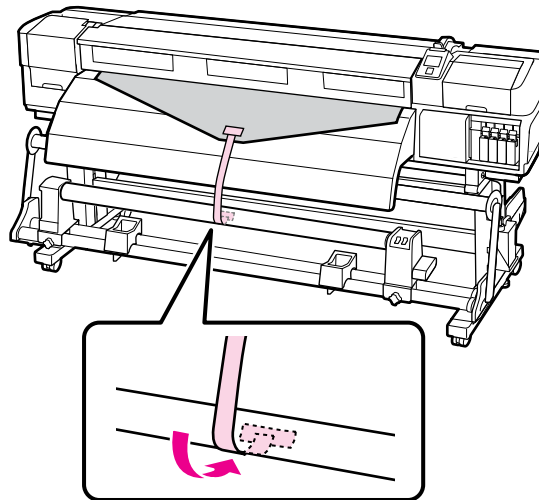


Important

Attach the media to the take up roll core with the media in a taut state. If media is loose, it may move around during take-up.


4. Flip the Auto switch to .




5. Lower the tensioner until it slightly touches the paper tape.

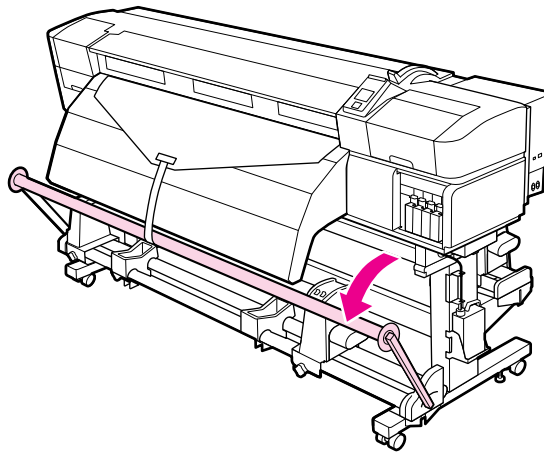


6. Continue holding down the ▼ button until both edges of the media reach the paper core and wrap around once or twice.

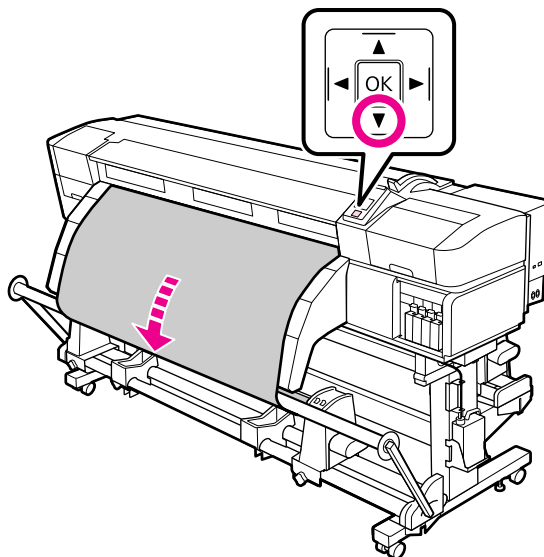

7. Position the right and left tensioner media guides until they slightly touch the media.

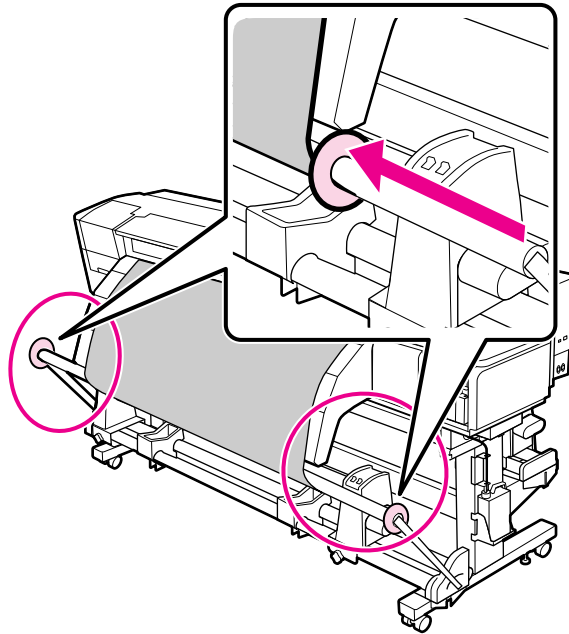


8. When loading banner media, attach three counter weights to both ends of the tensioners.

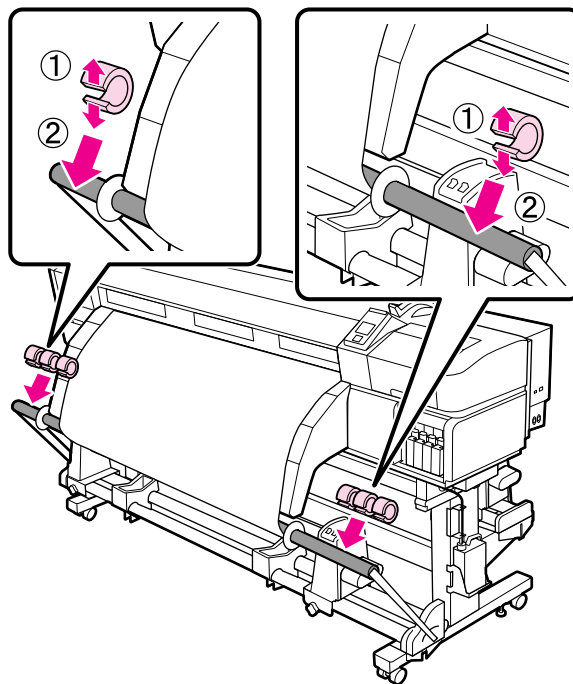

Important:

- ❑ Always attach three each on the left and right. Take-up will not be performed correctly if counterweights are added to one side only or the quantities are different on the left and right.

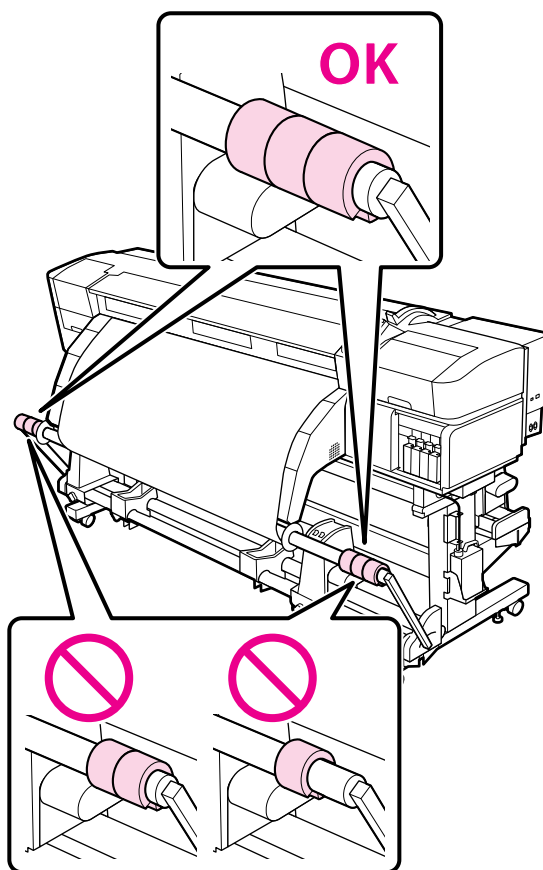


- ❑ For media other than banner media, always remove the counterweights before printing. Failure to do so may cause the print head to strike the media during printing.


To remove counterweights, open them in the same way as when attaching them.

Take up with the printed side facing in


1. Cut the paper tape approximately 60 cm (12 inches) in length, and paste it approximately in the center of the media using adhesive tape.

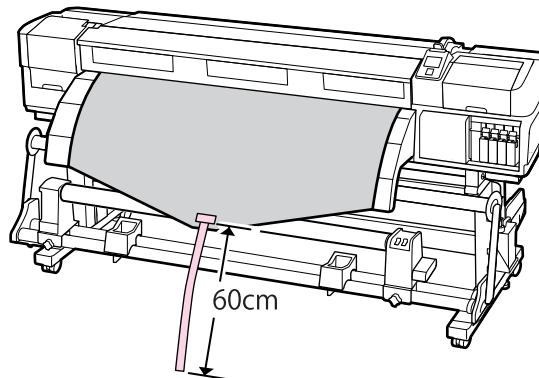

2. Hold down the ▲ button until the tip of the tape reaches the center of the pipe.

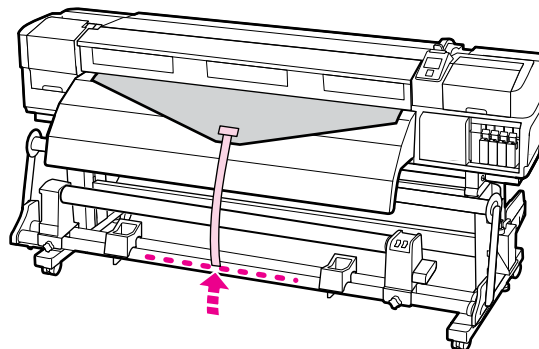



3. Turn the paper tape over from the front of the roll core, and stick using adhesive tape.

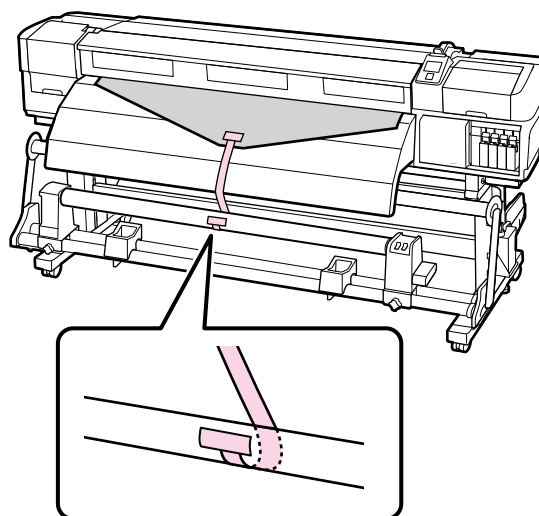


Important:

Attach the media to the take up roll core with the media in a taut state. If media is loose, it may move around during take-up.


4. Flip the Auto switch to .

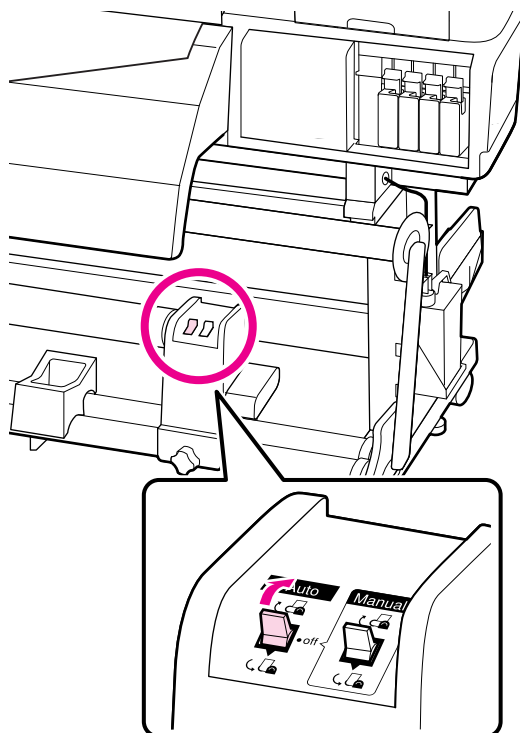


5. Lower the tensioner until it slightly touches the paper tape.

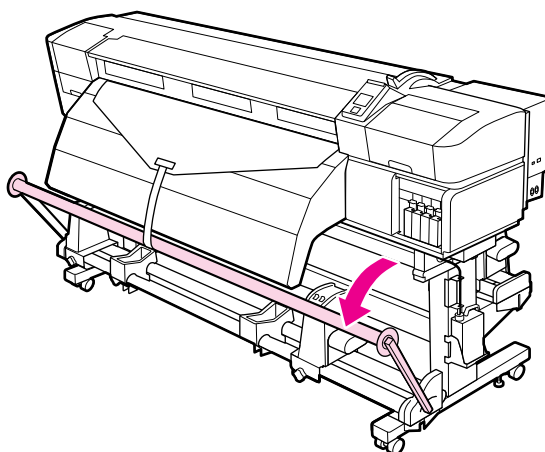


6. Continue holding down the ▼ button until both edges of the media have wrapped around once or twice.

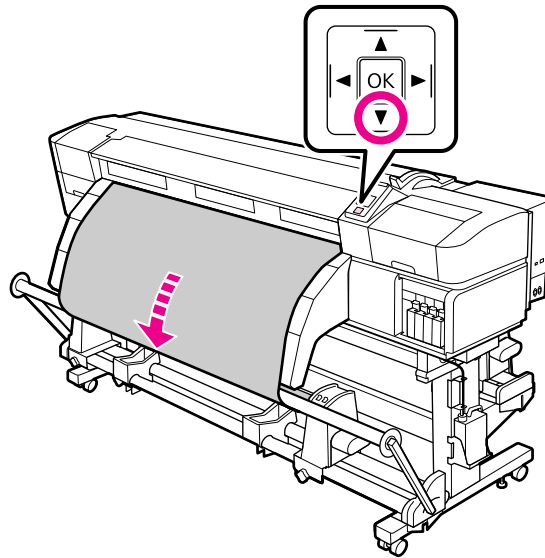

7. Position the right and left tensioner media guides until they slightly touch the media.

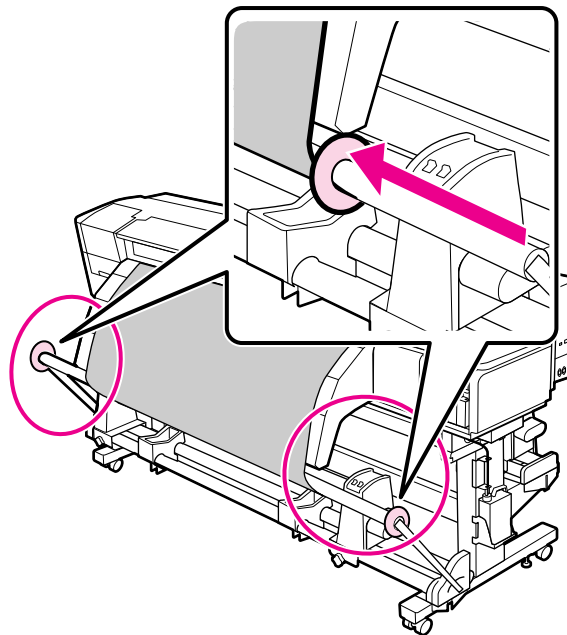


8. When loading banner media, attach three counter weights to both ends of the tensioners.

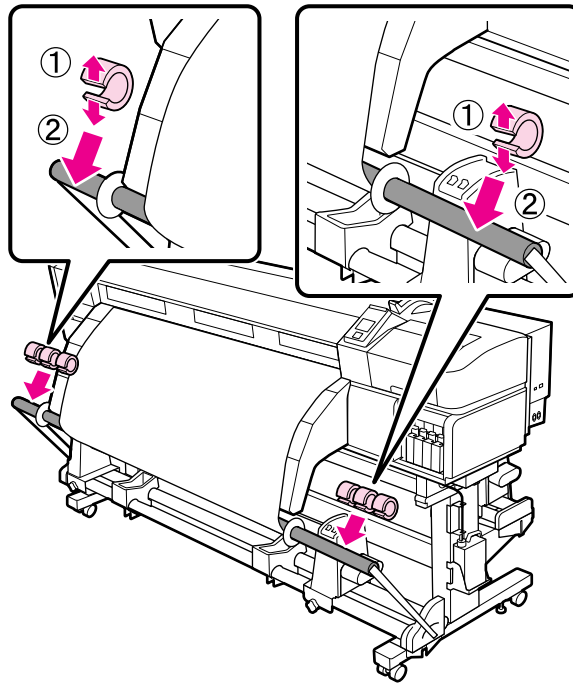

Important:

- ❑ Always attach three each on the left and right. Take-up will not be performed correctly if counterweights are added to one side only or the quantities are different on the left and right.

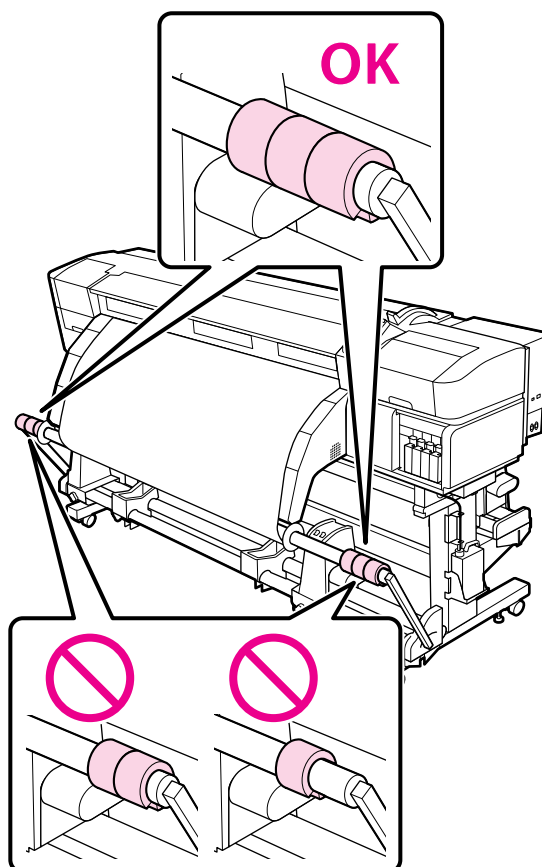

- ❑ For media other than banner media, always remove the counterweights before printing. Failure to do so may cause the print head to strike the media during printing.

To remove counterweights, open them in the same way as when attaching them.

Removing the Take-up Roll (Using the Standard Take-up Reel)

The procedure for removing media varies depending on whether you are using the supplied auto take-up reel unit or the optional auto take-up reel unit for heavy media.

Follow the steps below when using the supplied auto take-up reel unit.




Caution:

Because the media is heavy, it should not be carried by one person. When loading or removing the media, use at least two persons.


Follow the instructions in the manual when loading media or roll cores or removing media from the take-up roll.

Dropping media, roll cores, or take-up rolls could result in injury.

1. Cut the media and roll the cut end onto the take-up reel. See “Cutting media” on page 88.
2. To prevent the media from sliding off the roll, support the roll at its left end.
3. Loosen the left roll core holder fixing screw and remove the roll core holder from the roll.

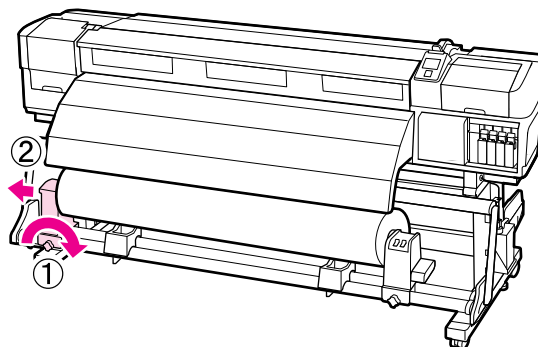


4. Lower the roll onto the roll support.

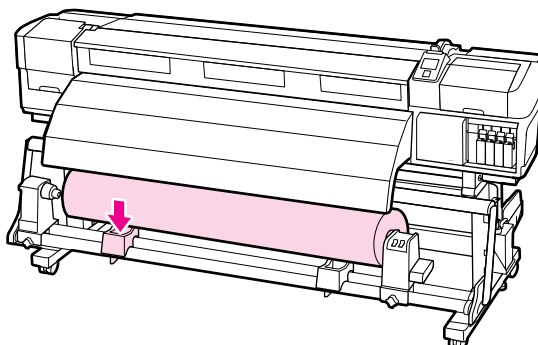


5. To prevent the media from sliding off the roll, support the roll at its right end.

6. Loosen the right roll core holder fixing screw and remove the roll core holder from the roll.

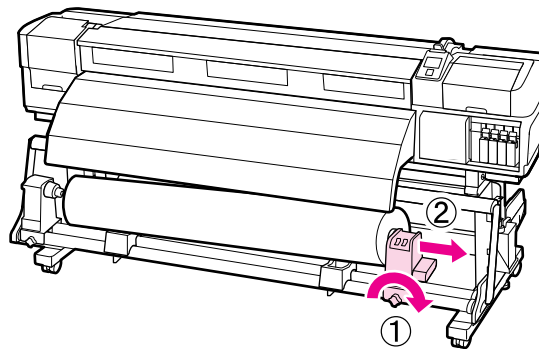

7. Lower the roll onto the roll support.

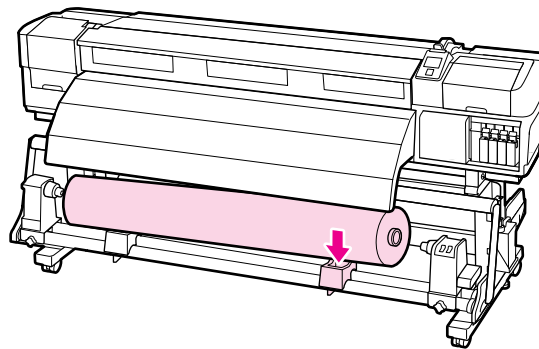

Removing the Take-up Roll (Using the Optional Heavy Roll Auto Take-up Reel)

This section explains how to remove media from the take-up reel using a lifter.

The following types of lifter can be used:

- ☐ Fork or platform thickness: 28 mm (1.1 inch) or less.
- ☐ Fork or platform can be lowered to approx. 190 mm (7.5 inches) from the floor.




Caution:

Because the media is heavy, it should not be carried by one person.


Using a lifter is recommended when handling media that is 40 kg (88 lb) or heavier.

Follow the instructions in the manual when loading media or roll cores or removing media from the take-up roll. Dropping media, roll cores, or take-up rolls could result in injury.


1. Cut the media and roll the cut end onto the take-up reel. See “Cutting media” on page 88.
2. Insert the lifter between the media and the auto take-up reel unit and adjust the height to support the take-up roll.

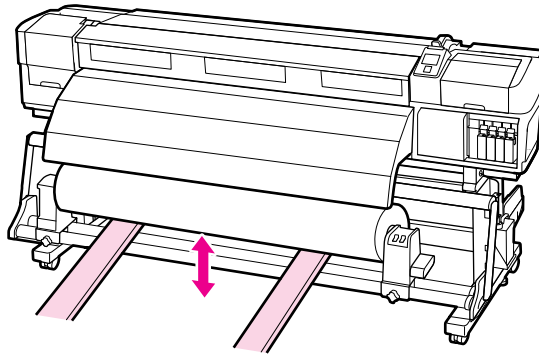

3. Loosen the left roll core holder fixing screw and remove the roll core holder from the roll.

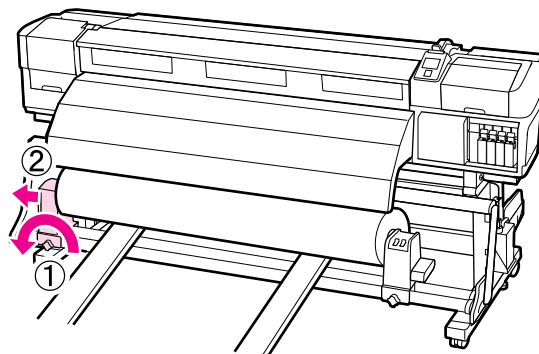

4. Loosen the right roll core holder fixing screw and remove the roll core holder from the roll.

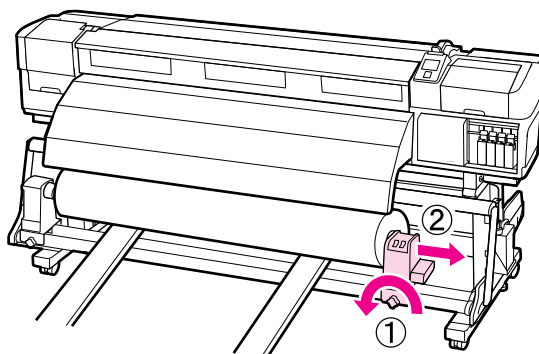

Before Printing

To maintain print quality, perform the following inspection before starting work each day.

- ☐ Check the amount of ink remaining.

If ink is expended during printing, printing can be resumed once the affected cartridge has been replaced. However, when replacing ink during a print job, you may see a difference in color depending on the drying conditions. If you know that the print job will be a large one, we recommend that you use new cartridges to replace those that are running low before you start. The old cartridges can be reinserted and used at a later date.

Ink level is shown by an icon. See “Understanding the Display” on page 22.

If you need to replace cartridges, see “Replacing and Shaking Ink Cartridges” on page 163.

- ☐ Shake spot color inks.

Spot color inks must be removed and shaken once every 24 hours. Although a message is displayed in the control panel 24 hours after the inks were last removed, we recommend that they be removed and shaken before the start of work.

See “Replacing and Shaking Ink Cartridges” on page 163.

- ☐ Print a check pattern.

Print a check pattern to check for clogged nozzles.

Perform head cleaning if parts of the pattern are faint or missing.

See “Checking for Clogged Nozzles” on page 181 and “Head Cleaning” on page 183.

Media Settings

Basic Setting Flow

To use new media, configure its settings in advance according to the media characteristics. Media setting banks store the following:

- ☐ Setting Name
- ☐ Platen Gap
- ☐ Auto Media Adjust
- ☐ Media Adjust
- ☐ Heating & Drying
- ☐ Advanced Settings (Media Suction, Media Tension, etc.)

During general use, follow the flow below to configure settings. However, for some types of media, you need to manually configure **Media Adjust** in Step (2) or change the values specified in **Advanced Settings**. See “Recommended Media Settings” on page 238 and “Customize Settings” on page 204.

Setting name > Auto Media Adjust (Feed Adjustment and Head Alignment) > Heating & Drying

If you have changed printing conditions after saving media settings, reconfigure media settings using **Media Adjust**. For details, see “Media Adjust” on page 116.

Precautions regarding settings

- ☐ Correctly load the media to be adjusted in the same state as for actual printing. For example, if you are using the auto take-up reel unit for printing, the auto take-up reel unit should also be used for adjustment. See “Loading and Exchanging Media” on page 38 and “Using the Auto Take-up Reel Unit” on page 92.
- ☐ Using curled, creased, waved, folded, or curved media may cause an adjustment failure. Cut off the curled, creased, waved, folded, or curved part, and load the media just before printing. See “Cutting media” on page 88.
- ☐ If the media has different widths even when the media type is the same, the media settings have to be reconfigured. Save media settings for each media width.


- ❑ When using the same type of media with different lots, you should reconfigure media settings.
- ❑ When using the S70675 or S50675, do not use the media part that has been fed and rewound for adjustment. Media that has been fed and then rewound may have traces or other issues from rollers and it may not be possible to adjust correctly.

Saving Media Settings

The printer offers a total of 30 media setting banks. Follow the steps below to save media settings.

Note:

The media settings saved in the printer can be changed using EPSON LFP Remote Panel 2. For details, see the EPSON LFP Remote Panel 2 help.

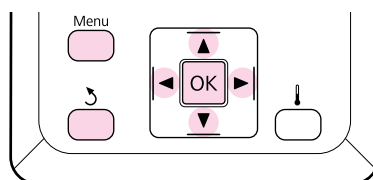

Choosing a Media Setting Bank

1. After confirming that the printer is ready, press the **Menu** button.

The settings menu will be displayed.

2. Select **Media Setup** and press the OK button.
3. Use the ▼/▲ buttons to select **Customize Settings** and press the OK button.
4. Use the ▼/▲ buttons to select the desired media number, and press the OK button.

If a number with existing settings is selected, the existing settings are overwritten.

Naming the Media Setting Bank

Using distinctive names makes it easier to select banks for use.

1. Select **Setting Name** and press the OK button.
2. Use the ▼/▲ buttons to display letters and symbols. When the desired character is displayed, press the ► button to select the next entry position.

Mistakes can be erased by pressing the ◀ button to delete the previous character and move the cursor back one spot.

3. After entering the name, press the OK button.

Auto Media Adjust

When this menu is executed, the printer automatically reads adjustment patterns using the sensor while printing the patterns, and continuously performs **Feed Adjustment** and **Head Alignment**.

Change the setting values of the following items before executing this menu:

☐ **Platen Gap**

☐ **Advanced Settings**

See “Customize Settings” on page 204.

Important:

- ☐ *In the following cases, **Auto Media Adjust** may not be executed. Take the appropriate action, and re-execute the job:*
 - ☐ *The printer is exposed to direct sunlight or interference from other ambient light sources. Shade the printer from sources of interference.*
 - ☐ *Nozzles are clogged. Perform **Head Cleaning** to remove any clogs.*
- ☐ *In the following cases, **Auto Media Adjust** is not available. In **Media Adjust**, execute the manual menu for each item.*
 - ☐ *The media is transparent or colored.*
 - ☐ ***Platen Gap** is set to 2.5.*
 - ☐ *After **Auto Media Adjust** is performed, banding or graininess is found.*

See “Media Adjust” on page 116.

The approximate maximum length of the media required to print the test pattern is given below. The amount of media used varies with the printer model and the media system used.

S70675, S50675

Standard roll media system	Approx. 987 mm
Heavy Roll Media System	Approx. 1116 mm

S30675

Standard roll media system	Approx. 1061 mm
Heavy Roll Media System	Approx. 1190 mm

1. Load the media according to the actual usage conditions.

When usage conditions change, the adjustment results will also change.

- ☐ When using the auto take-up reel unit, load the media in the printer, and attach it to the auto take-up reel unit. See “Loading and Exchanging Media” on page 38 and “Using the Auto Take-up Reel Unit” on page 92.
- ☐ When not using the auto take-up reel unit, pull the media straight forward until the edge has passed the label on the top side of the after heater. See “Loading and Exchanging Media” on page 38.

2. Use the ▼ or ▲ button to select **Auto Media Adjust**, and press the OK button.

This mode automatically performs pattern printing and adjustment.

When **Ready** is displayed on the control panel, adjustment is completed.

Heating & Drying

You can set the temperature of the heaters or turn the fan for the additional print drying system on or off (included with the S50675 and optional with other models). Heater status can be viewed on the control panel display. See “Understanding the Display” on page 22.

1. Use the ▼/▲ buttons to select **Heating & Drying** and press the OK button.
2. Use the ▼/▲ buttons to select the desired option and press the OK button.
3. Choose a value.

Heater Temperature

You can set the temperatures of the pre-heater, platen heater, and after heater.

Note:

Adjust standard heater temperatures as follows:

- ☐ *Set the heaters to the temperatures recommended in the documentation provided with the media, if available.*
- ☐ *Raise the temperature if the print results are blurred or smudged or the ink clots. Note, however, that raising the temperature too high can cause the media to shrink, wrinkle, or deteriorate.*

The time needed for the heaters to reach the specified temperatures varies with the ambient temperature.

- ☐ Use the ►/◄ buttons to select a heater. From left, the options are pre-heater, platen heater, and after heater.
- ☐ After selecting the desired heater, use the ▼/▲ buttons to choose the temperature.
- ☐ Select the desired option and press the OK button.

Additional Dryer

Note:

- ☐ *This menu is displayed only when the optional additional print drying system (supplied with the S50675; optional with other models) is installed.*
- ☐ *The default setting is **On**, and the drying fan turns on automatically when printing starts.*

- ☐ Use the ▼/▲ buttons to select **On** or **Off**.
 - ☐ Press the OK button.
4. Press the ⏮ button twice to return to the Customize Settings menu.
 5. Use the ▼/▲ buttons to choose a value.
 6. Select the desired option and press the OK button.

Media Adjust

This menu is used to adjust media when **Auto Media Adjust** cannot be used or when reconfiguring media settings is required due to a change in printing conditions after saving the media settings. In this menu, perform **Feed Adjustment** and **Head Alignment** individually.

- ☐ Media adjustment when **Auto Media Adjust** cannot be used

When you cannot adjust media using **Auto Media Adjust** or when banding or graininess is detected in printing results even after **Auto Media Adjust** has been performed, select **Feed Adjustment - Manual** and **Head Alignment - Standard (Manual)** to take appropriate actions.

- ☐ Media adjustment when changing printing conditions after saving media settings

After saving media settings, select **Feed Adjustment - Auto** in any of the following situations:

- ☐ The **Media Tension** or **Media Suction** setting has been changed in **Advanced Settings**
- ☐ Counterweights have been attached to or detached from the tensioner
- ☐ The standard media unit and the optional heavy roll media system have been switched
- ☐ The configuration of pressure rollers has been changed (S70675, S50675)

When **Platen Gap** has been changed, select **Head Alignment - Standard (Auto)** in this menu. However, if the setting value is changed to **2.5**, auto adjustment becomes unavailable. Perform **Standard (Manual)**.

Change the setting values of the following items before executing this menu:

- ☐ **Platen Gap**
- ☐ **Advanced Settings**

See “Customize Settings” on page 204.

Feed Adjustment

This menu is used when banding (horizontal banding, tint unevenness, or stripes) is detected in printing results.

This menu provides two modes: **Auto** and **Manual**.

- ☐ **Auto:** The printer reads adjustment patterns using the sensor while printing the patterns, and makes adjustment automatically.
- ☐ **Manual:** You need to visually check the printed adjustment patterns, and specify the optimal adjustment values. Use this if graininess or misalignment occurs when using Auto.

The approximate maximum length of the media required to print the test pattern is given below. The amount of media used varies with the printer model and the media system used.

S70675, S50675

	Auto	Manual
Standard roll media system	Approx. 987 mm	Approx. 1170 mm
Heavy Roll Media System	Approx. 1116 mm	Approx. 1170 mm

S30675

	Auto	Manual
Standard roll media system	Approx. 1061 mm	Approx. 1170 mm
Heavy Roll Media System	Approx. 1190 mm	Approx. 1170 mm

When making Feed Adjustments, see “Precautions regarding settings” on page 111.

1. Check that the printer is ready, and load the media according to the actual usage conditions.


When using the Auto Take-up Reel Unit, attach the media to the Auto Take-up Reel Unit. See “Loading and Exchanging Media” on page 38 and “Using the Auto Take-up Reel Unit” on page 92.

2. Press the **Menu** button to display the setup menu.
3. Use the ▼/▲ buttons to select **Media Setup**, and press the OK button.

4. Use the ▼/▲ buttons to select **Customize Settings** and press the OK button.
5. Use the ▼/▲ buttons to select the media number targeted for adjustment, and press the OK button.

If a number with existing settings is selected, the existing settings are overwritten.

6. Use the ▼/▲ buttons to select **Media Adjust**, and press the OK button.
7. Use the ▼/▲ buttons to select **Feed Adjustment**, and press the OK button.
8. Use the ▼/▲ buttons to select either one of the following modes, and press the OK button.
 - ☐ **Auto:** This mode automatically performs pattern printing and adjustment. When **Ready** is displayed on the screen of the control panel, adjustment is completed.
 - ☐ **Manual:** The adjustment pattern selection screen is displayed. Select the adjustment pattern to be printed, and press the OK button twice to proceed to Step 9. The longer the pattern is, the more accurate the adjustment becomes.
9. Measure the distance between the symbols “+” on the printed adjustment pattern using a ruler.

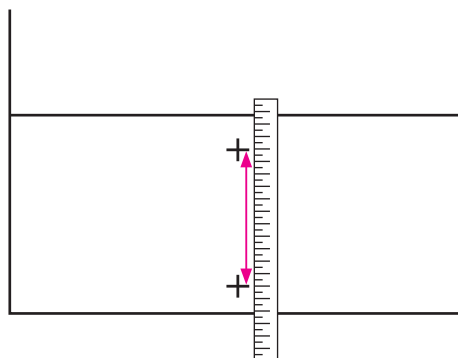

10. When the pattern length is displayed in the control panel, use the ►/◄ buttons to change the numeric value to the value obtained in Step 9, and press the OK button.

When the setting is completed, the printer returns to the **Ready** state.

Head Alignment

You can perform the following three types of adjustments from this menu.

- ☐ **Standard (Auto):** The printer reads adjustment patterns using the sensor while printing the patterns, and makes adjustments automatically.
- ☐ **Standard (Manual):** Visually check the printed adjustment patterns, and specify the optimal adjustment values. Use this if graininess or misalignment occurs when using Standard (Auto).
- ☐ **Block pattern:** Visually check the printed adjustment patterns, and specify the optimal adjustment values. Use this if graininess or misalignment occurs when using Standard (Manual).

Perform Manual(Uni-D) first and then Manual(Bi-D). For S70675 and S50675, you should perform Manual(Dual Head).

When making Feed Adjustments, see “Precautions regarding settings” on page 111.

1. Check that the printer is ready, and load the media according to the actual usage conditions.

When using the Auto Take-up Reel Unit, attach the media to the Auto Take-up Reel Unit. See “Loading and Exchanging Media” on page 38 and “Using the Auto Take-up Reel Unit” on page 92.

2. Press the **Menu** button to display the setup menu.
3. Use the ▼/▲ buttons to select **Media Setup**, and press the OK button.
4. Use the ▼/▲ buttons to select **Customize Settings** and press the OK button.
5. Use the ▼/▲ buttons to select the media number targeted for adjustment, and press the OK button.

If a number with existing settings is selected, the existing settings are overwritten.

6. Use the ▼/▲ buttons to select **Media Adjust**, and press the OK button.
7. Use the ▼/▲ buttons to select **Head Alignment** and press the OK button.

If **RIP Settings** is selected, enter the thickness of the media to be used, and press the OK button.


8. Use the ▼/▲ buttons to select either one of the following modes, and press the OK button.

- ☐ **Standard (Auto):** This mode automatically performs pattern printing and adjustment. When **Ready** is displayed on the control panel, adjustment is completed.
- ☐ **Standard (Manual):** Press the OK button to proceed to Step 9.
- ☐ **Block pattern:** The adjustment menu selection screen is displayed. Select any menu, and press the OK button twice to proceed to Step 9.


9. Check the printed adjustment pattern.

Select “2” in the cases shown below:

In **Standard (Manual)**

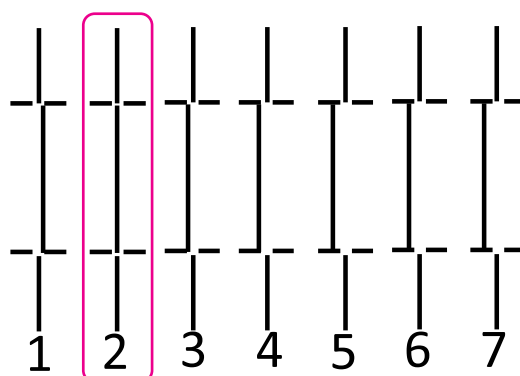

In **Block pattern**

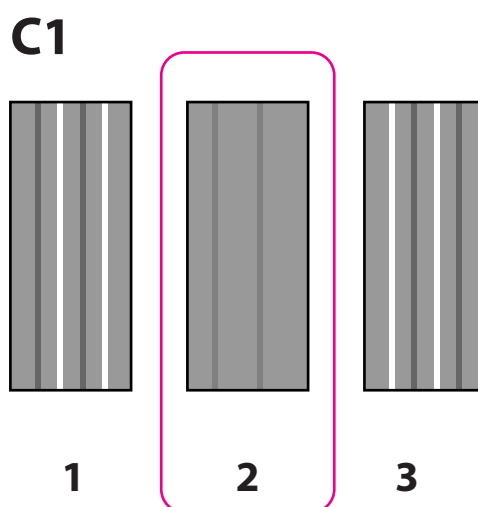

10. When the screen to enter a numeric value is displayed, use the ▲/▼ buttons to enter the pattern number recorded in Step 9 and press the OK button.


11. When multiple check patterns have been printed, select the number per check pattern, and then press the OK button.

The media setup menu will be displayed when you enter the pattern number for the last color.

Changing Settings During Printing

Heating & Drying and **Feed Adjustment** can be changed during printing using the procedures shown below.

Heating & Drying

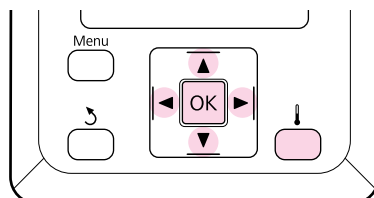

1. Press the  button during printing.

The **Heating & Drying** menu is displayed.

2. Use the ▼/▲ buttons to select the desired option and press the OK button.
3. Choose a value.


Heater Temperature

Use the ►/◄ buttons to select a heater. From left, the options are pre-heater, platen heater, and after heater.

After selecting the desired heater, use the ▼/▲ buttons to choose the temperature.

Additional Dryer


Use the ▼/▲ buttons to select **On** or **Off**.

4. Pressing the OK button updates the currently selected media settings.
5. Press the  button twice to return to the customize settings menu.

Note:



The time needed for the heaters to reach the specified temperatures varies with the ambient temperature.

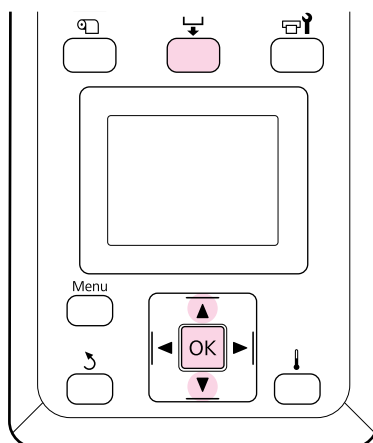Feed Adjustment





1. Press the  button during printing.

The current adjustment value is displayed.

2. Use the / buttons to change the current value.

If the feed amount is too small, black bands (dark stripes) will appear; adjust the feed amount upward.

If, in contrast, the feed amount is too large, white bands (pale stripes) will appear; adjust the feed amount downward.

3. Check the printing result. If you are not satisfied with the results, use the / buttons to change the value.


This updates the setting value of **Feed Adjustment** in the currently selected media settings.

4. Press the OK button to exit the menu.

Note:

If the setting is changed, the icon is displayed on the control panel screen as shown below. To clear this icon, carry out the following operations.

- ☐ Re-execute **Auto Media Adjust** or **Feed Adjustment**.
- ☐ Execute **Restore Settings**.

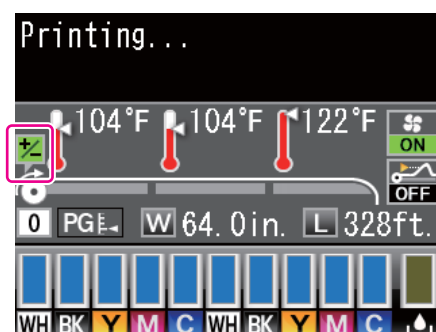

Printable area - S70675/S50675

The printable area depends on whether low or high pressure rollers are used to set the media.

Using Low Pressure Rollers

The gray area in the illustration below shows the printable area. The arrow indicates the feed direction. The letter "A" indicates the pressure rollers on both edges when the pressure rollers have been set correctly on the media.

The left and right edges of media recognized by the printer varies according to the Media Size Check settings.

On The printer automatically detects the left and right edges of the loaded media.

When media holding plates are attached, within 5 mm (0.2 inches) of the left and right edges of the media is recognized as the media edge.

The edges of the media are not detected correctly if the media holding plates are not attached correctly.


See "Using the standard media feeding unit" on page 41 or "Using the optional heavy roll media feeding unit" on page 53

Off : 5 mm (0.2 inches) at the exterior from "A" is recognized as the edge of the media.

If the pressure rollers are not positioned correctly, printing may occur outside the left and right edges of the media.

Ink used outside the edges of the media will stain the inside of the printer.

See "Positioning the Pressure Rollers and Media (S70675, S50675)" on page 40.

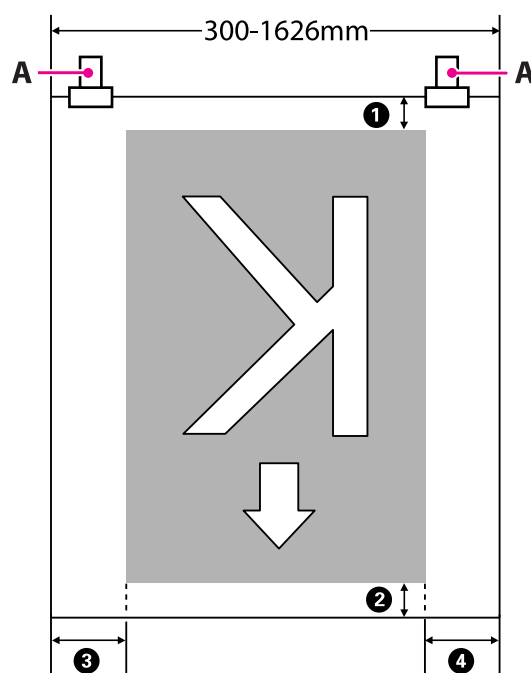


1 to 4 indicates the margins on all four sides.

Margin Position	Explanation	Available Setting Range
1 Bottom ¹	This can be configured in a RIP. If the settings are outside the available range, they are changed to 5 mm and 17 mm (0.2 to 0.7 inch) respectively to maintain media feeding accuracy.	5 to 17 mm (0.2 to 0.7 inch)
2 Top ¹	This can be configured in a RIP. Differs by the length the media was pulled when the media is loaded. For continuous printing, although the margins set in the RIP are added, if the setting is less than 5 mm (0.2 inch), it is changed to 5 mm to maintain media feeding accuracy.	5 mm (0.2 inch) or more
3 Left ^{2, 3}	The value selected for Side Margin(Left) in the printer's setup menu. The default setting is 5 mm (0.2 inch).	3 to 25 mm (0.1 to 1 inch)
4 Right ^{2, 3}	The total of the values selected for Print Start Position and Side Margin(Right) in the printer's setup menu. The default setting for Print Start Position is 0 mm and Side Margin(Right) is 5 mm (0.2 inch).	3 to 825 mm (0.1 to 32.5 inches)

- 1 The configured margin and the actual print results may differ depending on the RIP being used. Contact the RIP manufacturer for more information.
- 2 This may be available in the RIP depending on the software. Contact the RIP manufacturer for more information.
- 3 Note the following points when setting margins:
 Leave margins of 10 mm (0.4 inch) or more when using media holding plates. Narrower margins could result in the printer printing over the plates.
 If the total of the print data width and set left and right margins exceeds the printable area, a portion of the data will not be printed.

Using high pressure rollers

When high pressure rollers are used for transparent or white film or ink layering, the printable area is the area excluding the margins configured from the positioning of the pressure rollers. (See the gray area in the illustration below.) The arrow indicates the feed direction. The letter “A” indicates the position of the high pressure rollers.

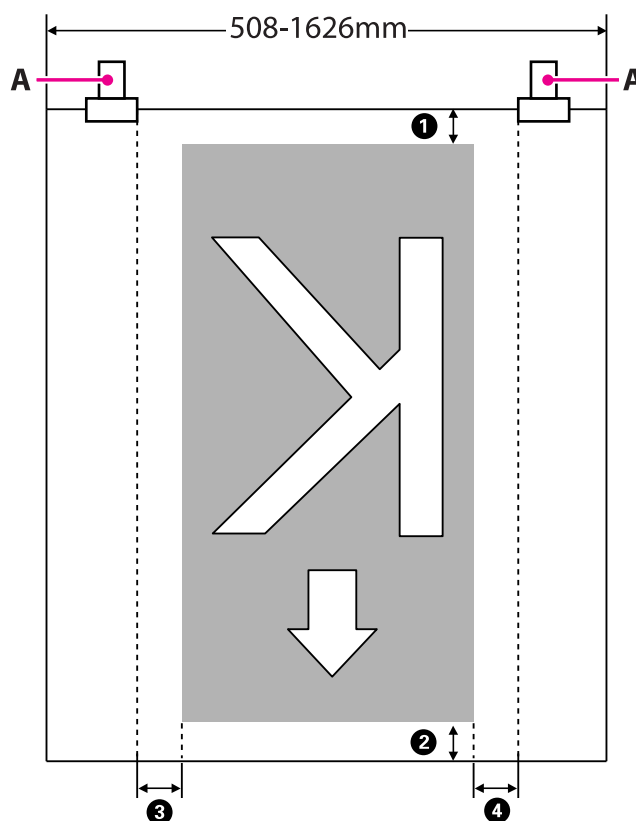

1 to 4 indicates the margins on all four sides.

Margin Position	Explanation	Available Setting Range
1 Bottom ¹	This can be configured in a RIP. If the settings are outside the available range, they are changed to 5 mm and 17 mm (0.2 to 0.7 inch) respectively to maintain media feeding accuracy.	5 to 17 mm (0.2 to 0.7 inch)
2 Top ¹	This can be configured in a RIP. Differs by the length the media was pulled when the media is loaded. For continuous printing, although the margins set in the RIP are added, if the setting is less than 5 mm (0.2 inch), it is changed to 5 mm to maintain media feeding accuracy.	5 mm (0.2 inch) or more
3 Left ^{2,3}	The value selected for Side Margin(Left) in the printer's setup menu. The default setting is 5 mm (0.2 inch).	3 to 25 mm (0.1 to 1 inch)
4 Right ^{2,3}	The total of the values selected for Print Start Position and Side Margin(Right) in the printer's setup menu. The default setting for Print Start Position is 0 mm and Side Margin(Right) is 5 mm (0.2 inch).	3 to 825 mm (0.1 to 32.5 inches)


- 1 The configured margin and the actual print results may differ depending on the RIP being used. Contact the RIP manufacturer for more information.
- 2 This may be available in the RIP depending on the software RIP being used. Contact the RIP manufacturer for more information.
- 3 Note the following points when setting margins:
Regardless of the Media Size Check setting, the margin start point is within "A" (indicated by the broken line).
If the total of the print data width and set left and right margins exceeds the printable area, a portion of the data will not be printed.


Printable Area - S30675

The gray area in the illustration below shows the printable area. The arrow indicates the feed direction.

The left and right edges of media recognized by the printer varies according to the Media Size Check settings.

- On** : The printer automatically detects the left and right edges of the loaded media.
- When media holding plates are attached, within 5 mm (0.2 inch) of the left and right edges of the media is recognized as the media edge.
- The edges of the media are not detected correctly if the media holding plates are not attached correctly.
- See "Using the standard media feeding unit" on page 41 or "Using the optional heavy roll media feeding unit" on page 53
- Off** : The longest scale on the after heater's label (in the illustration below) is used as the reference position for the right edge of the media. Regardless of the width of the loaded media, the left edge of the media is determined to be 1,626 mm (64 inches) from the reference position for the right edge.

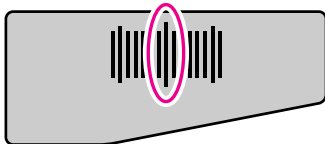

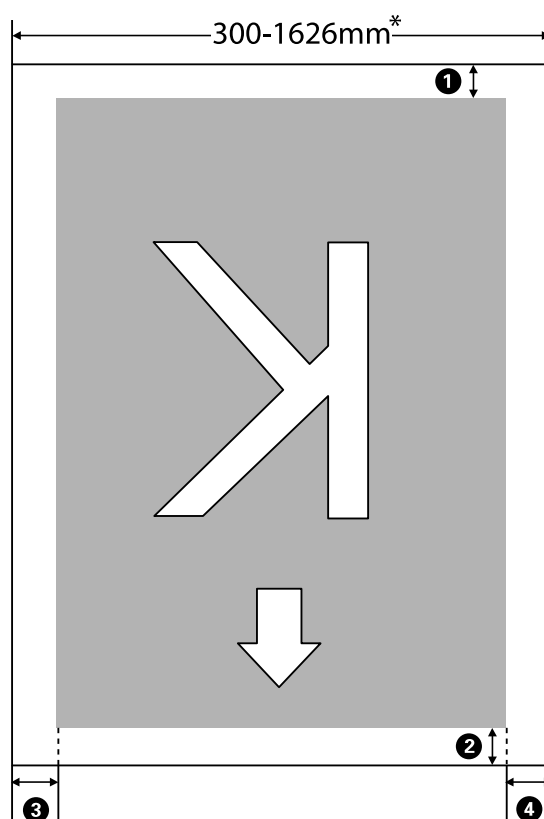

* When Media Size Check is set to **Off**, this is 1,626 mm (64 inches) regardless of the width of the loaded media.

1 to 4 indicates the margins on all four sides.

Margin Position	Explanation	Available Setting Range
1 Bottom ¹	This can be configured in a RIP. If the settings are outside the available range, they are changed to 5 mm and 17 mm (0.2 and 0.7 inch) respectively to maintain media feeding accuracy.	5 to 17 mm (0.2 to 0.7 inch)
2 Top ¹	This can be configured in a RIP. Differs by the length the media was pulled when the media is loaded. For continuous printing, although the margins set in the RIP are added, if the setting is less than 5 mm (0.2 inch), it is changed to 5 mm to maintain media feeding accuracy.	5 mm (0.2 inch) or more
3 Left ^{2,3}	The value selected for Side Margin(Left) in the printer's setup menu. The default setting is 5 mm (0.2 inch).	3 to 25 mm (0.1 to 1 inch)
4 Right ^{2,3}	The total of the values selected for Print Start Position and Side Margin(Right) in the printer's setup menu. The default setting for Print Start Position is 0 mm and Side Margin(Right) is 5 mm (0.2 inch).	3 to 825 mm (0.1 to 32.5 inches)

- 1 The configured margin and the actual print results may differ depending on the RIP being used. Contact the RIP manufacturer for more information.
- 2 This may be available in the RIP depending on the software RIP being used. Contact the RIP manufacturer for more information.

3 Note the following points when setting margins:

Leave margins of 10 mm (0.4 inch) or more when using media holding plates. Narrower margins could result in printer printing over the plates.

If the total of the print data width and set left and right margins exceeds the printable area, a portion of the data will not be printed.

Note:

*If the following points are not observed when Media Size Check is **Off**, printing may occur outside the left and right edges of the media. Ink used outside the edges of the media will stain the inside of the printer.*

- ☐ *Ensure that the print data width does not exceed the loaded media width.*
- ☐ *When media is loaded to the left of the right side reference position, align the **Print Start Position** setting with the position where the media is set. See “The Printer Setup Menu” on page 208.*

Chapter 3

Maintenance

It is necessary to perform proper maintenance at appropriate frequency to maintain print quality. Failure to perform appropriate maintenance will shorten product life. Read this section and perform maintenance appropriately.

This section comes with a check sheet so that you can tell at a glance when maintenance was last performed. Print the check sheet to help schedule maintenance.

See “Regular Cleaning Check Sheet” on page 162 and “Consumable Replacement Check Sheet” on page 180.

Cleaning Frequency

Clean the printer at the frequency listed on the following page. If cleaning is neglected, and the printer is used with ink stains, lint, and dust attached, the following trouble may occur.

- ☐ Ink drops from lint or dust on the nozzle surface of the print head.



- ☐ Clogged nozzles during printing.
- ☐ Nozzle clogs that cannot be cleared even after repeated head cleaning.
- ☐ Print head damage.

When to perform	Component to be cleaned
At least once a day If maintenance is not performed, ink hardens and is difficult to remove.	Around the print head See "Cleaning Around the Print Head (Daily)" on page 137. Around the caps (wiper (rubber part), caps, wiper cleaner, wiper rail) See "Cleaning Around the Caps (Daily)" on page 142.
Daily	Entire wiper and attachment point See "Cleaning the wiper (daily)" on page 142.
Daily	Inside (Platen heater, pressure rollers, media holding plates, and left-side maintenance cover interior) See "Cleaning inside the S70675 and S50675" on page 156.
Daily	Flushing pad See "Replacing the Flushing Pad" on page 172.

Replacing Consumables Frequency

Replace consumables at the frequency listed below.

When to perform	Component to be replaced
If an ink low warning is displayed on the control panel display, we recommend replacing the ink cartridge(s) as soon as possible.	Ink cartridges See "Replacement procedure" on page 163.
When a prepare and replacement message is displayed on the control panel screen	Waste ink bottle See "Disposing of Waste Ink" on page 166.
Once every three months	Wiper, wiper cleaner Be sure to replace the wiper and the wiper cleaner at the same time. These should also be replaced if ink adheres to the absorbent section on the rear of the wiper cleaner, or when the wiper section is worn or deteriorated. See "Replacing the Wiper and Wiper Cleaner" on page 168. Flushing pad This should also be replaced if you are unable to remove lint or dust even after cleaning, or when ink stains appear on the media. See "Replacing the Flushing Pad" on page 172.
When the plates are deformed or damaged	Media holding plates See "Replacing the Media Holding Plates" on page 174.

Other Maintenance Frequency

When to perform	Procedure
When the following message is displayed on the control panel (displayed once every 24 hours): Remove and shake (MS/)/WH ink cartridges.	Shaking ink cartridges (spot color) See "Shaking cartridges" on page 163.
Daily (no message is displayed)	Shaking ink cartridges (except for spot color) See "Shaking cartridges" on page 163.
When checking if nozzles are clogged When checking which colors are clogged When horizontal stripes or tint unevenness (banding) appear	Print a check pattern and check which color nozzles are missing. "Checking for Clogged Nozzles" on page 181. If no nozzles are clogged, see "Horizontal stripes or tint unevenness (banding)" in "Problem Solver" for other solutions. See "Horizontal lines or tint unevenness (banding)" on page 224.
When a clog is found after checking for clogged nozzles	Head cleaning See "Head Cleaning" on page 183.
If nozzle clogs cannot be cleared even after head cleaning or cleaning around the print head and caps	Head washing See "Head Washing" on page 186.
When tint unevenness (areas of uneven density) is detected in printing results	Ink refresh See "Ink Refresh" on page 188.
When the printer will not be used for an extended period (and switched off)	Pre-storage maintenance The storage period guideline varies with the model of printer used. See "Long-Term Storage (Pre-Storage Maintenance)" on page 189.
When spot color ink printing is not used for longer than a specified period of time When spot color ink printing is restarted	Changing color mode (S70675 only) The specified period guideline varies with the selected Colorant. See "Changing Color Mode (S70675 only)" on page 191.
When the following message is displayed on the control panel screen: Apply secondary carriage rod grease. See manual.	Applying secondary carriage rod grease See "Applying Secondary Carriage Rod Grease" on page 194.

Preparing for Cleaning

The following sections list the cleaning supplies you will need and describe how to use them.

What You'll Need

Ready the following items before beginning cleaning and replacement:


- ☐ Protective goggles (not included)

Protects your eyes from ink and ink cleaner.

- ☐ Mask (not included)

Protects your nose and mouth from ink and ink cleaner

- ☐ A maintenance kit (supplied with printer)

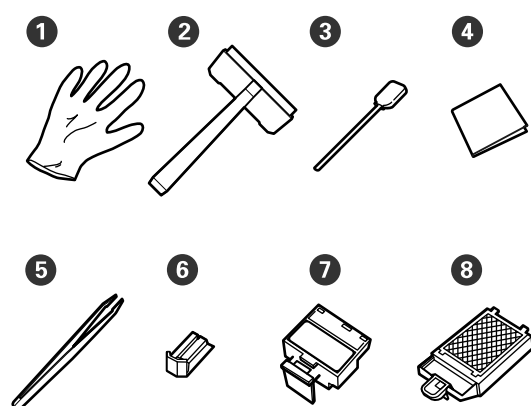

1	Glove	2
2	Cleaning wiper	1
3	Cleaning stick	50
4	Clean-room wipe	100
5	Tweezers	1
6	Wiper*	2 or 1
7	Wiper cleaner*	
8	Flushing pad*	

* The S70675 and S50675 provide two units for each item, and the S30675 provides one unit for each item.

- ☐ Ink cleaner (supplied with printer)

Use for ink stains. See “Using Ink Cleaner” on page 136.

- ☐ The metal tray that came with the printer

Used cleaning sticks and wiper, wiper cleaner, and flushing pads taken from the printer can be placed here.


Important:

If placed on the printer, used cleaning sticks and other cleaning materials may damage the printer.

- ☐ Soft cloth, brush (not included)

Use when cleaning inside the printer. Lint-free and static-free materials are recommended.

- ☐ Grease kit

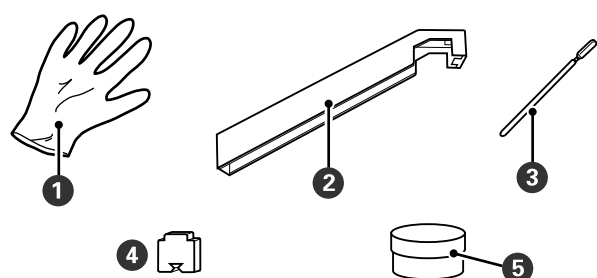

1	Glove	10
2	Grease tool	1
3	Cleaning stick	5
4	Pad	5
5	Secondary carriage rod grease	1

When maintenance supplies are used up, you can purchase replacements from Epson. See “Options and Consumable Products” on page 234.

Maintenance Precautions

Before handling ink cartridges, cleaning cartridges, ink cleaner, secondary carriage rod grease, or waste ink, read the Safety data sheet, available on the Epson website.



Caution:

- ❑ *Store ink cartridges, cleaning cartridges, ink cleaner, secondary carriage rod grease, or waste ink in a location out of reach of children.*

- ❑ *During maintenance, wear protective clothing, including protective eyewear, gloves, and a mask.*

Should fluid such as ink or waste ink contact your skin or enter your eyes or mouth, immediately take the following actions:

- ❑ *If fluid adheres to your skin, immediately wash it off using large volumes of soapy water. Consult a physician if the skin appears irritated or is discolored.*
- ❑ *If fluid enters your eyes, rinse immediately with water. Failure to observe this precaution could result in bloodshot eyes or mild inflammation. If problems persist, consult with a physician.*
- ❑ *If fluid enters your mouth, consult a physician immediately.*
- ❑ *If fluid is swallowed, do not force the person to vomit, and consult with a physician immediately. If the person is forced to vomit, fluid may get caught in the trachea which can be dangerous.*
- ❑ *After replacing the waste ink bottle or using the ink cleaner, wash your hands thoroughly.*

- ❑ Remove the media from the printer before proceeding.
- ❑ Complete the task within 10 minutes to prevent the print head drying out. An alarm will sound after 10 minutes.
- ❑ Never touch the belts, circuit boards, or any parts that do not require cleaning. Failure to observe this precaution could result in malfunction or reduced print quality.
- ❑ Use only the supplied cleaning sticks or sticks contained in maintenance kit. Other types of stick that produce lint will damage the print head.
- ❑ Always use fresh cleaning sticks. Re-using sticks can make stains even harder to remove.
- ❑ Do not touch the tips of the sticks. Oil from your hands could damage the print head.


- ❑ Do not get alcohol or water on the caps or the nozzle surface. Ink congeals when mixed with water or alcohol.
- ❑ Touch a metallic object before starting work to discharge any static electricity.

Moving the Print Head

This section describes how to position the print head for part cleaning.

Important:

Be sure to follow the steps below when positioning the print head. Moving the print head manually could cause malfunction.

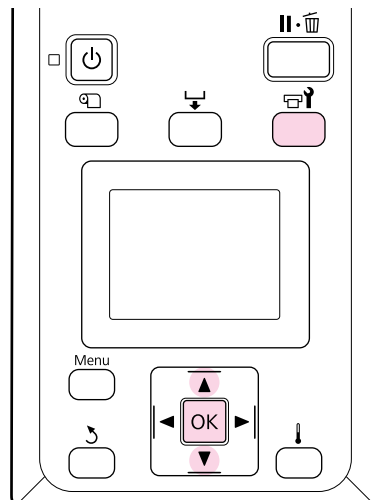

1. Confirm that the printer is ready and press .


The Maintenance menu is displayed.

2. Use the ▼/▲ buttons to select **Head Maintenance** and press the OK button.

The print head moves to the cleaning position.

Note:

The alarm sounds 10 minutes after the print head is moved (default setting). Press the OK button to continue the cleaning process. After 10 more minutes have passed, the alarm sounds again.

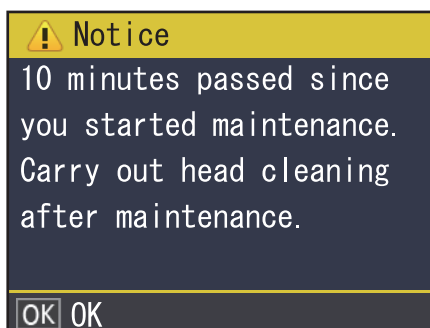


Using Ink Cleaner

Use ink cleaner to clean around the print head, around the caps, and the flushing pad only. Using ink cleaner on other parts of the printer could damage the product.


Before starting this procedure, be sure to read "Maintenance Precautions" on page 134.

1. Put the cup supplied with the ink cleaner on the metal tray and pour about 10 ml of ink cleaner into the cup.

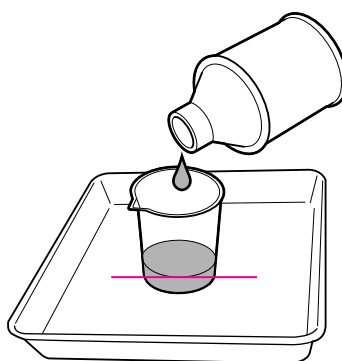

2. Dampen the cleaning stick with ink cleaner.

Do not allow ink cleaner to drip from the cleaning stick.

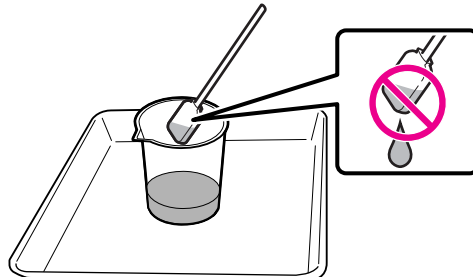

When dampening a clean-room wipe with ink cleaner, use cleaner poured into the cup.

Important:

- ☐ Do not reuse ink cleaner. Using dirty ink cleaner will make staining worse.
- ☐ Used ink cleaner, cleaning sticks, and clean room wipes are industrial waste and should be disposed of in the same way as used ink. See “Disposal of Used Consumables” on page 179.
- ☐ Store ink cleaner at room temperature out of direct sunlight.
- ☐ After using the ink cleaner, be sure to first close the inner cap and then the outer cap. Failure to securely close these caps may cause a leakage or volatilization of the ink cleaner.

Regular Cleaning

To preserve print quality and ensure good results, clean the print head, wiper, caps, and wiper rail as described in this section.


Cleaning Around the Print Head (Daily)

If you notice any ink clots, lint, or dust when checking the area around the print head, clean the area by following the steps below. The S70675 and S50675 printers have 2 print heads; make sure you clean both.

Before you start, be sure to read “Maintenance Precautions” on page 134.

1. Position the print head for maintenance. See “Moving the Print Head” on page 135.


2. After the print head moves to the left end of the printer, open the left maintenance cover.

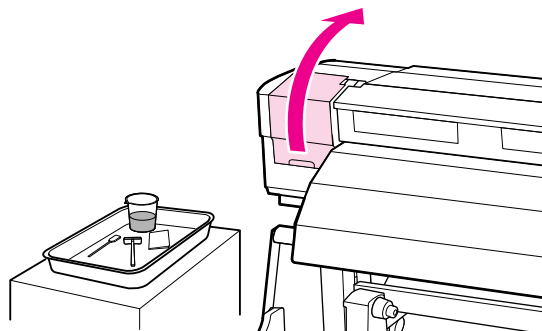

3. Dampen a new cleaning stick with the ink cleaner. See “Using Ink Cleaner” on page 136.


Important:

- ❑ Rinse the cleaning stick using ink cleaner for each step.
- ❑ After removing a clot of ink, wipe the cleaning stick using a clean-room wipe.

4. Wipe off any adhered ink, lint, and dust from the parts that are indicated by  below.


Important:

Do not touch the parts framed below. Failure to observe this precaution could affect print quality.

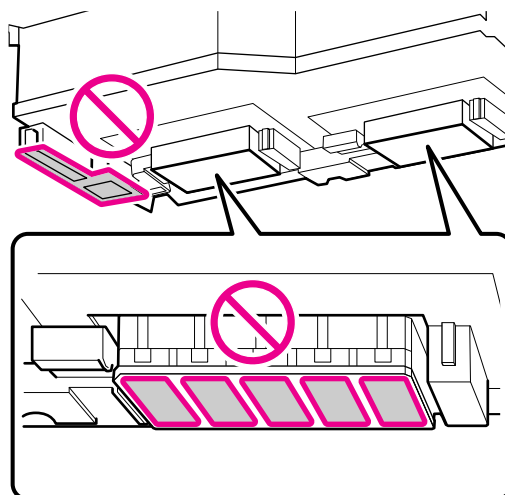


Right-hand print head on the S30675.

Right-hand print head on the S30675, S70675, and S50675:

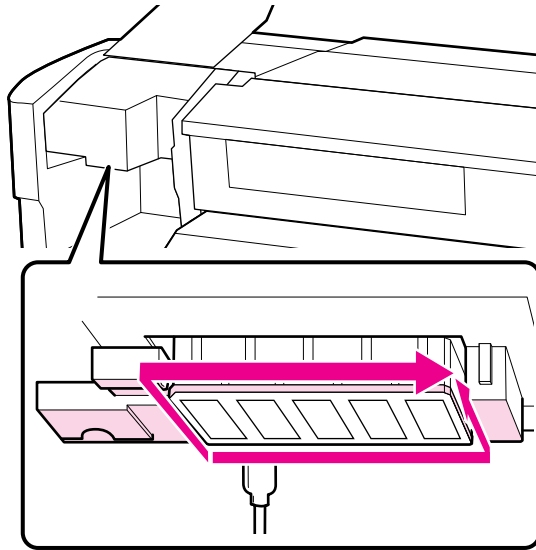

Left-hand print head on the S70675 and S50675:

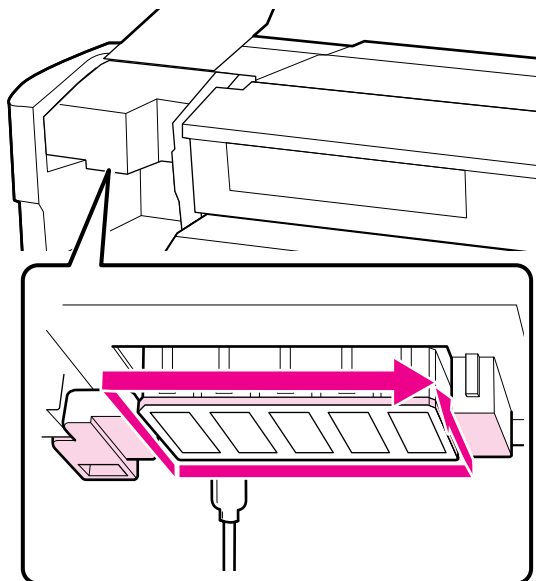


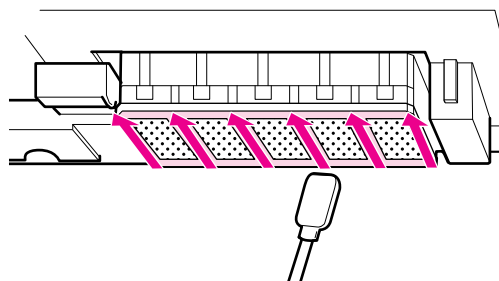
Ink tends to adhere to the areas indicated by the arrows, so be sure to wipe off any ink found.

If any lint or dust is caught, hook it using the tip of a cleaning stick.


5. Apply ink cleaner to the areas indicated by the arrows to dissolve adhered ink stains.

Important:


When applying ink cleaner, make sure you do not press too hard on the nozzles (parts indicated by  shown below). Also, make sure you move the cleaning stick in one direction; do not move it back and forth.



6. Dampen a new clean-room wipe with the ink cleaner, then wipe away any dust and dirt on the front, back, and sides of the wiper blade.

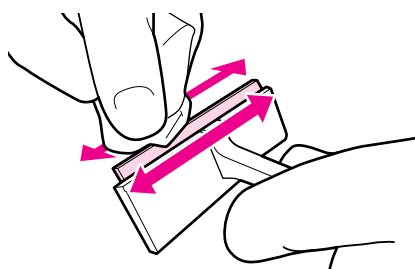


7. Wipe away ink stains and so on from the print head surface by moving the cleaning wiper from the inside toward you once.

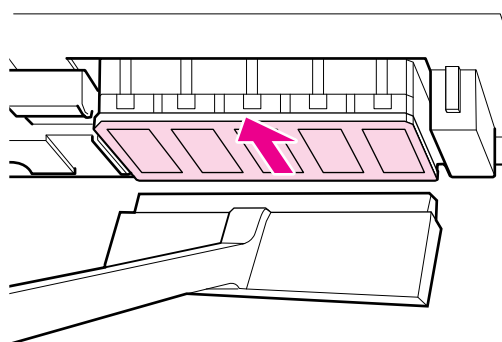


Important:

Do not move the cleaning wiper back and forth. Otherwise, the print head may be damaged.

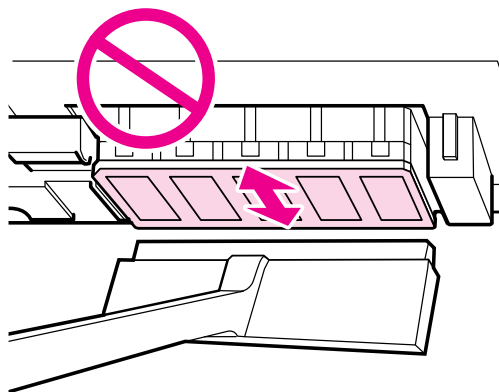

Before cleaning:

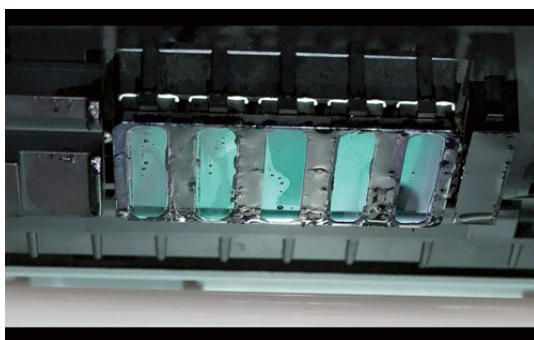

After cleaning:

Dried and adhered ink, lint, and dust are cleanly removed.



If any ink, lint, or dust remain, repeat steps 6 and 7.

Important:

If stains are wiped off while the surface of the print head remains dried, the print head may be damaged. If the surface is dried, return to Step 5 to apply ink cleaner.

8. Wipe stains off the cleaning wiper and store it in a location away from direct sunlight.
9. Close the left maintenance cover.

Next, clean around the caps.


Cleaning Around the Caps (Daily)

The following table shows the number of cleaning areas by printer model.

	S70675 S50675	S30675
Wiper	2	1
Cap	10	4
Wiper cleaner	2	1
Wiper rail	2 locations	1 location


Cleaning the wiper (daily)

1. Open the right maintenance cover.

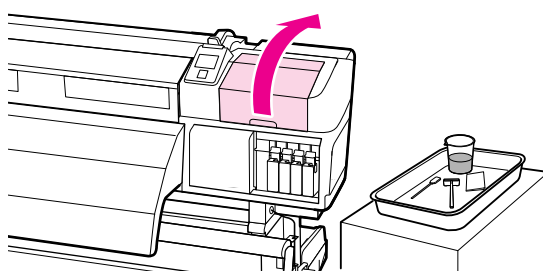

2. Dampen a new cleaning stick with ink cleaner. See “Using Ink Cleaner” on page 136.
3. Clean the front and back of the rubber on the wiper with a cleaning stick.

4. Clean the front and back of the rubber on the wiper with a cleaning stick. For S70675 and S50675, clean the other wipers in the same way.

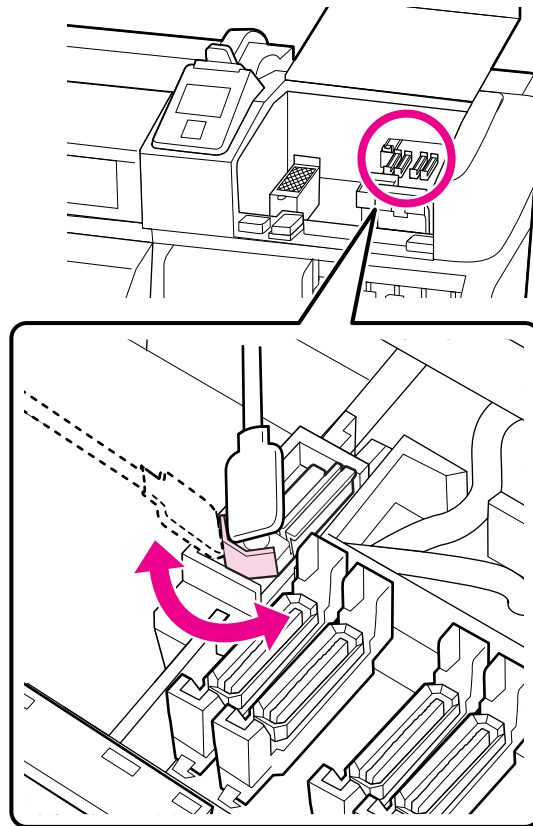


Next, proceed to the cap cleaning procedure.

Cleaning caps (daily)

For the S70675 and S50675, clean both of the caps.


Important:

Do not push strongly against the edges or the surrounding area of the cap, or touch the inner side of the cap with a cleaning stick or tweezers. The part may be deformed, and it may no longer be possible to perform capping correctly.

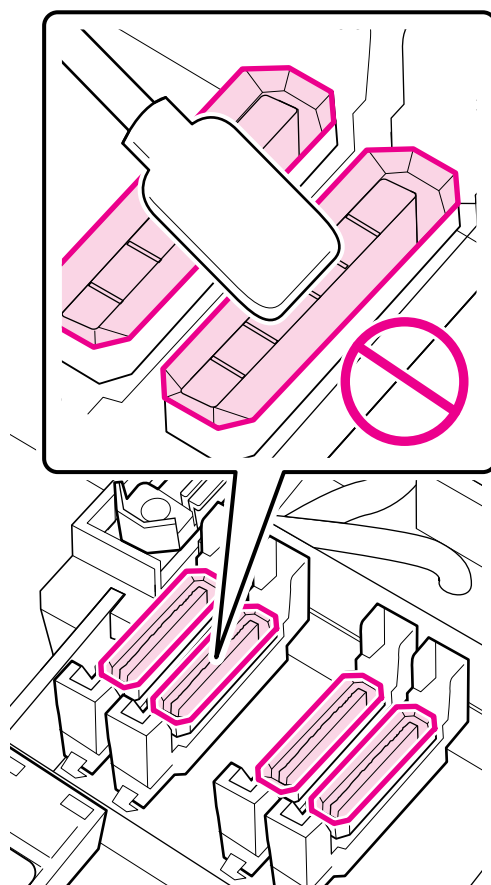


1. Dampen the cleaning stick with ink cleaner. See “Using Ink Cleaner” on page 136.

2. Hold the cleaning stick flat and wipe the edges of all the caps.

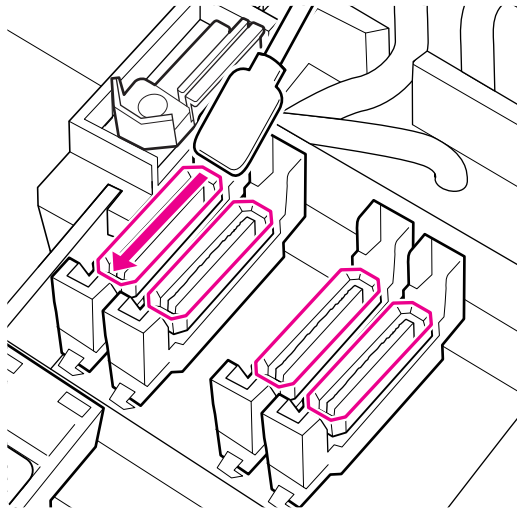

3. Hold the cleaning stick in a perpendicular orientation, and wipe the outer areas of all the caps.

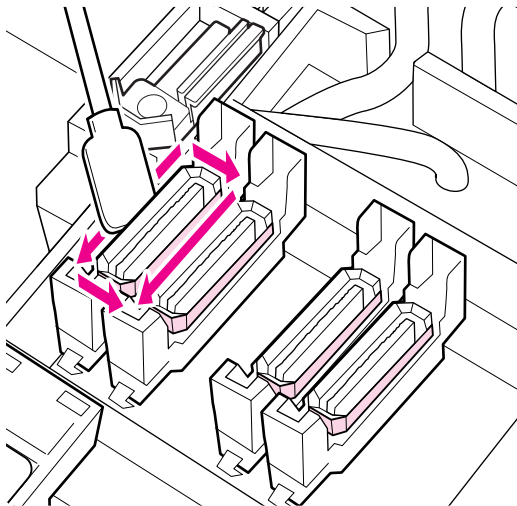

If ink adheres as a film to the guide section in front of and behind the caps, and lint adheres to the inside of the cap, see the next section.


If nothing adheres to the caps, proceed to “Cleaning the wiper cleaner and wiper rail (daily)” on page 148.

Additional cleaning around the caps (daily)

Perform the following procedures depending on the amount of dirt. When you have finished, proceed to “Cleaning the wiper cleaner and wiper rail (daily)” on page 148.


When ink adheres to the guide section

1. Dampen the cleaning stick with ink cleaner. See “Using Ink Cleaner” on page 136.
2. Apply ink cleaner to the guide section, and then wipe it down.

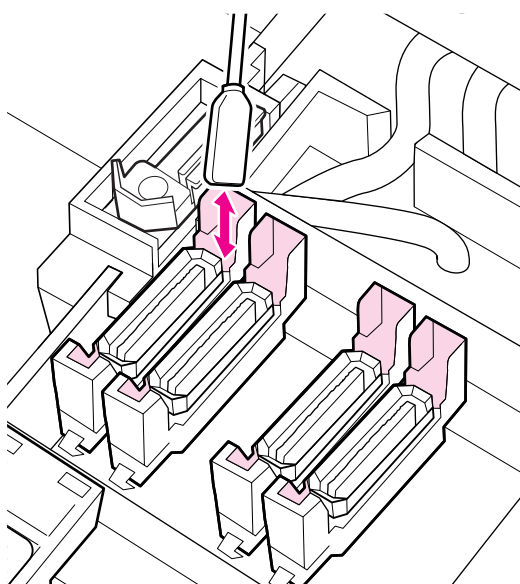


When a film of ink adheres to the guide section

If a film-like layer of adhered ink cannot be removed completely using a cleaning stick, remove it using tweezers.

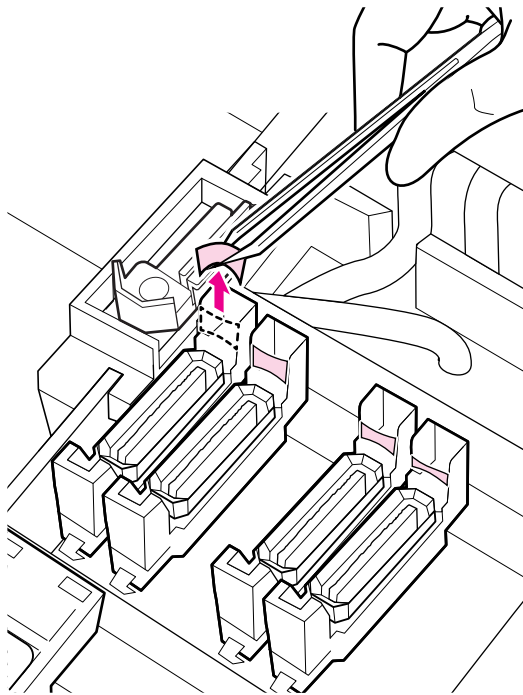

When there is lint or dust in the cap


Remove using the tip of the cleaning stick or tweezers.

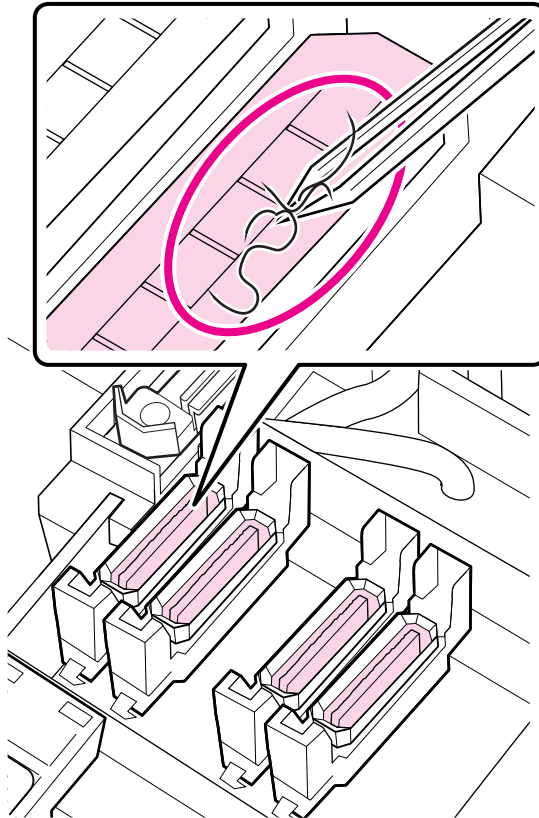

Cleaning the wiper cleaner and wiper rail (daily)

1. Press the OK button in the control panel and confirm that the wiper has moved to the back.

2. Grasp the wiper cleaner as shown and lift it from the printer.

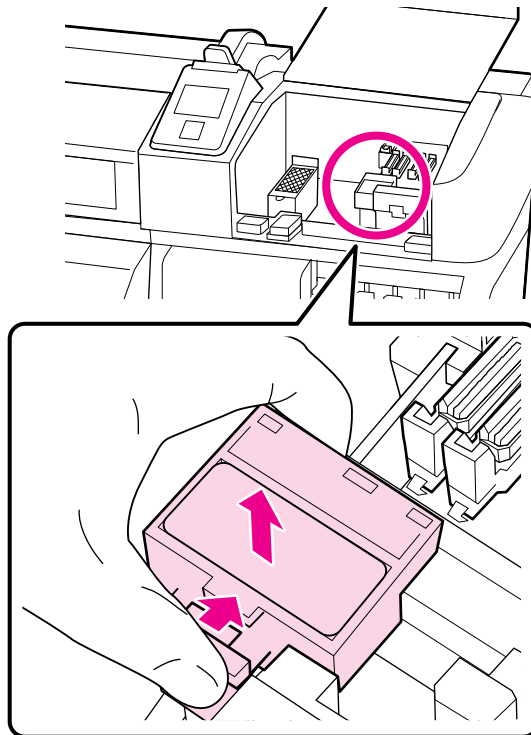


3. Place the wiper cleaner face down, and check that no lint or dust has attached to the rear side.

Otherwise, proceed to Step 5.

Attached ink does not present any problems, however, if a film of ink has adhered around the part circled in the photo below, you should replace the wiper cleaner with a new one. See “Replacing the Wiper and Wiper Cleaner” on page 168.




4. Remove lint or dust that has adhered to the bottom surface of the wiper cleaner using tweezers.

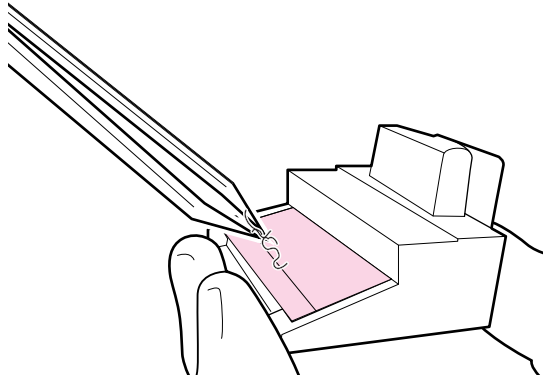


5. Dampen the cleaning stick with ink cleaner. See “Using Ink Cleaner” on page 136.
6. Wipe off any ink that has become attached to the top, right, and left sides of the wiper rail.

Top side:

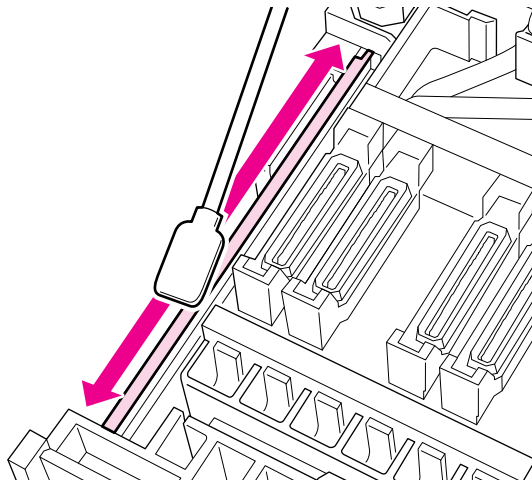


Right and left sides:

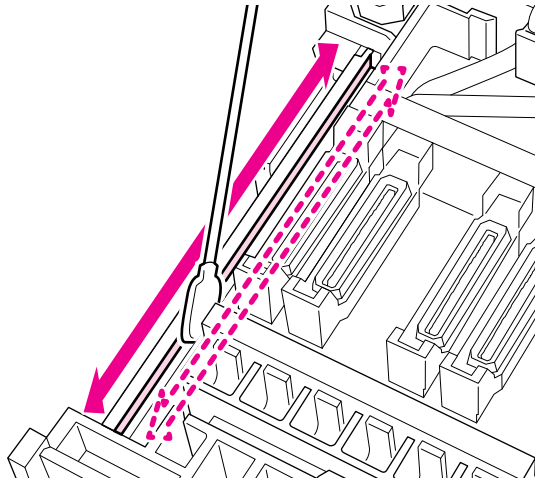

7. Attach the wiper cleaner.

Place the wiper cleaner on the attachment point and press down until you hear a click.

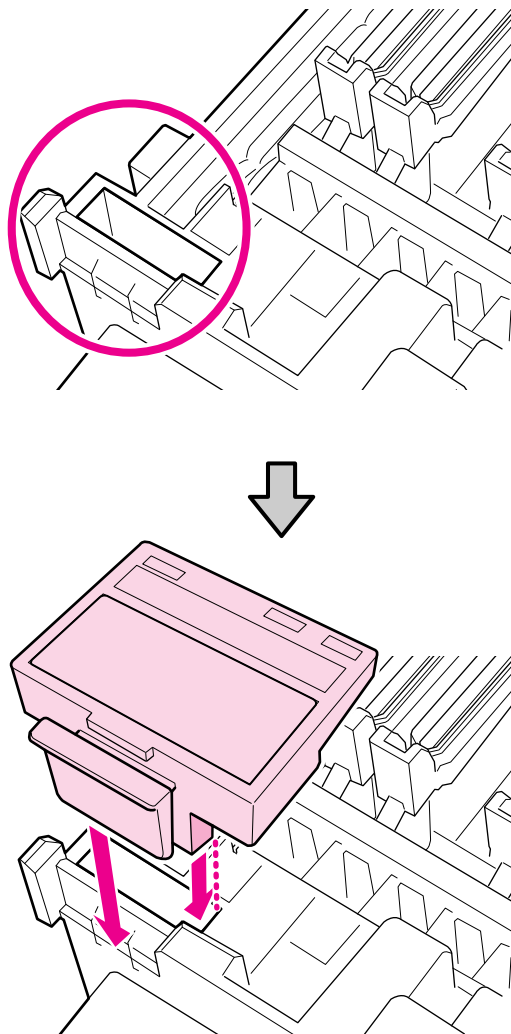

On the S70675 and S50675, clean the other wiper cleaner and wiper rail in the same way.

8. After cleaning, close the right maintenance cover and press the OK button. The menus will close when the print head returns to its normal position.


To continue printing, perform a **Nozzle Check**. See “Checking for Clogged Nozzles” on page 181.

To dispose of used ink cleaner, cleaning stick, and clean-room wipes, see “Disposal of Used Consumables” on page 179.


Cleaning the Entire Wiper and Attachment Point (Daily)

If the use of the printer continues while ink clots remain adhered to the bottom or an attached part of the wiper, it will cause the adhered ink to be spread around the caps, which results in nozzle clogs that cannot be cleared even after repeated head cleaning.

1. Open the right maintenance cover.

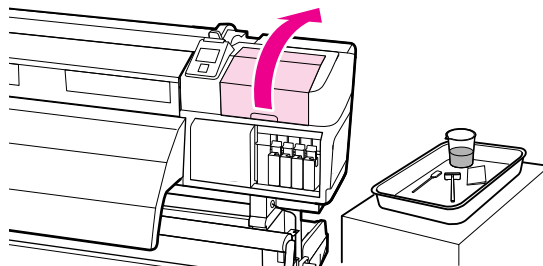


2. Holding the wiper by the attachment point, tilt it to the left and lift it out.

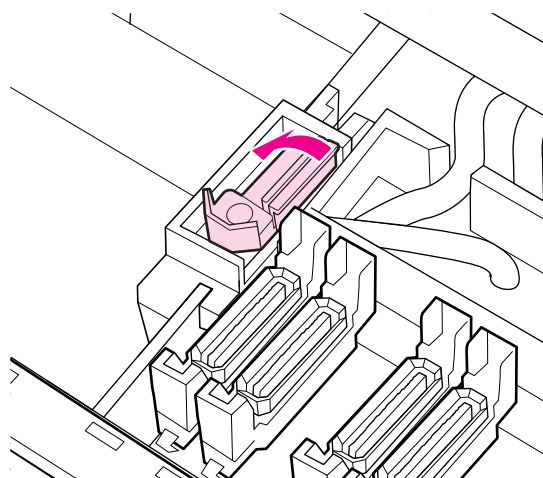


3. Dampen the clean-room wipe with ink cleaner. See “Using Ink Cleaner” on page 136.

4. Press the front and rear side of the rubber part of the wiper against the clean-room wiper, then wipe off any adhered ink clots, lint, and dust.

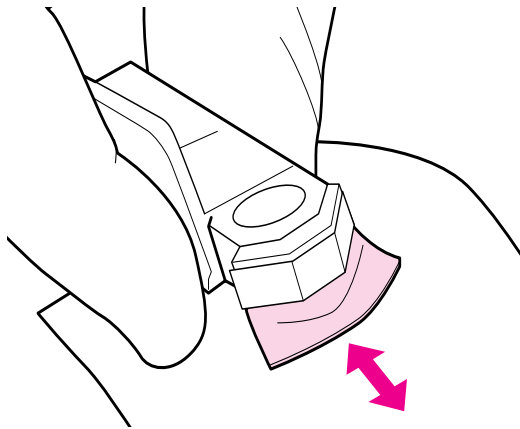


If the wiper part has split off or is broken, we recommend replacing it with a new one. See “Replacing the Wiper and Wiper Cleaner” on page 168.

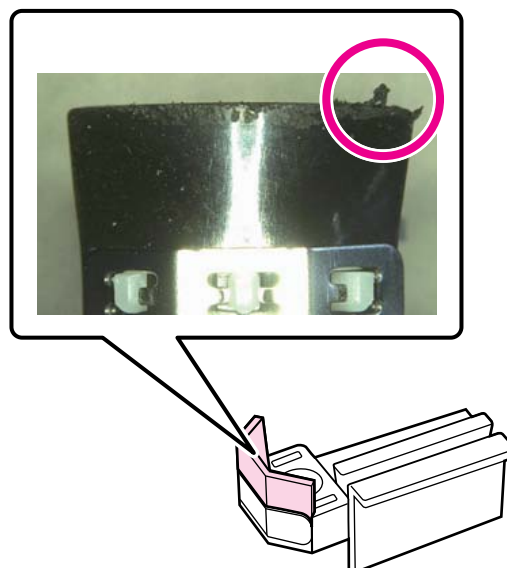


5. Dampen the cleaning stick with ink cleaner. See “Using Ink Cleaner” on page 136.


6. Using the cleaning stick, wipe off any ink that has hardened at the bottom of the wiper.

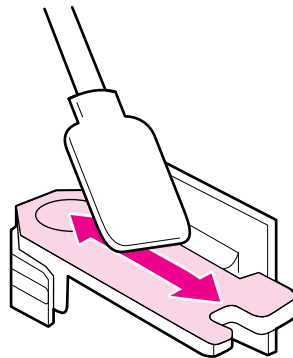

7. Wipe off any ink that has hardened at the wiper attachment point with the cleaning stick.

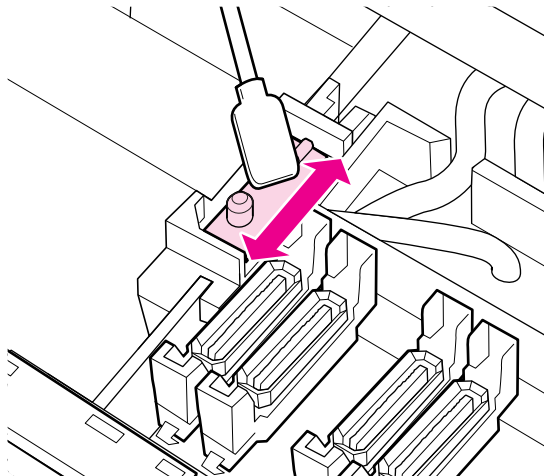

8. When you have finished cleaning, place the wiper on the attachment point and press it down until it clicks into place.

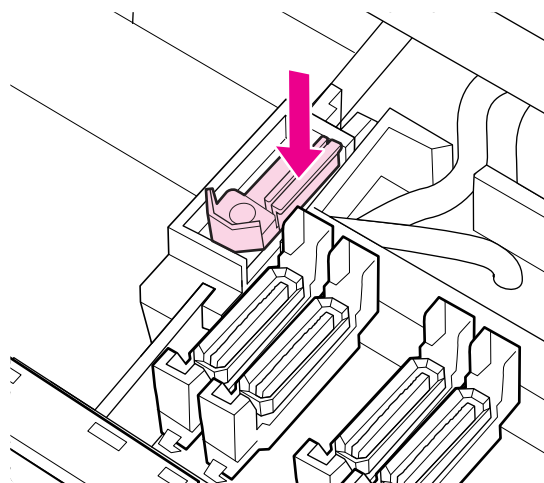

For the S70675 or S50675, repeat the process from Step 3 for the other wiper.

For the S70675 and S50675, clean the other wiper cleaner and wiper rail in the same manner.

Next, proceed to the cap cleaning procedure. See “Cleaning Around the Caps (Daily)” on page 142.

Cleaning Inside the Printer (Daily)

Lint, dust, and ink accumulate on the platen heater, pressure rollers, and media holding plates. Ink on these surfaces may be transferred to the media. Furthermore, if lint or dust is accumulated inside the left maintenance cover, it may adhere around the print head.



Caution:

- ☐ *The heaters and media holding plate may be hot; observe all necessary precautions. Failure to observe the necessary precautions could result in burns.*
- ☐ *Be careful not to trap your hands or fingers when opening or closing the front cover. Failure to observe this precaution could result in injury.*

Important:

When cleaning inside the printer, do not use ink cleaner. Failure to observe this precaution could result in damaged parts.


1. Make sure the printer is turned off and the screen has turned off, and then unplug the power cable from the outlet.
2. Leave the printer for a minute.
3. Open the front cover.
4. Raise the media loading lever.
5. Remove stains on the pressure rollers using a dry, soft cloth.

Cleaning inside the S70675 and S50675

Wipe while rotating the roller sections one by one.

Important:

Ensure the cloth does not touch the shaft above the rollers (gray area in the illustration) when wiping. Otherwise, grease will adhere to the cloth. If a stained cloth touches the roller, the roller is stained with grease.

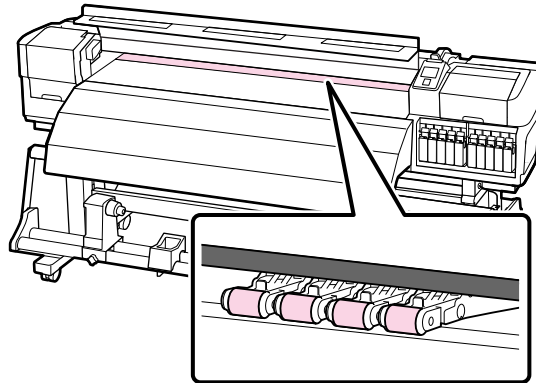


Cleaning inside the S30675

Slide a dry cloth between the pressure rollers and the platen and over the upper part of the pressure rollers to wipe the area.


Important:

Do not press strongly on the rollers when wiping. This may detach the rollers.

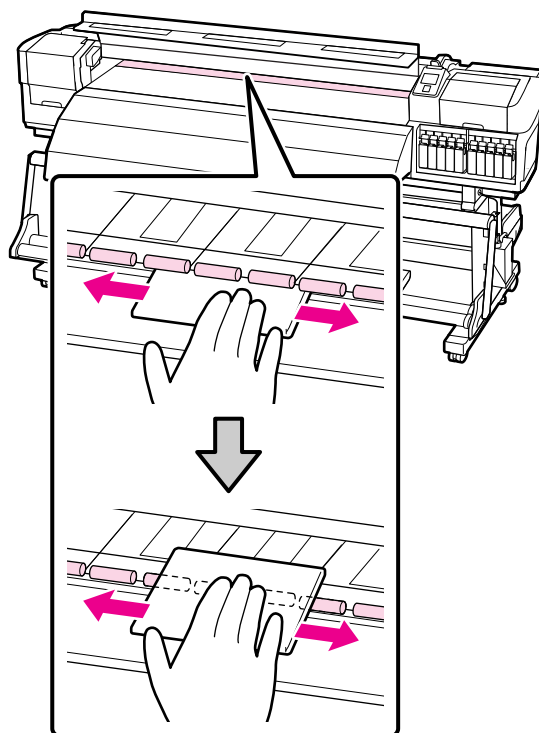

6. Wipe lint, dust, and adhered ink using a brush or soft cloth that has been soaked in water and squeezed out.

Carefully remove lint and dust stuck in the groove of the platen.

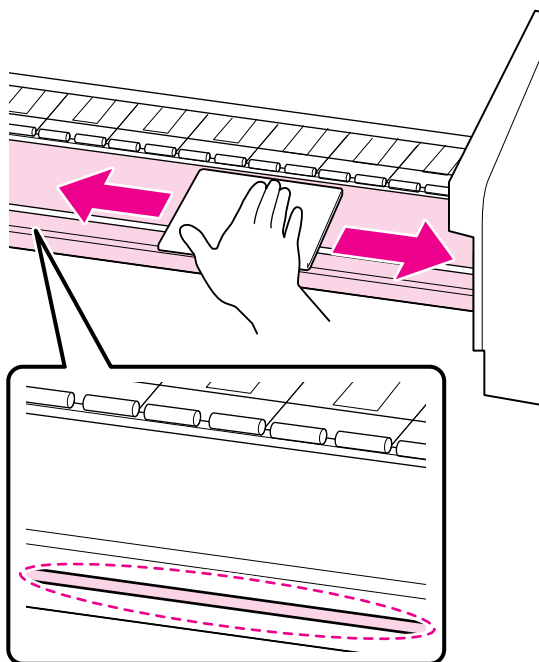

7. Wipe off the media holding plates using a soft cloth that has been soaked in water.


Important:

When media with glue has been used, wipe away glue using a diluted neutral detergent. If glue from the media adheres to the rear side of the plates, it may result in the print head striking during printing.

Normally, wipe off any lint and dust that has attached to the surface, without removing the media holding plates.


When self-adhesive media is used or ink has adhered to the surface of the media holding plates, remove the plates, and wipe stains off both the front and rear surfaces.

When stains are removed, be sure to attach the plates to their original positions. See “Replacing the Media Holding Plates” on page 174.

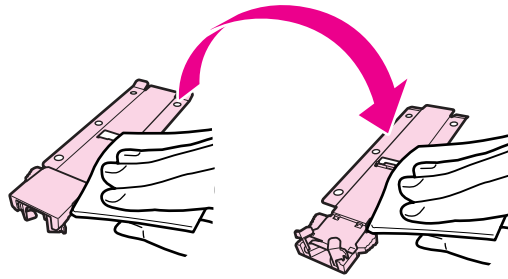

8. Open the left maintenance cover and clean inside.

Wipe lint and dust with a brush or soft cloth that has been soaked in water and squeezed well.

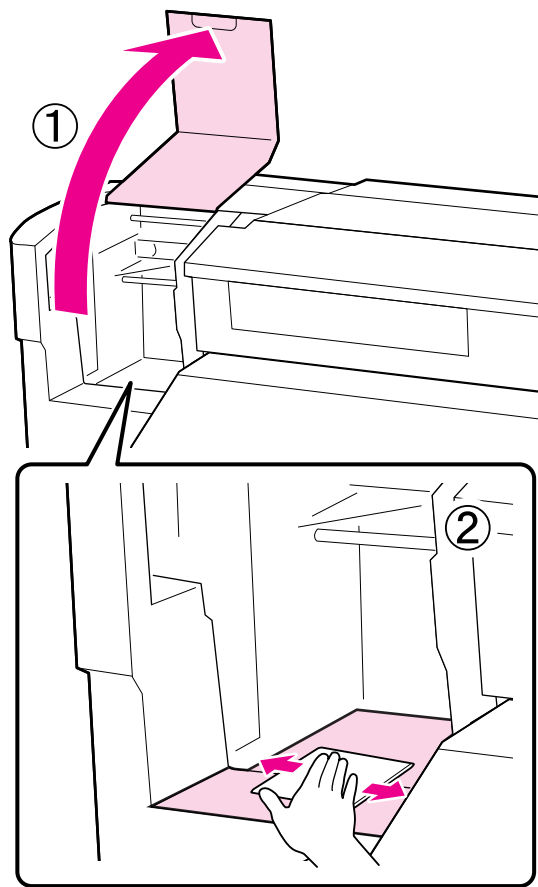


9. After cleaning, close the front cover and left maintenance cover.

Cleaning the Flushing Pad (Daily)

If lint or dust adhere to the surface of the flushing pad, it may contact the print head and clog nozzles. Use the following procedure for cleaning.

Before starting this procedure, be sure to read “Maintenance Precautions” on page 134.

1. Position the print head for maintenance. See “Moving the Print Head” on page 135.

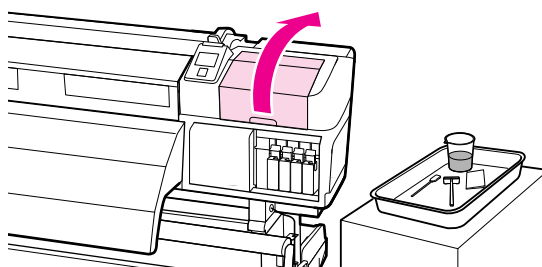


2. Dampen a new cleaning stick with ink cleaner. See “Using Ink Cleaner” on page 136.
3. Clean the top surface of the flushing pad.

Wipe lint and dust with the tip of a cleaning stick.

Important:

Do not deform the metal section of the top surface. Otherwise, it may damage the print head.

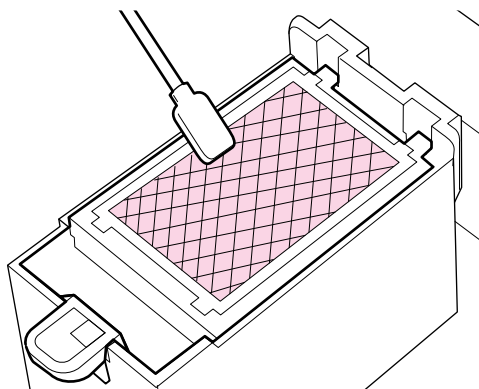

If the ink has solidified and lint and dust cannot be removed, we recommend exchanging the flushing pad with a new one. See “Replacing the Flushing Pad” on page 172.

4. Close the maintenance cover and press the OK button twice.


The menus will close when the print head returns to its normal position.

See “Disposal of Used Consumables” on page 179.


Cleaning the Sides of the Auto Take-up Reel Unit (Daily)

White powdered stains may have been created due to rubbing between the tensioner and side plate of the auto take-up reel unit. If stains are not removed, it causes a tensioner malfunction, and it may result in a take-up failure. If stains are found, clean the sides.


1. Raise the tensioner.

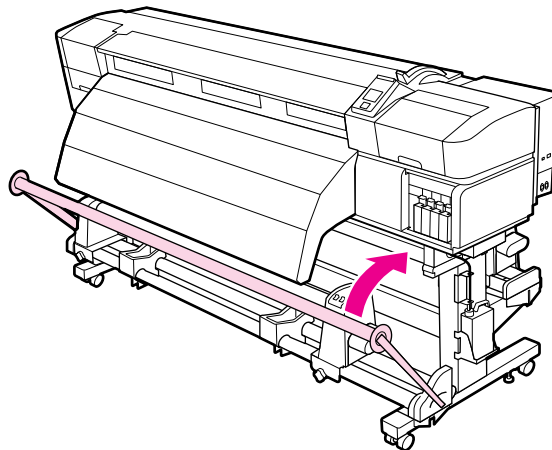

2. Wipe off any white powder that is in the area indicated by a broken line as shown below using a dry, soft cloth.

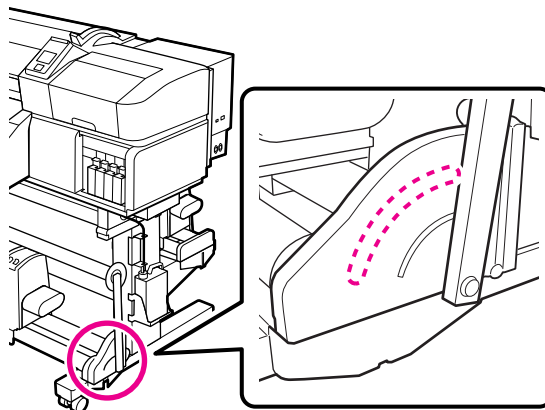

Regular Cleaning Check Sheet

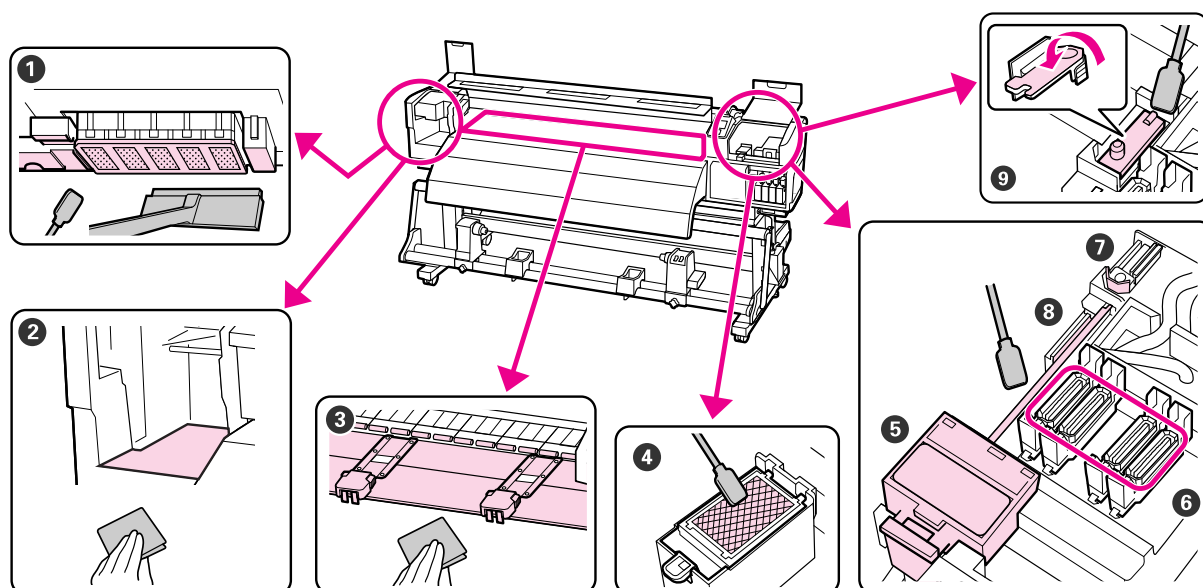

When to perform	Component to be cleaned	Cleaned on date				
Daily (at the end of every workday) If maintenance is not performed, ink hardens and is difficult to remove)	1. Around the Print Head See "Cleaning Around the Print Head (Daily)" on page 137.	/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
	5 to 8. Around caps See "Cleaning Around the Caps (Daily)" on page 142.	/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
Daily	9. Entire Wiper See "Cleaning the Entire Wiper and Attachment Point (Daily)" on page 152.	/	/	/	/	/
		/	/	/	/	/
Daily	2 to 3. Inside See "Cleaning Inside the Printer (Daily)" on page 155	/	/	/	/	/
		/	/	/	/	/
Daily	4. Flushing pad See "Cleaning the Flushing Pad (Daily)" on page 159.	/	/	/	/	/
		/	/	/	/	/

Replacing Consumables


Replacing and Shaking Ink Cartridges

Shaking cartridges

As shown in the illustration, hold the cartridge horizontally and shake it in both directions about 5 cm (2 inches) 15 times in 5 seconds.

For spot color inks and Orange Plus ink, when replacing the cartridges, shake them about 50 times in 15 seconds.

When replacing a cartridge, remove it from the bag and then shake it.

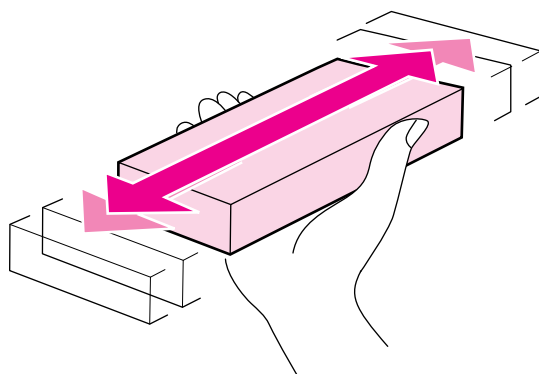

Important:

Due to ink characteristics, the ink cartridges of this printer are prone to sedimentation (components settling to the bottom of the liquid). Shake a new ink cartridge before installing it. After installing it in the printer, remove and shake it periodically.

Replacement procedure

If an ink low warning is displayed, replace the ink cartridge(s) as soon as possible. If one of the ink cartridges is expended, printing cannot be performed.

Important:

*If **Ink Cartridge Expended** appears when using spot color inks, replace the old ink cartridge with a new one promptly. If the ink expended warning is left displayed, the print head or other parts may be damaged.*


If an ink cartridge is expended while printing, you can continue printing after replacing the ink cartridge. However, when replacing ink during a print job, you may see a difference in color tone depending on the drying conditions.

The following procedure explains how to replace an ink cartridge and a cleaning cartridge.


Important:

Epson recommends the use of genuine Epson Ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed, and use of non-genuine ink is recorded for possible use in service support.

1. Make sure the printer is on.
2. Lift the lock lever for the cartridge you intend to replace.

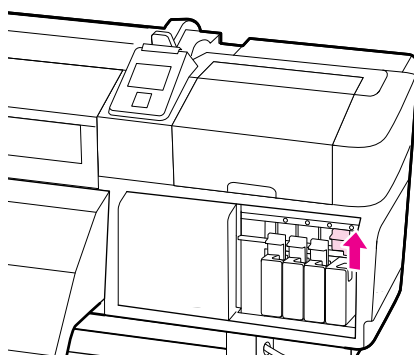


3. Insert a finger into the depression on the top of the cartridge and pull the cartridge straight toward you.

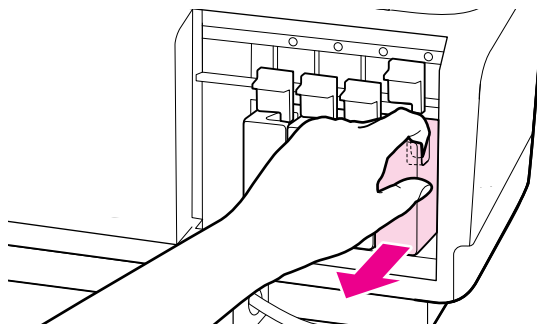


Important:

Removed ink cartridges may have ink around the ink supply port, so be careful not to get any ink on the surrounding area when removing the cartridges.


Hold the cartridge horizontally and shake it in both directions about 5 cm (2 inches) 15 times in 5 seconds. For spot color inks and Orange Plus ink, when replacing the cartridges, shake them about 50 times in 15 seconds.

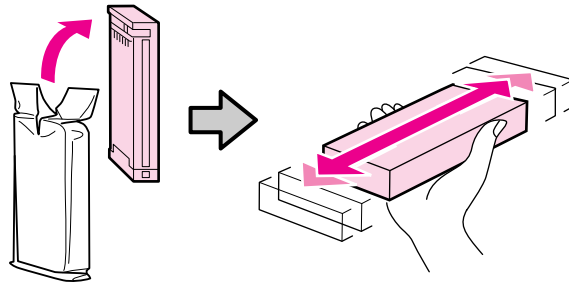

4. Match the color of the cartridge to the color of the label on the printer and insert.

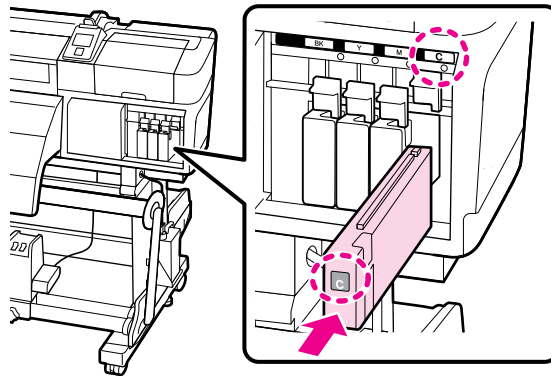

5. Lower the lock lever to engage the latch.

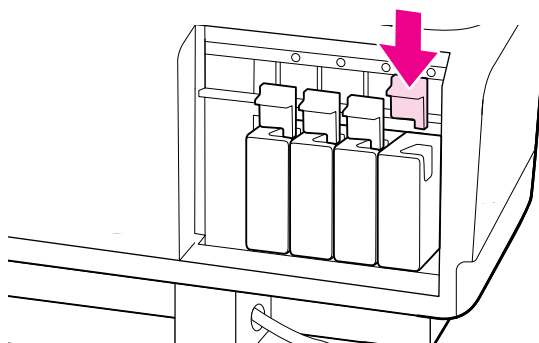

Repeat steps 2 to 6 to replace other ink cartridges.

Important:

Fill all slots using ink or replacement cartridges. You cannot print if any of the slots are empty.

For information on disposal of used ink cartridges, see “Disposal of Used Consumables” on page 179.

Disposing of Waste Ink

Be sure to replace the waste ink bottle when the following message is displayed in the control panel.

- ☐ Prepare empty waste ink bottle.
- ☐ Replace waste ink bottle and press OK.

Leave the waste ink in the waste ink bottle for disposal; do not transfer it to another container.

Important:

During printing or while the printer is running the operations shown below, do not remove the waste ink bottle unless instructed to do so by the on-screen messages. Failure to observe this precaution could cause ink to leak.

- ☐ Head cleaning
- ☐ Head washing
- ☐ Ink refresh
- ☐ Pre-storage maintenance
- ☐ Change color mode

Waste ink counter

The printer uses the waste ink counter to track waste ink and displays a message when the counter reaches the warning level. If you follow the message instructions and replace the waste ink bottle, the waste ink counter is cleared automatically.


If you replace the waste ink bottle before being prompted by a message, run the Waste Ink Counter option in the Maintenance menu after replacement. See “The Maintenance Menu” on page 211.

Important:

If you replace the waste ink bottle before being prompted by a message in the control panel, always clear the waste ink counter. Otherwise, the counter will not be able to accurately track the waste ink, and the replacement message will not appear at the right time.

Replacing the waste ink bottle

1. Remove the waste ink bottle from the waste ink bottle holder.

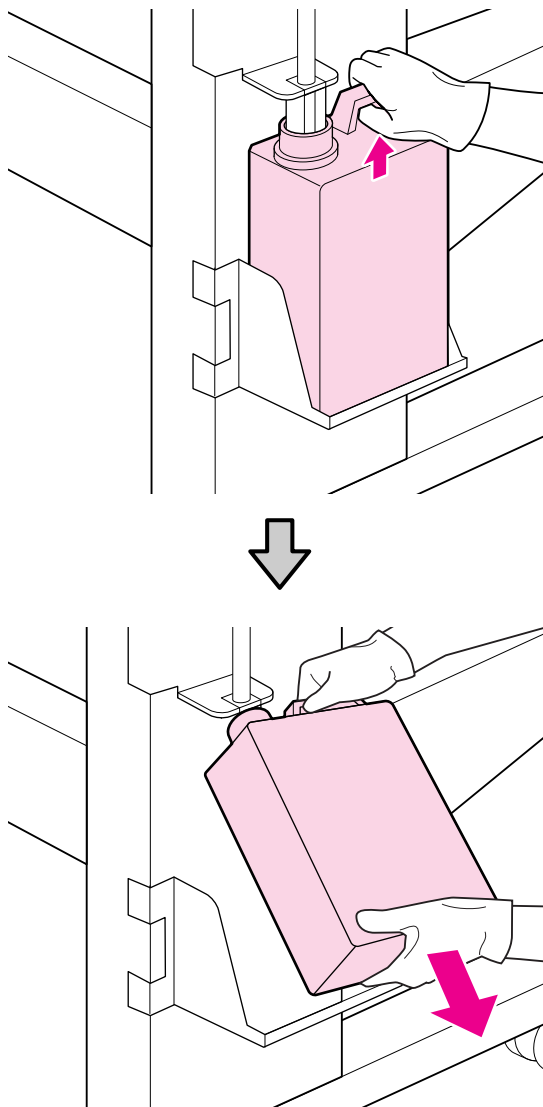

2. Insert the waste ink tube into the mouth of the new waste ink bottle and place the waste ink bottle in the holder.

Tightly seal the lid on the used waste ink bottle.

Important:

You will need the lid for the waste ink bottle when disposing of waste ink. Keep the lid in a safe place; do not throw it out.

3. Press the OK button.

4. Check again to confirm that a fresh waste ink bottle is correctly placed and then press the OK button to reset the waste ink counter.

Important:

Be sure to confirm that the waste ink tube is inserted in the mouth of the waste ink bottle. Ink will spill onto the surrounding area if the tube is not inserted in the bottle.

For information on the disposal of used waste ink bottles, see “Disposal of Used Consumables” on page 179.


Replacing the Wiper and Wiper Cleaner

Before starting this procedure, be sure to read “Maintenance Precautions” on page 134.

Important:


Leave the used wiper cleaner and wiper that have been removed on the metal tray until they are disposed of. If such a part is directly placed on the printer, it may leave stains that may be difficult to remove due to the characteristics of the ink.

1. Position the print head for maintenance. See “Moving the Print Head” on page 135.
2. After the print head moves to the left end of the printer, open the right maintenance cover.

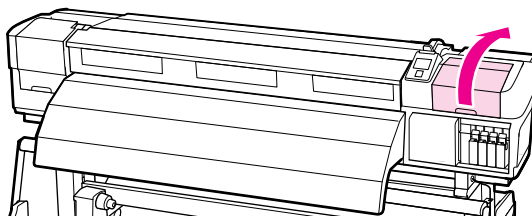


3. Remove the wiper cleaner.

Grasp the cleaner as shown and lift it from the printer.

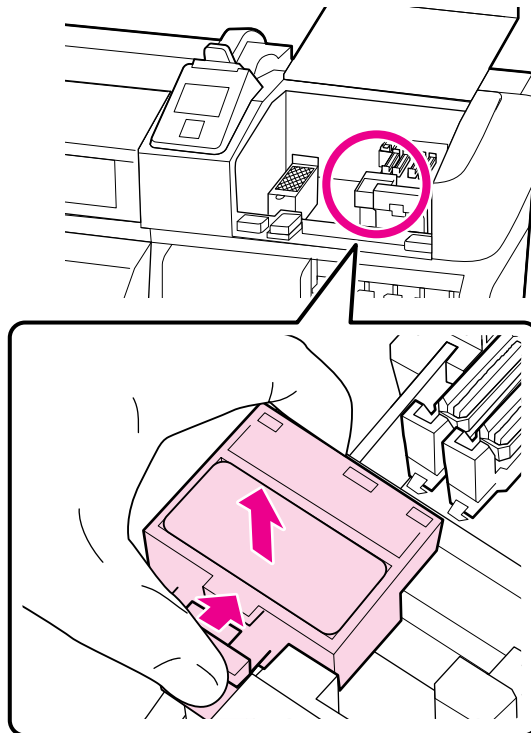


4. Insert a new wiper cleaner.

Place it on the attachment point and press down until you hear a click.

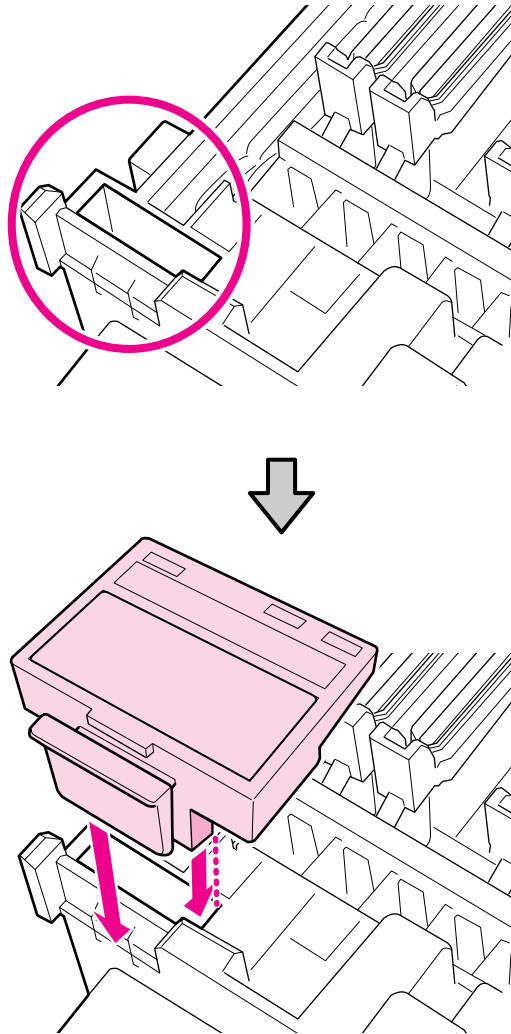


5. Remove the wiper.

Holding the wiper by the attachment point, tilt it to the left and lift it out.

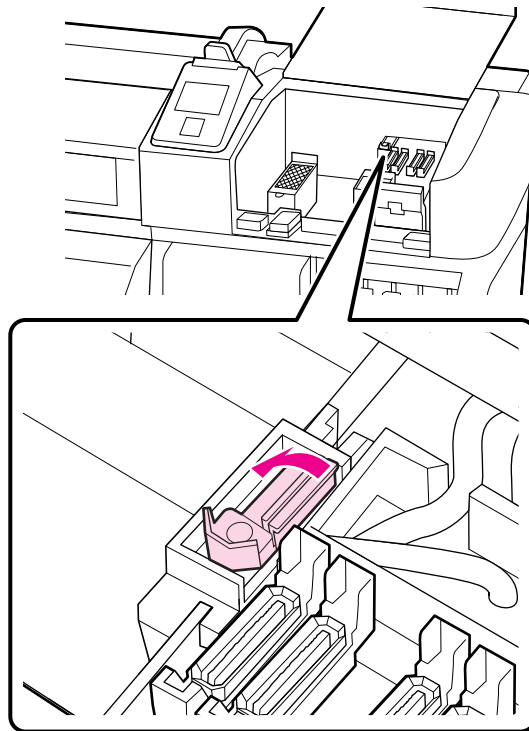

6. Insert the new wiper.

Place it on the attachment point and press down until you hear a click.

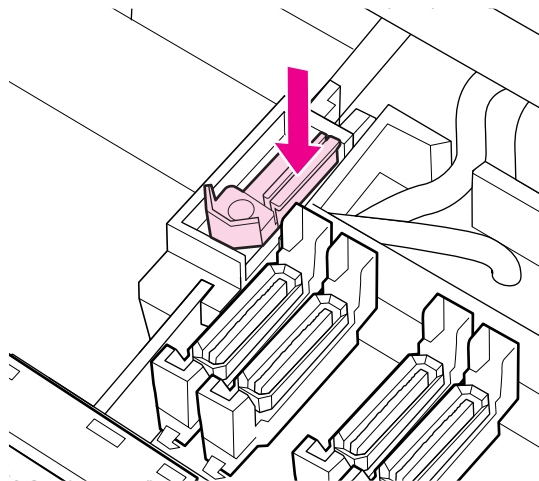

Users of the S70675 or S50675 will need to return to Step 2 and replace the remaining wiper.

7. Close the maintenance cover, then close the setup menu.


If the OK button is pressed once, the wiper moves to the inner side. If the OK button is pressed again, the print head returns to its normal position and the menu closes.

For disposal of used wipers and wiper cleaners, see “Disposal of Used Consumables” on page 179.

Replacing the Flushing Pad

Before starting this procedure, be sure to read “Maintenance Precautions” on page 134.


1. Position the print head for maintenance. See “Moving the Print Head” on page 135.
2. After the print head moves to the left end of the printer, open the right maintenance cover.

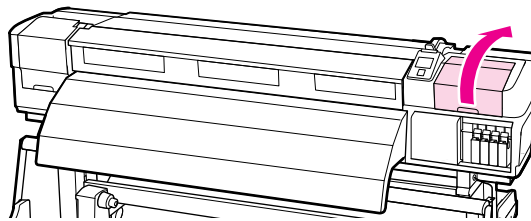

3. Remove the flushing pad.

Grasp the tab as shown below and lift the pad out of the printer.

Wait until ink stops dripping from the bottom of the flushing pad. Remove the pad and place it on the metal tray.

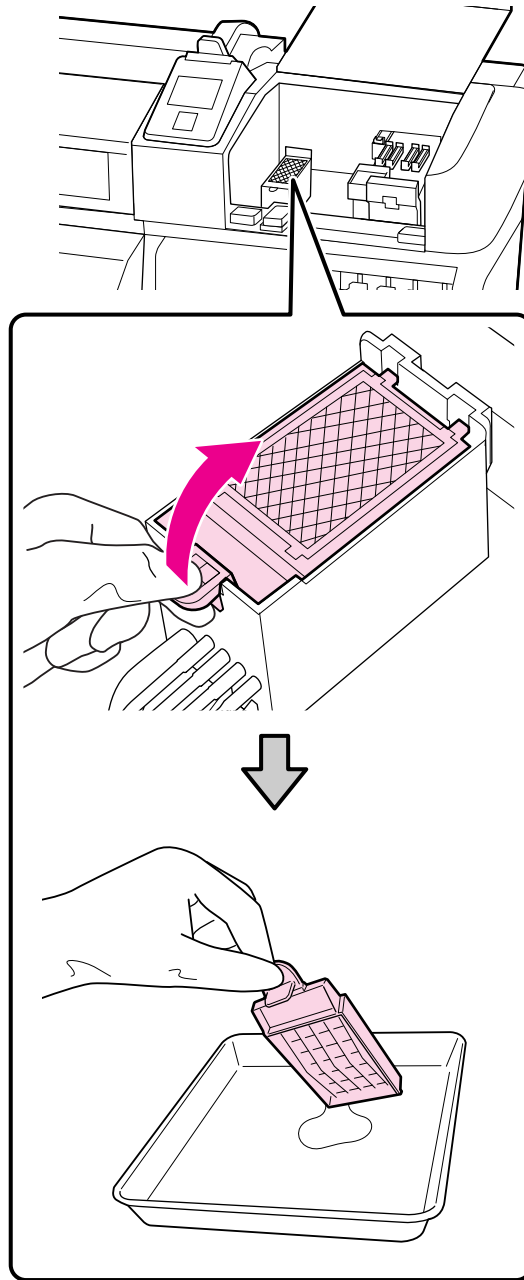


Important:

Leave the used flushing pad that has been removed on the metal tray until it is disposed of. If such a part is directly placed on the printer, it may leave stains that may be difficult to remove due to the characteristics of the ink.

4. Insert a new flushing pad.

Insert the two hooks on the flushing pad into the slots as shown and press the tab down until the pad clicks into place.

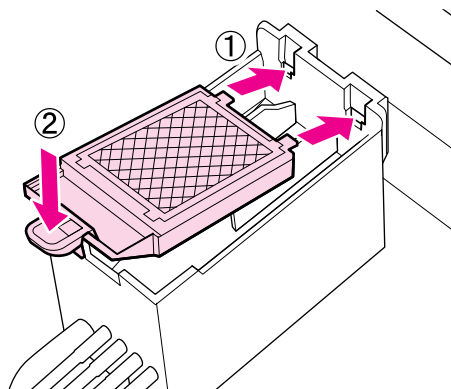

5. Close the maintenance cover. Then close the setup menu.

If the OK button is pressed once, the wiper moves to the inner side. If the OK button is pressed again, the print head returns to its normal position and the menu closes.


For disposal of used flushing pads, see “Disposal of Used Consumables” on page 179.


Replacing the Media Holding Plates

When the media holding plates supplied with the printer are deformed or damaged, be sure to replace them with new ones. See “Options and Consumable Products” on page 234.

Important:

If a deformed or damaged media holding plate continues to be used, it may result in damage to the print head.

1. Remove media and press the  button to turn the printer off. See “Replacing and Removing Media” on page 87.
2. Open the left maintenance cover and front cover.

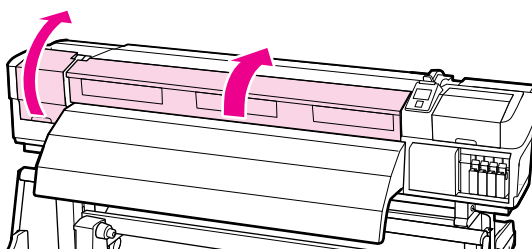


3. Remove the target media holding plate.


While holding the tabs of the media holding plate on both sides, move the plate to the left edge of the platen.

Important:

Be sure to remove the media holding plate from the left edge of the platen. If the plate is removed from the right edge, it will drop into the printer and cause a malfunction.

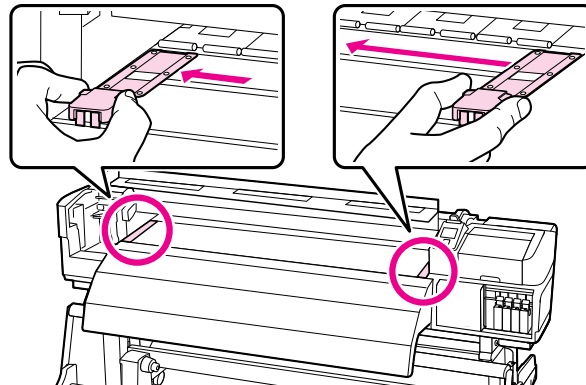

Remove the left media holding plate and then remove the right one.

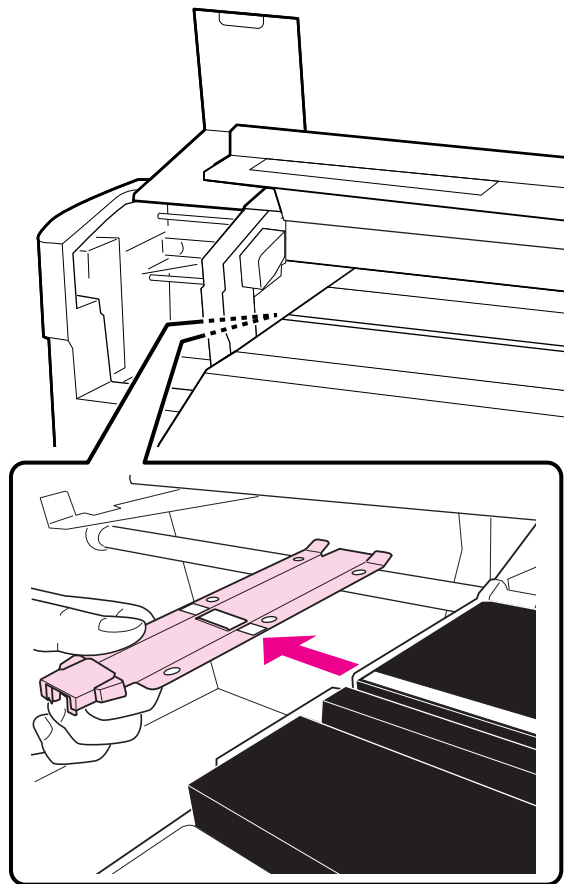


4. Insert a new media holding plate into the left edge of the platen.

Important:


If the media holding plate is inserted into the right edge, it will drop into the printer and cause a malfunction.

When inserting the plate, check the following two points.

- ❑ Align the white line on the platen with the line on the media holding plate.

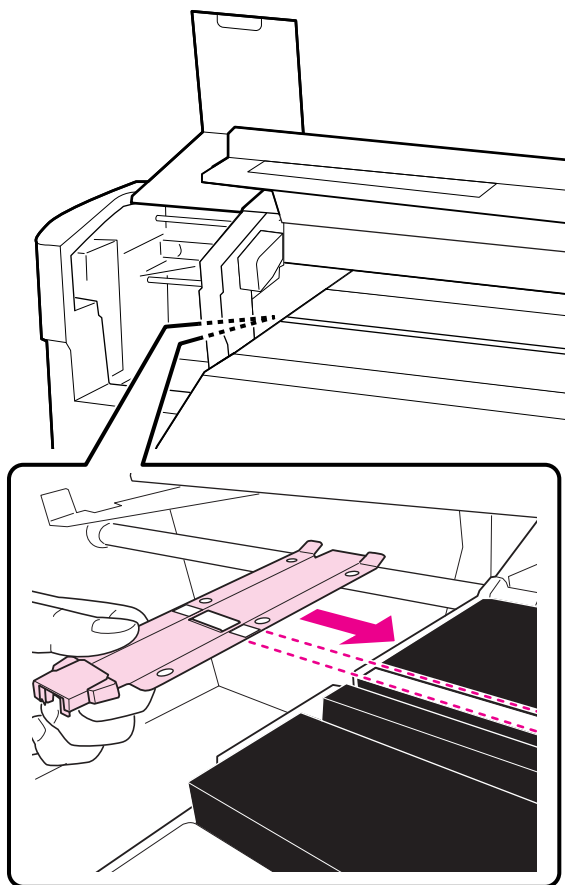


- ❑ While pressing the tip of the metallic plate against the platen, attach the hooked sections to the front corner of the platen.

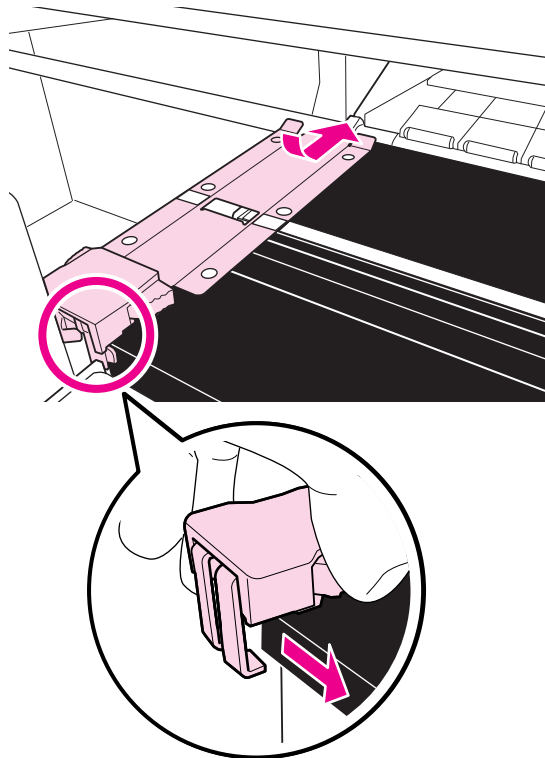

5. Check that two hooked sections at the rear of the media holding plate are securely applied as shown below and that they are attached with no gap between the plate and platen.
- ❑ The latch at the rear of the square hole is inserted in the groove in front of the white line.

- ❑ The latch at the rear of the tab is inserted in the front corner of the platen.

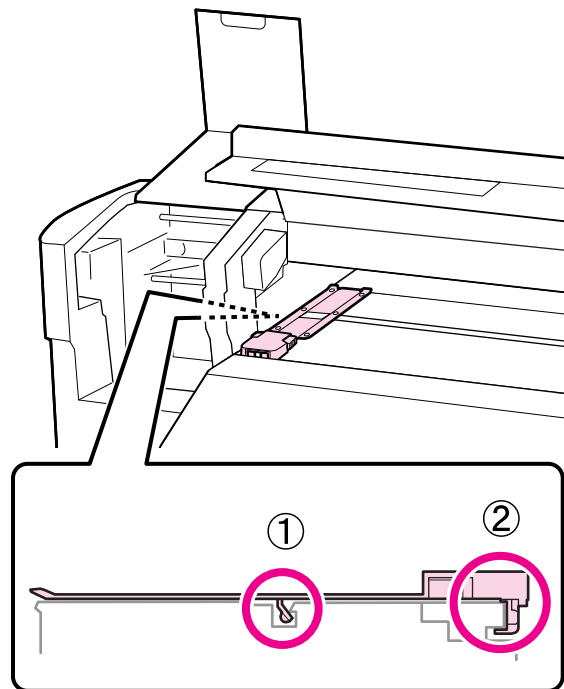


Important:

If both hooked sections are not positioned correctly, return to Step 3 to attach them again. Otherwise, the head may be damaged.

6. While holding the tabs of each media holding plate on both sides, move both the plates to the left and right edges of the platen respectively.

Releasing the tab fixes the media holding plate.

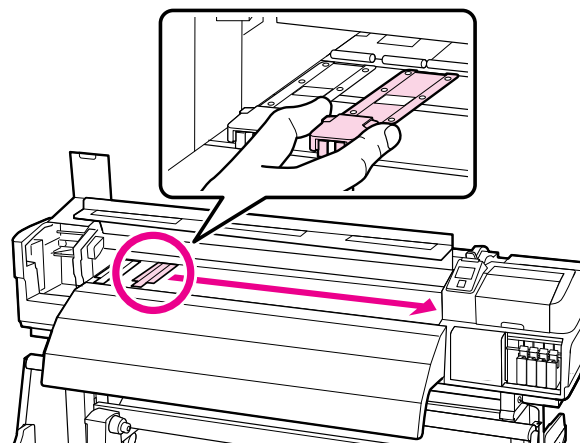

7. Close the left maintenance cover and front cover.

Disposal of Used Consumables


Used cleaning sticks, dirty ink cleaner, waste ink bottles, wipers, wiper cleaners, flushing pads, and post-printing media are industrial waste.

Dispose of items according to local laws and regulations. For example, contract an industrial waste disposal company for disposal. In such cases, submit the safety data sheet to the industrial waste disposal company.

You can download the safety data sheet from the Epson website. See “Where To Get Help” on page 246.

Consumable Replacement Check Sheet

Use this page to track maintenance tasks.

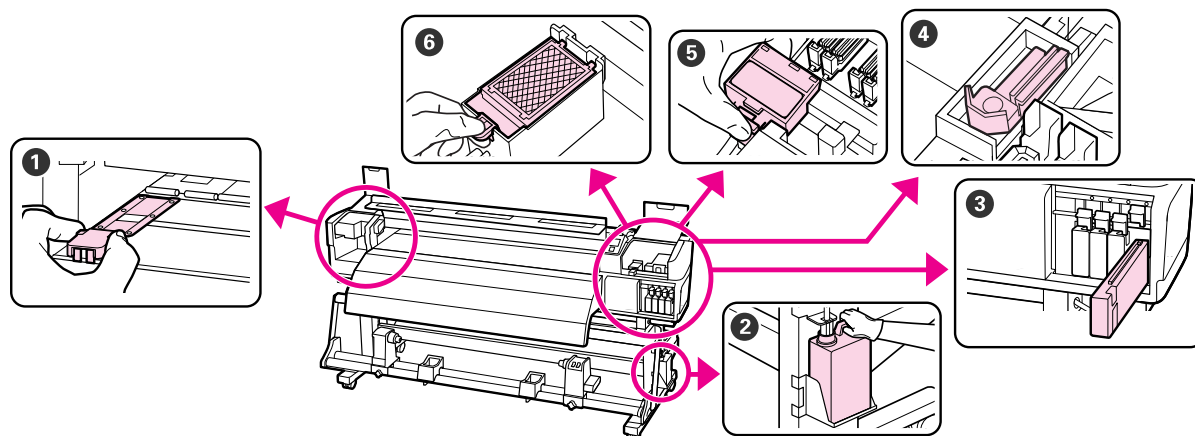

When to replace	Component to be replaced	Cleaned on date				
When a replacement message is displayed on the control panel screen	2. Waste ink bottle See "Disposing of Waste Ink" on page 166.	/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
	3. Ink cartridges. See "Replacement procedure" on page 163.	/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
		/	/	/	/	/
Once every three months Be sure to replace the wiper and wiper cleaner at the same time.	4. Wiper					
	5. Wiper cleaner See "Replacing the Wiper and Wiper Cleaner" on page 168.	/	/	/	/	/
	6. Flushing pad See "Replacing the Flushing Pad" on page 172.	/	/	/	/	/
When the plates are deformed or damaged	1. Media holding plates See "Replacing the Media Holding Plates" on page 174.	/	/	/	/	/

Other Maintenance

Checking for Clogged Nozzles

We recommend that you check the nozzles for clogs each time you print to ensure quality results.

There are three ways to check for clogs.

☐ Auto Nozzle Check

The printer automatically checks for clogs at specified intervals by scanning a test pattern with a sensor as it is being printed. If a clog is detected, the printer will perform a pre-selected option, either **Stop Printing** or **Continue Printing**.

See “The Printer Setup Menu” on page 208.

Note:

Auto Nozzle Check is not available under the following conditions:

- ☐ White ink is used in 10 color mode (S70675) or 5 color mode (S50675). The check can still be performed with other colors.
- ☐ The media is transparent or colored.
- ☐ 2.5 is selected for **Platen Gap** in the setup menu. Choose another option for **Platen Gap**.

If the printer is exposed to direct sunlight or interference from other ambient light sources, Auto Nozzle Check may not work. Shade the printer from sources of interference.

☐ Print Nozzle Pattern

At specified intervals, the printer prints a test pattern at the start of normal printing. When printing is complete, you can visually inspect the pattern to determine whether there may be faint or missing colors in the preceding or following printout.

Use **Print Nozzle Pattern** with media not suited to **Auto Nozzle Check** or if you feel that **Auto Nozzle Check** would take too long.

See “The Printer Setup Menu” on page 208.

☐ On-Demand Nozzle Pattern

Nozzle patterns can be printed as required and inspected visually to determine whether the nozzles are clogged.


Depending on the width of the media used, you can save media by printing additional test patterns in the space beside an existing pattern:

- ❑ If the width is equal to or greater than 51 inches but less than 64 inches, up to three patterns can be printed (one on the left, one in the center, and one on the right).
- ❑ If the width is equal to or greater than 34 inches but less than 51 inches, up to two patterns can be printed (one on the left and one on the right).

Patterns can not be printed side-by-side if the media is less than 34 inches wide or if **Media Size Check** is **Off**.

Printing nozzle check patterns

This section explains how to print and inspect a check pattern.

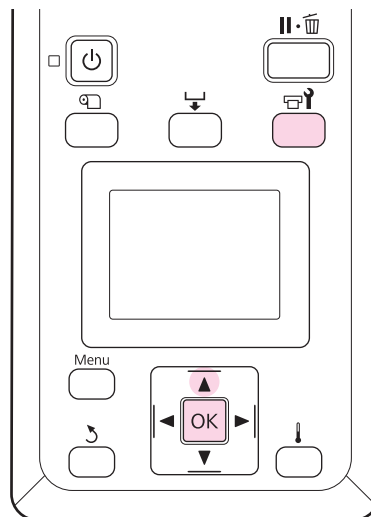

1. After confirming that the printer is ready, press the  button.


The Maintenance menu will be displayed.

2. Select **Nozzle Check**, choose a position, and press the OK button.

A nozzle pattern will be printed.

3. Cut media as necessary, and inspect the nozzle patterns.

Example of clean nozzles:

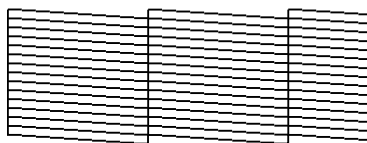

The pattern contains no gaps.

Example of clogged nozzles:



Perform head cleaning if any segments are missing from the pattern. See “Head Cleaning” on page 183.

Important:

Always remove clogs from the nozzles of all colors before resuming use. If clogged nozzles remain when printing (including clogged nozzles for colors that are not used), the clogs can no longer be removed.

4. The menus close when printing is complete.

To print the post-cleaning test pattern in the space beside an existing pattern, press the ▲ button to rewind the media until the print start position is aligned with the pressure rollers.

Head Cleaning

Should the nozzle pattern contain faint or missing segments, you may be able to unclog the nozzles by cleaning the print head as described below.

There is no need to clean the head if the print result does not contain faint areas or other color problems.

Head cleaning level

Choose from three levels of head cleaning.

Select **Execute (Light)** first. If the pattern still contains faint or missing segments after head cleaning has been performed once, try again using **Execute (Medium)** or **Execute (Heavy)**.

Auto maintenance options

The printer features handy auto maintenance options for performing regular head cleaning at an interval selected as described below.


☐ Periodical Cleaning


Head cleaning is performed automatically at selected intervals of 1 to 240 hours. See “The Printer Setup Menu” on page 208.

☐ Cleaning Cycle

Head cleaning is performed automatically at selected intervals of 1 to 10 pages. See “The Printer Setup Menu” on page 208.

This section explains how to clean the head if you find that the nozzles are clogged on printing a test pattern.

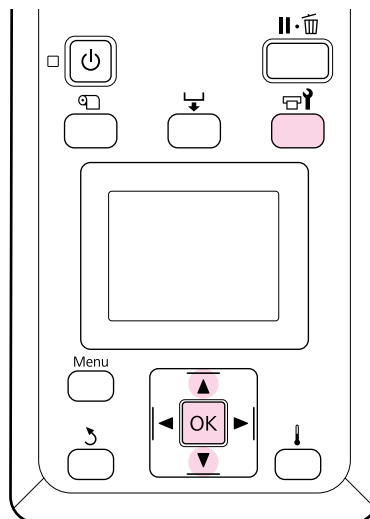

1. Press the  button when the printer is ready to display the Maintenance menu.

Pressing the  button when printing is paused takes you to Step 3.

2. Use the / buttons to select **Cleaning** and press the OK button.

3. Choose the nozzles to be cleaned.

All Nozzles

Choose this option if all patterns in the printed nozzle check results contain faint or missing segments. If you select **All Nozzles**, proceed to Step 5.

Selected Nozzles

Choose this option if only some of the numbered patterns (nozzle arrays) in the printed nozzle check results contained faint or missing segments. You can select multiple nozzle arrays.

4. Choose the nozzle arrays to be cleaned.
 - ☐ Use the ▼/▲ buttons to choose the nozzle arrays with faint or missing segments in the nozzle check pattern and press the OK button.
 - ☐ After selecting the arrays you wish to clean, select **Proceed** and press the OK button.
5. Select a cleaning level and press the OK button.

Head cleaning will be performed.

The menu will close when cleaning is complete. Print a nozzle pattern and inspect the results to determine whether the problem has been resolved. See “Checking for Clogged Nozzles” on page 181.

If you paused the printer in Step 1, printing will resume when head cleaning is complete; check the printout to confirm whether the problem has been resolved.

If nozzle clogs cannot be cleared even after repeated head cleaning, the area around the print head maybe stained. See the following sections and clean each part.

- ☐ “Cleaning Around the Print Head (Daily)” on page 137
- ☐ “Cleaning Around the Caps (Daily)” on page 142
- ☐ “Cleaning the Flushing Pad (Daily)” on page 159

If nozzle clogs cannot be cleared by cleaning, perform **Head Washing** in the Maintenance menu. See Head Washing.

On the S70675 or S50675, if only one print head has a nozzle clog that cannot be cleared by **Head Washing**, you can continue printing with the unclogged head using the **Head Mode** setting in the Printer Setup menu. See “The Printer Setup Menu” on page 208.

Head Washing

If nozzle clogs cannot be cleared even after you have performed normal head cleaning several times and cleaned around the print head, perform **Head Washing** from the Maintenance menu.

Check colors with faint or missing segments in the nozzle check pattern, and select the appropriate ones from the menu items below.

S70675/S30675

Item	Explanation
XX/XX*	Clean only the selected color nozzle. Select this item when faint or missing segments of a specific color are detected.
All Nozzles	Clean all the nozzles. Select this item when faint or missing segments of all colors are detected.

* "XX" indicates an ink color code.

S50675

Item	Explanation
Head1 XX/XX* Head2 XX/XX*	Clean only the selected color nozzle. Select this item when faint or missing segments are detected on a specific color.
Head1 All Nozzles Head2 All Nozzles	Clean all the nozzles of one print head. Select this item when faint or missing segments of all colors of one print head are detected.
All Nozzles	Clean all the nozzles of both the print heads. Select this item when faint or missing segments of all colors of both print heads are detected.

* "XX" indicates an ink color code.

Use a cleaning cartridge (available separately) for **Head Washing**. The required number of Cleaning cartridge is provided below.

- ☐ When specifying colors before cleaning: 2
- ☐ When cleaning all the nozzles: as shown below


Product name	Color mode	Cartridges
S70675	10 Color	10
	9 Color	9
	8 Color (unfixed)	8 ^{*1}
	8 Color (fixed)	8
S50675 ²	5C Mode	10 (5)
	4C Mode	8 (4)
S30675	-	4


- 1 Eight cartridges are required, excluding the two attached cartridges.
- 2 The number enclosed in parentheses indicates the number of required cartridges when **Head1 All Nozzles** or **Head2 All Nozzles** is selected.

Head Washing procedure

Important:

If the amount of remaining ink or cleaning fluid is insufficient, the function may not run. When there is an insufficient amount remaining, have new cartridges on hand as a precaution.

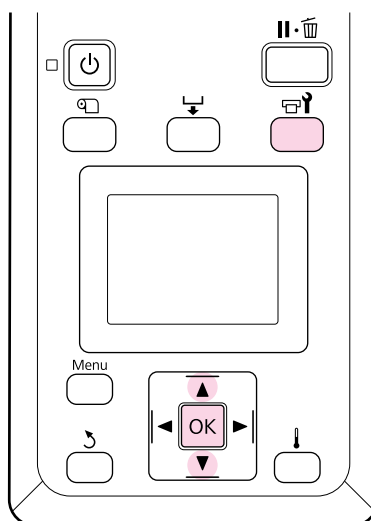

1. After confirming that the printer is ready, press the  button.
The Maintenance menu will be displayed.
2. Use the ▼/▲ buttons to select **Head Washing**, and press the OK button.
3. Use the ▼/▲ buttons to select any mode, and press the OK button.


Follow the on-screen instructions to replace the cartridge. When **Ready** appears on the screen, head washing is complete. Print a nozzle pattern and inspect the results to determine whether the problem has been resolved. See “Printing nozzle check patterns” on page 182.




Note:

*In the S70675 or S50675, if only one print head has a clogged nozzle that cannot be cleared by head washing, you can continue printing with the unclogged head using the **Head Mode** setting in the Printer Setup menu. See “The Printer Setup Menu” on page 208.*

Ink Refresh

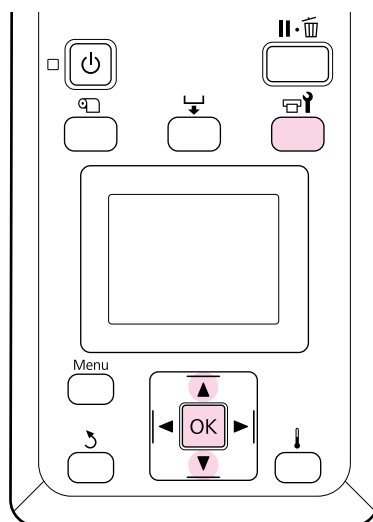When you notice tint unevenness (areas of uneven density), run Ink Refresh.



1. When the printer is ready, press the  button to display the Maintenance menu.
2. Use the / buttons to select **Ink Refresh** and press OK.
3. Select a nozzle row for **Ink Refresh**.

The available menus vary depending on your product or ColorMode.

9 Color mode/10 Color mode, 5C Mode (S50675)

Select the appropriate menu depending on the part (printing color) with tint unevenness being detected. If tint unevenness is detected in all areas, perform both menus in sequence.

- ☐ Tint unevenness of spot color: **MS/WH** or **WH**

- ☐ Tint unevenness of colors other than spot color: **All (except MS/WH)** or **All (except WH)**

8 Color mode (S70675), 4C Mode (S50675), S30675

Select **All Nozzles**.

Long-Term Storage (Pre-Storage Maintenance)

If the printer will not be used for an extended period (and switched off), perform **Pre-Storage Maint.** before storage. Failure to perform pre-storage maintenance causes permanent clogs.

Use cleaning cartridges (available separately) during **Pre-Storage Maint.**

The following tables show the storage interval guidelines for **Pre-Storage Maint.** and the necessary number of cleaning cartridges by printer model.

S70675 (10 color mode)

Interval	Cartridges	Colors
7 to 13 days*	2	WH/MS
2 weeks or more	10	All Nozzles (All colors)

* If the storage interval is short, you can perform **Pre-Storage Maint.** for spot color ink only.

S70675 (9 Color mode)

Interval	Cartridges	Colors
7 to 13 days*	1	WH
2 weeks or more	9	All Nozzles (all colors except for WH)

* If the storage interval is short, you can perform **Pre-Storage Maint.** for spot color ink only.

S70675 (8 color mode)

Interval	Cartridges	Colors
2 weeks or more	8	All Nozzles (All colors)

S50675 (5 color mode)

Interval	Cartridges	Colors
7 to 20 days*	2	WH/WH
3 weeks or more	10	All Nozzles (All colors)

* If the storage interval is short, you can perform **Pre-Storage Maint.** for spot color ink only.

S50675 (4 color mode)

Interval	Cartridges	Colors
3 weeks or more	8	All Nozzles (All colors)

S30675

Interval	Cartridges	Colors
1 month or more	4	All Nozzles (All colors)


Important:

After performing **Pre-Storage Maint.** for spot color ink only, you must charge spot color ink if you want to change Pre-Storage Maint. to **All Nozzles**.

Pre-storage operations



Important:

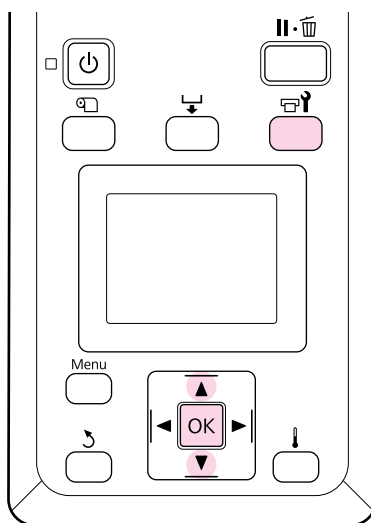If the amount of remaining ink or cleaning fluid is insufficient, the function may not run. When there is an insufficient amount remaining, have new cartridges on hand as a precaution.



1. Confirm that the printer is ready and press .

The Maintenance menu will be displayed.

2. Use the / buttons to select **Pre-Storage Maint.** and press the OK button.
3. Select the target menu and press the OK button.

When not using spot color inks, Select **All Nozzles**.

When using spot color inks, you can select **MS/WH** (S70675: 10 Color mode), **WH** (S70675: 9 Color mode, S50675 5C Mode), or **All Nozzles** depending on the storage period.

4. Follow the instructions on the screen to replace the cartridge.

Observe the following cautions when storing the printer and ink cartridges that were removed during use.

See “Notes When Not Using the Printer” on page 31 and “Handling ink cartridges” on page 32.

Restarting use of the printer

Important:

When restarting use of the printer, charge the printer with ink. When charging using removed ink cartridges, have new ink cartridges on hand as a precaution.

Switch on the power and follow the on-screen instructions.

When first printing after restarting use, perform a nozzle check and check that there are no clogs. See “Checking for Clogged Nozzles” on page 181.

Changing Color Mode (S70675 only)

The printer consumes ink periodically for auto maintenance. When spot color ink printing is not performed for longer than a specified period of time, you can install a Cleaning cartridge instead of spot color ink using the Change Color Mode function, reducing consumption of spot color ink. This function is not available in **8 Color (Fixed)** mode.

To restart spot color ink printing, return to the color mode for spot color ink.

Perform **Change Color Mode** on the control panel. The required time varies depending on the specified color mode, but it takes up to 1 hour (approximately).

The following shows the contents of the **Change Color Mode** function as well as the type and the required number of cartridges to execute the function.

Important:

If the period in which the spot color inks are not used is shorter than the recommended periods shown below, we do not recommend that you change the color mode, because ink consumption increases when the color mode is changed.

Changing from 10 Color mode

- ☐ When not using only the Metallic Silver for three months* or more:
Select **9 Color**. One Cleaning cartridge is required.
- ☐ When not using both spot color inks for three months* or more:
Select **8 Color (Unfixed)**. Two Cleaning cartridges are required.

Changing from 9 Color mode

- ☐ When restarting the use of Metallic Silver:
Select **10 Color**. One Metallic Silver ink cartridge is required.
- ☐ When White is not used in addition to Metallic Silver for one* month or more:
Select **8 Color (Unfixed)**. One Cleaning cartridge is required.

Changing from 8 Color (Unfixed) mode

- ☐ When restarting the use of only the White ink:
Select **9 Color**. One White ink cartridge is required.
- ☐ When restarting the use of both spot colors:
Select **10 Color**. One White ink cartridge and one Metallic Silver ink cartridge are required respectively.

* The standard period assumes the following usage conditions:


- ☐ The power always remains turned on.
- ☐ Monthly number of operating days: 20.

Change Color Mode procedure

Important:

If the amount of remaining ink or cleaning fluid is insufficient, the function may not run.

- ❑ If ⚠ is displayed on the level of ink cartridge, perform operations as soon as possible. This function cannot be performed if the error ❌ **Ink Cartridge Expended** is displayed.
- ❑ When there is an insufficient amount remaining, have new cartridges on hand as a precaution.

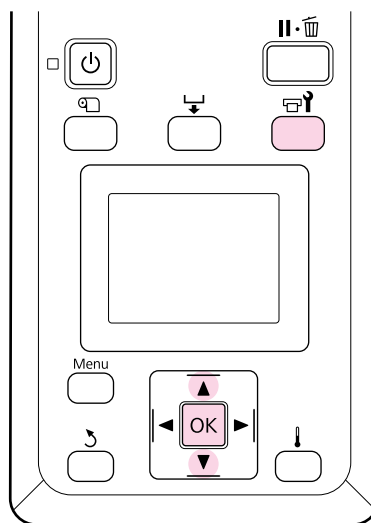

1. After confirming that the printer is ready, press the  button.

The Maintenance menu will be displayed.

2. Use the ▼/▲ buttons to select **Change Color Mode** and press the OK button.
3. Use the ▼/▲ buttons to select any mode and press the OK button.

Follow the on-screen instructions to replace the cartridge.

When storing the ink cartridges that were removed during use, see “Handling ink cartridges” on page 32.

Applying Secondary Carriage Rod Grease


If **Apply secondary carriage rod grease. See manual.** is displayed on the screen of the control panel, grease using the grease kit supplied with the printer.

- ❑ In the illustration below (showing the S70675), the secondary carriage rod is rod A.

Make sure you do not touch the B rod (main carriage rod) with the grease tools during this operation. The printer may malfunction if grease is removed from rod B.

- ❑ The secondary carriage rod grease is only for rod A.


This cannot be used for rod B.

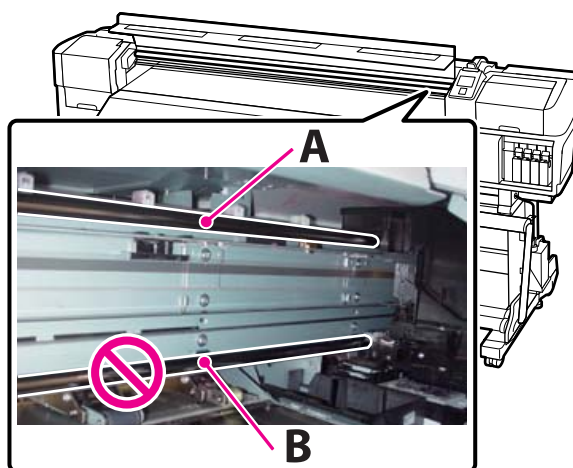

Before starting this procedure, be sure to read "Maintenance Precautions" on page 134.


1. Attach a fresh pad to the grease tool.

Insert the tab of the pad firmly into the rectangular slot on the grease tool and fit the pad to the tool as shown.

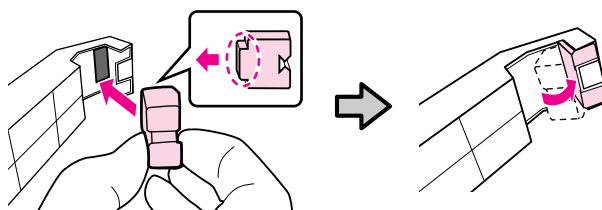

2. Turn off the printer and open the front cover.

3. Hold the grease tool against the secondary carriage rod (rod A) so that the pad on the tool is placed firmly against the back of the rod, and then slide it smoothly twice from one end to the other and back again to wipe off stains on the rod.

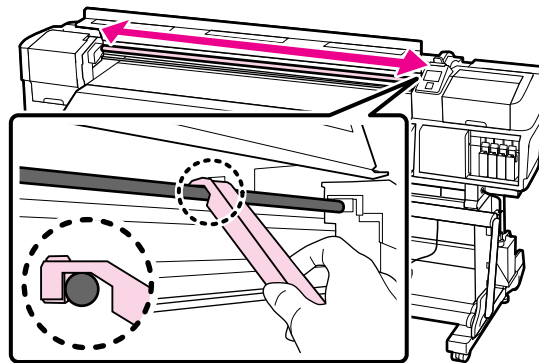


4. Using a new cleaning stick, stir the grease in the container about ten times.
5. Wipe the tip of the cleaning stick on the edge of the container to remove excess grease.

Important:

Failure to remove the excess could result in falling grease dirtying the platen and media.

6. Using a cleaning stick, apply grease to the pad as described below.
 - ☐ Fully submerge the tip of the cleaning stick in the grease.
 - ☐ Rotate the cleaning stick two or three times, and then remove it.


- ❑ Apply the grease to the pad at the end of the grease tool.

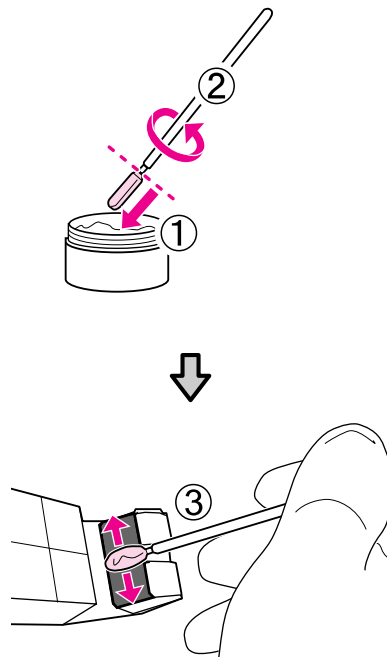

7. Hold the grease tool against the secondary carriage rod and smoothly slide it twice from one end to the other and back again as shown in Step 3.
8. Remove the stained pad, and then store the grease tool with the grease.

When disposing of used pads, cleaning sticks, and other items used to apply grease, see “Disposal of Used Consumables” on page 179.

- ❑ Replace the cap to prevent foreign objects falling into the grease.
- ❑ Store the container at room temperature with the cap uppermost in a location that is not exposed to direct sunlight.

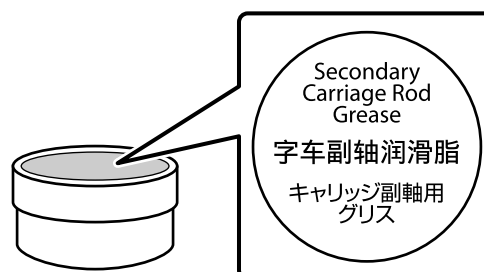

Parts That Are Periodically Replaced

The carriage encoder requires periodic replacement. The time until replacement varies with the conditions of use. When replacing the carriage encoder, you also need to replace the carriage scale.

When it is almost time to replace parts, a maintenance request is displayed on the control panel. The printer can still be used while the maintenance request is displayed. See “When a Maintenance Call/Service Call Occurs” on page 217.

Part life varies with operating conditions. Base the decision to replace the part on the quality of the print results.

Contact your dealer or Epson Support for information on replacing components.


Component status can be printed by selecting **Print Status Sheet** in the setup menu. See “The Printer Status Menu” on page 213.

Chapter 4

Using the Control Panel Menu

Menu Operations

The menus are used as shown below.

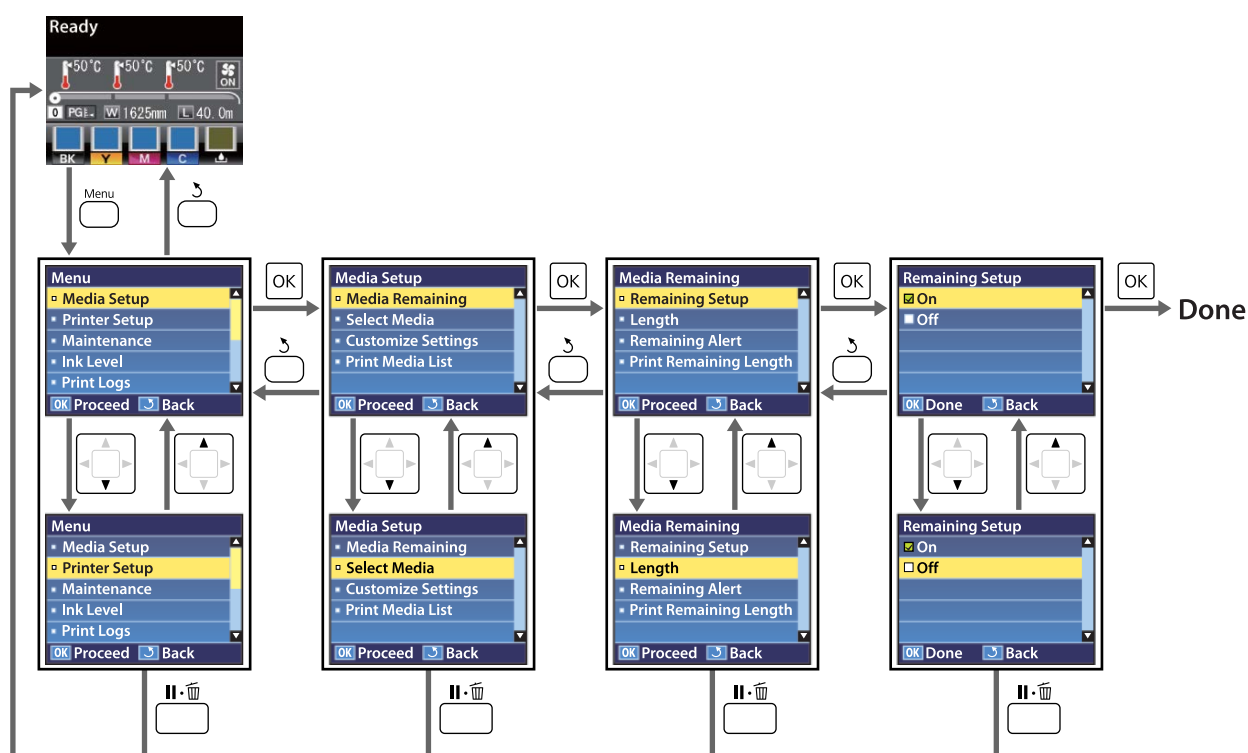


Menu List

The following items and parameters can be set and executed in the Menu. See the reference pages for more details on each item.

Items or values marked with a superscript “1” apply to the S70675 and S50675; items marked with a superscript “2” apply only to the S50675; items marked with a superscript “3” apply only to the S30675; items marked with a superscript “4” apply only to the S70675.

Menu	Item	Parameter
Media Setup See "The Media Setup Menu" on page 203.	Media Remaining	
	Remaining Setup	On, Off
	Length	1.0 to 999.5 m (3 to 3000 ft)
	Remaining Alert	1 to 15 m (4 to 50 ft)
	Print Remaining Length	Print
	Select Media	RIP Settings, 1 to 30 (media setting bank number)
	Customize Settings	
	Current Settings	
	RIP Settings	
	Platen Gap	1.5, 2.0, 2.5
	Head Alignment	Input thickness. 0.1 to 1.0 mm (4 to 40 mil)
	Standard (Auto)	Print
	Standard (Manual)	Print
	Block pattern	Manual(Uni-D), Manual(Bi-D), Manual(Dual Head)*1
	Roll Type	Printable Side Out, Printable Side In
	Tension Measurement	Periodically, Every Page, Off
	Media Tension	0 to 40
	Restore Settings	Yes, No
	1 to 30 (media setting bank)	
	Setting Name	Up to 22 half-size characters
	Platen Gap	1.5, 2.0, 2.5
	Auto Media Adjust	Print
	Media Adjust	
	Feed Adjustment	Auto, Manual
	Head Alignment	Standard (Auto), Standard (Manual), Block pattern
	Heating & Drying	
	Heater Temperature	Pre-heater/platen heater: 30 °C to 50 °C (86 °F to 122 °F) After heater: 30 °C to 55 °C (86 °F to 131 °F)
	Drying Time Per Pass	0 to 10 sec
	After Heater Feed	Mode 1, Mode 2, Off
	Additional Dryer	On, Off
	Advanced Settings	

Menu	Item			Parameter
			Media Tension	
			Media Suction	0 to 10
			Head Movement	Data Width, Printer Full Width
			Tension Measurement	Periodically, Every page, Off
			Multi-Strike Printing	Off, 2 to 8
			Feed Speed	Auto, Lv1, Lv2
			Roll Type	Printable Side Out, Printable Side In
			Restore Settings	Yes, No
	Print Media List			Print
Printer Setup See “The Printer Setup Menu” on page 208.	Side Margin(Right)			3 to 25 mm (0.12 to 1.00 inch)
	Side Margin(Left)			3 to 25 mm (0.12 to 1.00 inch)
	Print Start Position			0 to 800 mm (0.00 to 32.00 inch)
	Media Size Check			On, Off
	Media End Check			On, Off
	Media Skew Check			On, Off
	Head Strike Warning ²			
		Warning Options		On, Off
		Warning Level Options		1 to 5
	Auto Nozzle Check			
		Nozzle Check Cycle		Off, 1 to 10 pages
		Options When Clogged		Continue Printing, Stop Printing
	Print Nozzle Pattern			Off, 1 to 10 pages
	Periodical Cleaning			
		Light		Off, 1 to 240 hours
		Medium		
		Heavy		
		Power ³		
	Cleaning Cycle			Off, 1 to 10 pages
	Heat Off Timer			15 to 240 minutes
Head Mode ¹			2 Heads Mode, Head 1, Head 2	
Restore Settings			Yes, No	

Menu	Item	Parameter
Maintenance See "The Maintenance Menu" on page 211.	Nozzle Check	Print
	Print At Right	(The options available vary with the option selected for Media Size Check and the width of the media used.)
	Print At Center	
	Print At Left	
	Cleaning	
	All Nozzles	Execute (Light), Execute (Medium), Execute (Heavy)
	Head 1/Head 2 ² , Head 1 ² , Head 2 ²	
	Selected Nozzles	Execute (Light), Execute (Medium), Execute (Heavy)
	Head Maintenance	Move Head
	Waste Ink Counter	-
	Ink Circulation ¹	Execute
	Ink Refresh	All Nozzles, All (except MS/WH) ⁴ , All (except WH) ³ , MS/WH ⁴ , WH ¹ (The displayed menu varies depending on the model or color mode.)
	Head Washing	XX/XX ^{3, 4} , Head 1 XX/XX ² , Head1 All Nozzles ² , Head2 All Nozzles ² , All Nozzles (The displayed menu varies depending on the model or color mode. "XX" indicates an ink color code.)
	Pre-Storage Maint.	WH/MS ⁴ , WH/WH ¹ , (The displayed menu varies depending on the currently specified mode.)
	Change Color Mode ⁴	8 Color (Unfixed), 9 Color, 10 Color (The displayed menu varies depending on the currently specified mode.)
Ink Level See "The Ink Level Menu" on page 212.		
Print Logs See "The Print Logs Menu" on page 212.	Print Job Log Sheet	Print
	Show Total Prints	XXXXXXm ² (XXXXXX ft ²)
Printer Status See "The Printer Status Menu" on page 213.	Print Status Sheet	Print
	myEpsonPrinter Status	Not Started, Disabled, Enabled Last_Uploaded; (Not Uploaded), MM/DD/YY HH:MM GMT
	Firmware Version	XXXXXXX,X_XX,XXXX

Menu	Item	Parameter
Network Setup See "The Network Setup Menu" on page 213.	IP Address Setting	
	Auto	-
	Panel	IP: 000.000.000.000 – 255.255.255.255 SM: 000.000.000.000 – 255.255.255.255 DG: 000.000.000.000 – 255.255.255.255
	Bonjour	On, Off
	Print Status Sheet	Print
	Restore Settings	Yes, No
Preference See "The Preference Menu" on page 214.	Date And Time	MM/DD/YY HH:MM
	Language	Japanese, English, French, Italian, German, Portuguese, Spanish, Dutch, Russian, Korean, Chinese
	Unit: Length	m, ft/in
	Unit: Temperature	°C, F
	Alert Sound Setting	On, Off
	Alert Lamp Setting	On, Off
Reset All Settings See "The Reset All Settings Menu" on page 214.	Yes, No	

Details of the Menu

Items or values marked with a superscript “1” apply to the S70675 and S50675; items marked with a superscript “2” apply to the S50675; items marked with a superscript “3” apply to the S30670; items marked with a superscript “4” apply to the S70670.

The Media Setup Menu

The Media Setup menu can be accessed directly by pressing the  button.

 indicates default settings.

Media Remaining

Item	Parameter	Explanation
Remaining Setup	On	Choose On to display and record, or Off to not display and not record, the amount of media remaining. Length , Remaining Alert , and Print Remaining Length options are available when On is selected. The display panel shows the amount of media remaining based on the value selected for Length and the amount of media used during printing.
	Off	
Length	1.0 to 999.5 m (3 to 3000 ft)	Enter a value for overall roll length between 5.0 and 999.5 m (15 to 3000 ft). You can set in 0.5 m (1 ft) increments.
Remaining Alert	1 to 15 m (4 to 50 ft)	An alert will be displayed if the amount of media remaining reaches this length. Choose from values between 1 and 15 m (4 and 50 ft). You can set in 0.5m (1ft) increments.
Print Remaining Length	Print	Use Print Remaining Length to print the amount of media remaining on the current roll before replacing it with another type of media. You can then enter this number as the media length the next time the roll is used.

Select Media

Parameter	Explanation
RIP Settings	Choose the media settings used for printing.
1 to 30 (media setting bank number)	If RIP Settings is selected, the media settings selected in the software RIP will be used. Select a number between 1 and 30 to use the settings in the corresponding media setting bank. To register a new setting or change a setting, use Customize Settings .

Customize Settings

Item	Explanation
Current Settings	<p>To change the currently selected setting, select Current Settings. The customizable setting items vary depending on whether RIP Settings or a media setting bank number 1 to 30 is selected.</p> <p>When registering a new setting or customizing the registered setting, select RIP Settings or a media setting bank number 1 to 30.</p> <p>For the items that can be registered or customized in each setting, see the following section.</p>
RIP Settings	
1 to 30 (media setting bank number)	

RIP Settings

Item		Parameter	Explanation
Platen Gap		1.5	Choose the Platen Gap (the gap between the print head and the media). If this setting is changed, the setting value registered on the printer has priority over the setting value specified in the software RIP.
		2.0	
		2.5	The default setting of 1.5 is recommended in most situations. Choose 2.0 if printout is scratched or smudged. Select 2.5 only if print results are still smudged when 2.0 is selected. Choosing a larger gap than required may result in ink stains inside the printer, reduced print quality, or shorter product life.
Head Alignment		Input thickness. 0.1 to 1.0 mm (4 to 40 mil)	
	Standard (Auto)	Print	Select Head Alignment to realign print head when print results seem grainy or out of focus. Before making adjustments, select the thickness of the target media between 0.1 and 1.0 mm (4 and 40 mil). See “Head Alignment” on page 119.
	Standard (Manual)	Print	
	Block pattern	Manual(Uni-D), Manual(Bi-D), Manual(Dual head) ¹	
Roll Type		Printable Side Out	Choose Printable Side Out or Printable Side In according to how the media is rolled.
		Printable Side In	
Tension Measurement		Periodically	Choose Periodically or Every page to have the printer automatically monitor and adjust media tension during printing for optimal results, Off to disable automatic tension adjustment. Periodically is recommended in most circumstances. Selecting Every Page enhances the tension measurement accuracy for the optimal adjustment, but the printing time is longer than when Periodically is selected. The printer may however be unable to adjust tension appropriately for some media, resulting in excessive slack or other maladjustments that cause printing problems, in which case you should select Off . Note, however, that Off may result in unusually large margin between pages. In addition, printing may not stop and the inside of the printer may become stained. Observe the following precautions: Do not print at the end of a roll, and do not select Off for Media End Check .
		Every page	
		Off	
Media Tension		0 to 40	Increase tension if creases appear in media during printing. The higher the value, the greater the tension.
Restore Settings		Yes, No	If Yes is selected, configured RIP settings are returned to the default.

1 to 30 (media setting bank number)

Item	Parameter	Explanation	
Setting Name		Assign the media setting bank a name up to 22 half-size characters long. Using distinctive names makes it easier to select banks for use.	
Platen Gap	1.5	Choose the platen gap (the distance between the print head and the media). The default setting of 1.5 is recommended in most situations. Choose 2.0 if printout is scratched or smudged. Select 2.5 only if print results are still smudged when 2.0 is selected. Choosing a larger gap than required may result in ink stains inside the printer, reduced print quality, or shorter product life.	
	2.0		
	2.5		
Auto Media Adjust		The printer automatically reads settings using the sensor while printing patterns, and continuously performs Feed Adjustment and Head Alignment . See “Auto Media Adjust” on page 113.	
Media Adjust		Select this option to adjust media with Auto Media Adjust disabled or make readjustment when changing printing conditions after saving media settings. In this menu, perform Feed Adjustment and Head Alignment individually. See “Media Adjust” on page 116.	
Feed Adjustment			
	Auto		Print
	Manual		Print
Head Alignment			
	Standard (Auto)		Print
	Standard (Manual)		Print
	Block pattern		Manual(Uni-D)
			Manual(Bi-D)
			Manual(Dual Head) ¹
Heating & Drying			

Item		Parameter	Explanation
	Heater Temperature	Pre-heater/platen heater: 30 °C to 50 °C (86 °F to 122 °F) After heater: 30 °C to 55 °C (86 °F to 131 °F)	The temperatures for the pre-, platen, and after heaters can each be adjusted separately.
	Drying Time Per Pass	0 to 10sec	Select the time the print head pauses to allow drying after each pass. Choose from values between 0.0 and 10.0 seconds. The time needed for the ink to dry varies with ink density and the media used. If the ink blurs on the media, set a longer time for drying the ink. Increasing the drying time increases the time needed to print.
	After Heater Feed	Mode 1	To feed media to the after heater after printing, choose Mode 1 or Mode 2 ; otherwise, choose Off . If Mode 1 is selected, the portion fed for drying will not be rewound before the next job starts. Select this option if the media will be cut before the next job starts. If Mode 2 is selected, the portion fed for drying will be rewound before the next job starts, eliminating unnecessary margin. Select this option if multiple jobs will be printed consecutively.
		Mode 2	
		Off	
	Additional Dryer	On	This item is displayed only when the additional print drying system is installed (supplied with the S50675 and optional with other models). Select On to enable, or Off to disable, the optional additional print drying system. Note that even when On is selected, the additional print drying system will turn off with the heaters when the Heat Off Timer expires. The additional print drying system will turn back on when the heaters resume operation. See “The Printer Setup Menu” on page 208.
		Off	
Advanced Settings			During general use, use the default setting value without changing it. When using special media or when a problem such as head striking or banding is detected in printing results, change the default.

Item	Parameter	Explanation
	Media Tension	0 to 40 Increase tension if creases appear in the media during printing. The higher the value, the greater the tension.
	Media Suction	0 to 10 When media is waved on the platen, increase the Media Suction . The higher the value, the greater the suction. If graininess or out-of-focus characteristics are detected in printing results obtained using thin or soft media or if the media is not fed normally, reduce the Media Suction .
	Head Movement	Data Width Choose the range in which the print head moves during printing.
		Printer Full Width Data Width restricts print head movement to the printed area. Restricting the extent of print head movement increases print speed. If Printer Full Width is selected, the print head will move the full width of the largest media supported by the printer. Select this option for more even print results with less variation.
	Tension Measurement	Periodically Choose Periodically or Every page to have the printer automatically monitor and adjust media tension during printing for optimal results, Off to disable automatic tension adjustment. Periodically is recommended in most circumstances.
		Every Page Selecting Every Page enhances the accuracy of the Tension Measurement for the optimal adjustment, but the printing time is longer than when Periodically is selected.
		Off The printer may however be unable to adjust tension appropriately for some media, resulting in excessive slack or other maladjustments that cause printing problems, in which case you should select Off . Note, however, that Off may result in unusually large margin between pages. In addition, printing may not stop and the inside of the printer may become stained. Observe the following precautions: Do not print at the end of a roll Do not select Off for Media End Check .
	Multi-Strike Printing	Off Choose the number of times each line is printed. For high-density printing using backlight film, increase the frequency.
		2 to 8
	Feed Speed	Auto Auto is recommended in normal circumstances. If this option is set to Auto , media is fed at the optimal speed depending on the number of printing passes.
		Lv1 Select Lv1 for media that tends to stick together and for thin media that is easily creased or torn.
		Lv2 Select Lv2 for faster printing. Note, however, that the feed speed will not change if the number of passes is large.
	Roll Type	Printable Side Out This option is set based on the setting you selected when you loaded the media.
		Printable Side In
Restore Settings	Yes, No	If Yes is selected, configured media settings are returned to the default.

Print Media List


Parameter	Explanation
Print	Print the contents of media setting banks 1 to 30.

The Printer Setup Menu

 indicates default settings.

Item	Parameter	Explanation
Side Margin(Right)	3 to 25 mm (0.12 to 1.00 inch)	Choose the width of the right margin when media is loaded in the printer. Margin widths vary with the model of printer used. See “Printable area - S70675/S50675” on page 123 or “Printable Area - S30675” on page 126.
Side Margin(Left)	3 to 25 mm (0.12 to 1.00 inch)	Choose the width of the left margin when media is loaded in the printer. Margin widths vary with the model of printer used. See “Printable area - S70675/S50675” on page 123 or “Printable Area - S30675” on page 126.
Print Start Position	0 to 800 mm (0.00 to 32.00 inch)	Adjust this parameter if you want to print from the near center of the media or if you want to shift the printed area left from the Side Margin(Right) setting. The area between the right edge of the media and Print Start Position is left blank. If a value is selected for Side Margin(Right) , an additional area corresponding to the width selected for Side Margin(Right) will be left blank. Margin widths vary with the model of printer used. See “Printable area - S70675/S50675” on page 123 or “Printable Area - S30675” on page 126.
Media Size Check	On	Choose whether the printer automatically detects (On), or does not automatically detect (Off), the edges of the media. Try Off if the printer displays a Media Size Error when the media is correctly loaded. Note, however, that the printer may print beyond the edges of the media when Off is selected. Ink used outside the edges of the media will stain the inside of the printer. We generally recommend to operate with this setting set to On .
	Off	
Media End Check	On	Choose whether the printer automatically detects (On) or does not automatically detect (Off), the end of the media. Try Off if the printer displays Media Out when the media is correctly loaded. We generally recommend to operate with this setting set to On .
	Off	
Media Skew Check	On	When skewed media is detected, the printer will either stop printing and display an error (On) or continue printing (Off). On is recommended in most circumstances, as skewed media may cause the printer to jam.
	Off	
Head Strike Warning ²		

Item		Parameter	Explanation
	Warning Options	Off	<p>Choose whether the printer automatically detects (On) or does not automatically detect (Off), the media lifting during printing.</p> <p>If On is selected, the printer will stop when the media lifts to prevent a head strike.</p> <p>On is recommended if you will be performing other tasks and are unable to give the printer your full attention during printing.</p> <p>The printer may fail to detect the media lifting in the following instances even when On is selected:</p> <p>Off is selected for Media Size Check.</p> <p>The Platen Gap is set to 2.5.</p> <p>When printing patterns for Auto Media Adjust, Media Adjust, and Nozzle Check.</p> <p>When printing the job log, status sheets, and network settings.</p> <p>When using transparent film or high-gloss media, media rise cannot be detected even if this is set to On. If the media rubs against the print head frequently, visually check the condition before you start printing.</p>
		On	
		Warning Level Options	1 to 5
Auto Nozzle Check			
	Nozzle Check Cycle	Off	<p>Choose the frequency with which the printer performs an Auto Nozzle Check: never (Off) or once every 1 to 10 pages. Auto nozzle checks will not be performed while Off is selected. If 1 to 10 is selected, the printer will automatically checks for clogs at the specified interval by scanning a test pattern with a sensor as it is being printed.</p> <p>Note that Auto Nozzle Check is not capable of detected all types of clog. In addition, Auto Nozzle Check is not available depending on media types or conditions.</p> <p>See “Checking for Clogged Nozzles” on page 181.</p>
		1 to 10 pages	
	Options When Clogged	Continue Printing	<p>Choose how the printer responds when an auto nozzle check detects clogged nozzles.</p> <p>If Continue Printing is selected, the printer will display Nozzle Clog Detected but keep printing. Perform head cleaning if you judge it necessary on inspecting the print results.</p> <p>See “Head Cleaning” on page 183.</p> <p>If Stop Printing is selected, the printer will display Nozzle Clog Detected and pause printing. Inspect the print results and choose whether to resume or suspend printing according to the extent of the clog.</p>
		Stop Printing	
Print Nozzle Pattern		Off	<p>Choose the frequency with which the printer prints a nozzle test pattern: never (Off) or once every 1 to 10 pages. Periodic test patterns will not be printed while Off is selected. To print a test pattern at the top of every 1 to 10 pages, select an option between 1 and 10. When printing is complete, you can visually inspect the pattern to determine whether there may be faint or missing colors in the preceding or following printout.</p>
		1 to 10 pages	
Periodical Cleaning			

Item		Parameter	Explanation
	Light	Off/1 to 240 hours	<p>Choose the frequency with which the printer performs head cleaning for each level: never (Off) or after 1 to 240 hours. Periodical Cleaning will not be performed while Off is selected. If a value between 1 and 240 hours is selected, auto head cleaning will be performed after the specified number of hours. If printing is in progress or the printer is in sleep mode when the specified time has elapsed, head cleaning will only be performed after printing is complete.</p> <p>The following reset the timer:</p> <p>When the specified time has been changed.</p> <p>When All Nozzles has been performed over the lever selected in this setting.</p>
	Medium		
	Heavy		
	Power ³		
Cleaning Cycle		Off	<p>Choose the frequency with which the printer performs auto head cleaning: never (Off) or once every 1 to 10 pages. Cleaning cycle will not be performed while Off is selected. Select 1 to 10 to perform head cleaning before the specified number of pages is printed.</p>
		1 to 10 pages	
Heat Off Timer		15 to 240 minutes	<p>You can turn off the heaters automatically when no errors are detected and no print jobs are in progress. This option is used to choose the interval before the heaters turn off automatically.</p> <p>The printer will enter sleep mode when the Heat Off Timer expires. In sleep mode, the control panel turns off and the internal motors and other components consume less power. If an additional print drying system is installed (included with the S50675, optional with other models), it will turn off automatically.</p> <p>To reactivate the control panel display, press any button in the control panel except . The control panel display will however turn off again if no operations are performed for another 30 seconds under these conditions. The printer and heaters are only fully reactivated when a print job is received, the media loading lever is used, or another operation involving printer hardware is performed.</p>
Head Mode ¹		2 Heads Mode	<p>Use 2 Heads Mode in most situations.</p> <p>For example, if there is a clogged nozzle in a single print head and the clog cannot be cleared after repeated head cleaning, you continue printing using the unclogged print head. This feature is convenient because printing can continue during work time and head cleaning and other maintenance can be done after work.</p> <p>Check the check pattern printed in the Nozzle Check, and then select the unclogged head.</p>
		Head 1	
		Head 2	
Restore Settings		Yes	<p>Select Yes to restore all items in the Printer Setup menu to their default settings.</p>
		No	


The Maintenance Menu

The Maintenance menu can be accessed directly by pressing the  button.

Item		Parameter	Explanation
Nozzle Check		Print	A nozzle pattern will be printed. Inspect the pattern visually and perform head cleaning if you detect faint or missing colors. See “Checking for Clogged Nozzles” on page 181. The options available vary with the option selected for Media Size Check and the width of the media used.
	Print At Right		
	Print At Center		
	Print At Left		
Cleaning			
	All Nozzles	Execute (Light)/ Execute (Medium)/ Execute (Heavy)	The options displayed vary with the printer model. Note the numbers of patterns that contain faint or missing colors and clean all or selected nozzles. Select All Nozzles to clean all nozzles (or all nozzles in the selected print head). Choose Selected Nozzles to clean only the nozzles in selected arrays. The level of cleaning can be selected from Execute (Light) , Execute (Medium) , and Execute (Heavy) . Select Execute (Light) first. If the problem persists after you have used Execute (Light) , choose Execute (Medium) . If the problem persists after you have used Execute (Medium) , choose Execute (Heavy) . See “Head Cleaning” on page 183.
	Head 1/Head 2 ² Head 1 ² Head 2 ²		
	Selected Nozzles		
Head Maintenance		Move Head	Position the print head for maintenance. Perform such maintenance as cleaning the wiper, caps, and the area around print head only after using this option to position the head for cleaning. Moving the print head manually could cause malfunction. See “Regular Cleaning” on page 137.
Waste Ink Counter		-	If you replace the waste ink bottle before being prompted by a message in the control panel, run the Waste Ink Counter after replacement.
Ink Circulation ¹			Circulate spot color ink to prevent sedimentation in the print head or tube. This function is available when avoiding an operation interrupt by the auto ink circulation function of the printer.
Ink Refresh		All Nozzles, All (except MS/WH) ⁴ , All (except WH) ¹ , MS/WH ⁴ , WH ¹	This function is available when tint unevenness (areas of uneven density) are detected in printing results. The displayed menu varies depending on your model or the specified color mode. See “Ink Refresh” on page 188.
Head Washing		XX/XX ^{3, 4} , Head1 XX/XX ² , Head 2 XX/XX ² , Head1 All Nozzles ² , Head2 All Nozzles ² , All Nozzles (XX indicates an ink color code.)	Use this function if nozzle clogs cannot be cleared even after performing head cleaning several times or cleaning around the print head. The displayed menu varies depending on your model or the specified color mode. For details, see “Head Washing” on page 186.
Pre-Storage Maint.		WH/MS ⁴ WH ¹ All Nozzles	Always perform pre-storage maintenance if the printer will not be used for an extended period (and switched off). If the storage interval is short, you can perform pre-storage maintenance for spot color ink only. See “Long-Term Storage (Pre-Storage Maintenance)” on page 189.

Item	Parameter	Explanation
Change Color Mode ⁴	8 Color (Unfixed), 9 Color, 10 color	<p>The menu displayed in the setting item varies depending on the currently specified mode.</p> <p>When spot color ink printing is not performed at all for longer than a specified period of time, change spot color inks to Cleaning cartridge to reduce ink consumption. For details on execution conditions and procedure, see "Changing Color Mode (S70675 only)" on page 191.</p>

The Ink Level Menu

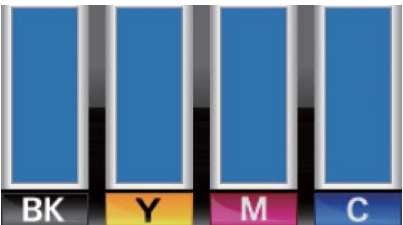Item	Explanation
	<p>View the approximate level of ink in each ink cartridge. When you replace an ink cartridge, the remaining ink level is automatically reset.</p>

The Print Logs Menu

These items are used to track consumables.

Item	Parameter	Explanation
Print Job Log Sheet	Print	<p>Press the OK button to print the print job log.</p> <p>This is a simple tool for estimating ink consumption for a given print job. EPSON DOES NOT WARRANT ACCURACY. Actual ink consumption varies considerably depending on such factors as software used, firmware version, image printed, print settings, substrate types, frequency of use, temperature, and variations in printer performance and user preferences and practices. Estimates do not account for ink used over the life of the cartridge for ink remaining in the cartridge after the replace cartridge signal. Some Epson printers have multiple tools for estimating cost or ink consumption and not all tools work the same way.</p>
Show Total Prints	XXXXXX m ² (XXXXXX ft ²)	Select Show Total Prints to view the total area of media printed (to a maximum of six figures).

The Printer Status Menu

These items track printer use and settings.

Item	Parameter	Explanation
Print Status Sheet	Print	Print a status sheet showing current printer settings, and the status of periodical replacement parts. Use this option to view a variety of information about the printer on a single sheet and help schedule the periodic replacement of parts.
myEpsonPrinter Status	Not Started, Disabled, Enabled	You can see if myEpsonPrinter is enabled or disabled. If it is enabled, the last uploaded time is displayed. This function is not supported in some areas and some countries.
	Last_Uploaded; (Not Uploaded), MM/DD/YY HH:MM GMT	
Firmware Version	XXXXXXX,X_XX,XXXX	View the printer Firmware Version.

The Network Setup Menu

 indicates default settings.

Item	Parameter	Explanation
IP Address Setting		
<div> <div>Auto</div> <div>Panel</div> </div>	-	Choose whether IP addresses are obtained automatically (Auto) or manually (Panel) using DHCP. If Panel is selected, enter an IP address, subnet mask, and default gateway address. Contact your system administrator for detailed information.
	IP: XXX.XXX.XXX.XXX	
	SM: XXX.XXX.XXX.XXX	
	DG: XXX.XXX.XXX.XXX	
Bonjour	On	Choose whether Bonjour is used (On), or is not used (Off), in the network interface.
	Off	
Print Status Sheet	Print	Use Print Status Sheet to print the current network status. Use this information for a complete overview of network settings.
Restore Settings	Yes	Select Yes to restore all items in the Network Setup menu to their default settings.
	No	

The Preference Menu

 indicates default settings.

Item	Parameter	Explanation
Date And Time	MM/DD/YY HH:MM	Set the printer's built-in clock. The time provided by the clock is used when printing logs and status sheets.
Language	Japanese	Select the language used in the control panel display.
	English	
	French	
	Italian	
	German	
	Portuguese	
	Spanish	
	Dutch	
	Russian	
	Korean	
	Chinese	
Unit: Length	m	Choose the units of length used in the control panel display and when printing test patterns.
	ft/in	
Unit: Temperature	°C	Choose the temperature units used in the control panel display.
	°F	
Alert Sound Setting	On	Enable (On) or disable (Off) the alarm that sounds when an error occurs.
	Off	
Alert Lamp Setting	On	Enable (On) or disable (Off) the alert lamp that lights when an error occurs.
	Off	

The Reset All Settings Menu

Parameter	Explanation
Yes	Select Yes to reset all settings in the Preference menu except Date And Time , Language , Unit: Length , and Unit: Temperature .
No	



Chapter 5


Problem Solver

When a Message Is Displayed

If one of the following messages is displayed, read and follow the instructions below.

Messages	What to do
Prepare empty waste ink bottle.	The waste ink bottle is getting full. Ready a new waste ink bottle. See "Options and Consumable Products" on page 234.
Ink Cartridge Error Ink cartridge cannot be recognized. Insert again or replace ink cartridge.	Remove and reinsert the ink cartridge. If the message persists, insert a new ink cartridge (do not reinsert the ink cartridge that caused the error). See "Replacing and Shaking Ink Cartridges" on page 163.
Ink Cartridge Error Ink cartridge cannot be detected. Insert again or replace ink cartridge.	Remove and reinsert the replacement cartridge. If the message appears in the control panel again, contact your dealer or Epson support. See "Replacing and Shaking Ink Cartridges" on page 163. Condensation may have formed inside the cartridge. Leave it at room temperature for at least four hours before installing the ink cartridge. See "Handling ink cartridges" on page 32.
Ink Cartridge Error Replace cleaning cartridge.	Remove and reinsert the cleaning cartridge. If the message persists, insert a new cleaning cartridge (do not reinsert the cleaning cartridge that caused the error). See "Replacing and Shaking Ink Cartridges" on page 163. Condensation may have formed inside the cartridge. Leave it at room temperature for at least four hours before installing the cleaning cartridge.
Ink Low	The ink is low. Ready a new ink cartridge. See "Options and Consumable Products" on page 234.
Warming Up OKForce to start printing	One or more heaters is still being warmed to the specified temperature. To start printing without waiting for the heater to warm up, press the OK button.
Command Error Check print settings on RIP.	Press II and select Job Cancel . Check that the installed software RIP is compatible with the printer. In the S50675, if Platen Gap is set to 2.0 to make White ink printing, this error message may be displayed. Press the II button, and select Job Cancel to cancel printing. Then, set Platen Gap to 1.5 or change RIP settings to make prints.
Print Data Error (MS) Data containing MS cannot be printed if printer is in 9 color mode.	This error message is displayed when print data using Metallic Silver is sent while the color mode is set to 9 Color. Change to print data not using Metallic Silver, or select Change Color Mode to change the color mode to 10 Color. See "Change Color Mode procedure" on page 193.
Unit Matching Error Check combination of Media Feeding Unit and Auto Take-up Reel Unit. Then restart printer.	The standard media feeding unit is used only with the standard auto take-up reel unit, the heavy roll media feeding unit only with the heavy roll auto take-up reel unit. If you have mismatched the feeding and take-up reel units, turn the printer off and install the correct equipment. See the <i>Setup Guide</i> and the <i>Heavy Media Roll System Setup Guide</i> .

Messages	What to do
Clogged Nozzles Detected. Cleaning recommended.	Stop printing and perform head cleaning if you judge it necessary on inspecting the print results. See "Head Cleaning" on page 183.
F/W Install Error Firmware update failed. Restart the printer.	Turn the printer off, wait for a few minutes, and then turn on the printer again. Use Epson LFP Remote Panel 2 to update the firmware again. If this message appears on the control panel again, contact your dealer or Epson Support.
Print head is nearing end of service life.	The current print head is nearing the end of its service life. Contact your dealer or Epson Support.
Auto Take-up Reel Unit stopped.	Media is not correctly attached to the auto take-up reel unit. Press the  button and select Job Cancel to cancel printing. Flip the Auto switch on the auto take-up reel unit to Off, then flip it back and reattach the media to the auto take-up reel unit. See "Using the Auto Take-up Reel Unit" on page 92.
Media Size Error Load correct size media.	The media currently loaded is not the correct width. Raise the media loading lever and remove the media. The narrowest width supported by the printer is 300 mm (11.8 inches)*. Be sure the media is at least 300 mm (11.8 inches) wide. If this message is displayed even though the media is the correct width, the printer may print if Off is selected for Media Size Check . *The minimum supported width for ink layering is 508 mm (20 inches). See "The Printer Setup Menu" on page 208.
Media Sensor Error Loaded media or print out has a problem. Refer to documentation for details.	Press the  button to clear the message from the display. The auto menu of Auto Media Adjust , Auto Nozzle Check , and Media Adjust of the media settings are not available in the following media setting or conditions: Transparent or colored media, or tracing paper is used. Platen Gap is set to 2.5 in the media settings. The printer is used in a place that is exposed to direct sunlight or interference from other ambient light sources. In these cases, execute the manual menu. See "Media Adjust" on page 116 or "Printing nozzle check patterns" on page 182. If the printer is exposed to interference from ambient light sources, shade the printer from these sources and perform the function again; it may succeed. When the function has failed after shading the printer, execute the manual menu. If this error is displayed when executing under conditions other than those listed above, when executing Auto Media Adjust , or the auto menu of Media Adjust , adjustment pattern printing may fail due to nozzle clogging. Perform head cleaning, and execute them again. See "Printing nozzle check patterns" on page 182 If this error is displayed under conditions other than those listed above, confirm that the printer supports the current media. See "Supported Media" on page 235.

Messages	What to do
Pressure Roller Error Pressure rollers are positioned incorrectly. Release media loading lever and reposition rollers.	<p>One of the following has occurred. Reposition the rollers as described in "Printable Area."</p> <p>None of the rollers is positioned inside the bounds of the black labels.</p> <p>Only one of the rollers is positioned inside the bounds of the black labels.</p> <p>The rollers at the edges of the media are not the same type. (A high pressure roller is at one edge, a low pressure roller at the other.)</p> <p>On is selected for Media Size Check in the printer settings menu and a roller is positioned in a black label that is not over the media.</p> <p>Two rollers are positioned inside the bounds of the same black label.</p> <p>See "Printable area - S70675/S50675" on page 123 and "Printable Area - S30675" on page 126.</p>
Ink Layering Error Pressure rollers are positioned incorrectly. Reposition rollers.	You are using the low pressure rollers. Use the high pressure rollers for ink layering.
Roll Type Error Release and then reset the media loading lever, then match Roll Type setting to actual media.	<p>Does the Roll Type specified at media loading match the actual roll type?</p> <p>Raise the media loading lever to resolve the error. Lower the media loading lever again, and follow the on-screen instructions of the printer to correctly specify the Roll Type.</p>
Press  and perform Head Maintenance.	This message is displayed when regular cleaning has not been performed more than one week. If you continue to use the printer without performing regular cleaning, ink drops, nozzle clogging, or print head damage may occur in the printer. See "Regular Cleaning" on page 137.

When a Maintenance Call/Service Call Occurs

Error messages	What to do
Maintenance Request Replace Part Soon/Replace Part Now XXXXXXXX	<p>A part used in the printer is nearing the end of its service life.</p> <p>Contact your dealer or Epson Support and tell them the maintenance request code.</p> <p>You cannot clear the maintenance request until the part is replaced. A service call occurs if you continue to use the printer.</p>
Call For Service XXXX Error XXXX Power off and then on. If this doesn't work, note the code and call for service.	<p>A call for service occurs when:</p> <p>The power cable is not connected securely</p> <p>An error that cannot be cleared occurs</p> <p>When a call for service has occurred, the printer automatically stops printing. Turn off the printer, disconnect the power cable from the outlet and from the AC inlet on the printer, and then reconnect. Turn on the printer again multiple times.</p> <p>If the same call for service is displayed on the LCD panel, contact Epson Support for assistance. Tell them the call for service code is "XXXX".</p>

Troubleshooting

You Cannot Print (Because the Printer Does Not Work)

The printer does not turn on.

- | | |
|---|---|
| ■ | Is the power cable plugged into the electrical outlet or the printer?
Make sure the power cable is securely plugged into the printer. |
|---|---|

- | | |
|---|--|
| ■ | Is there any problem with the electrical outlet?
Make sure your outlet works by connecting the power cable for another electric product. |
|---|--|

The printer is not communicating with the computer.

- | | |
|---|--|
| ■ | Is the cable plugged in properly?
Make sure the printer's interface cable is securely plugged into the correct terminal of the computer and the printer. Also, make sure the cable is not broken nor bent. If you have a spare cable, try connecting with the spare cable. |
|---|--|

- | | |
|---|--|
| ■ | Does the interface cable specification match the specifications for the computer?
Make sure the interface cable specifications match the specifications for the printer and the computer.
See "Specifications" on page 242. |
|---|--|

- | | |
|---|--|
| ■ | When using a USB hub, is it being used correctly?
In the USB specification, daisy-chains of up to five USB hubs are possible. However, we recommend that you connect the printer to the first hub connected directly to the computer. Depending on the hub you are using, the operation of the printer may become unstable. If this should occur, plug the USB cable directly into your computer's USB port. |
|---|--|

- | | |
|---|---|
| ■ | Is the USB hub recognized correctly?
Make sure the USB hub is recognized correctly on the computer. If it has, disconnect the USB hub from the computer and connect the computer directly to the printer. Ask the USB hub manufacturer about USB hub operation. |
|---|---|

You cannot print under the network environment.

- | | |
|---|--|
| ■ | Are the network settings correct?
Ask your network administrator for the network settings. |
|---|--|

- | | |
|---|--|
| ■ | Connect the printer directly to the computer using a USB cable, and then try to print.
If you can print via USB, there are some problems on the network environment. Ask your system administrator, or refer to the manual for your network system. If you cannot print via USB, see the appropriate section in this <i>User's Guide</i> . |
|---|--|

The printer has an error.

■	Confirm if errors have occurred in the printer by checking the lights and messages on the printer's control panel. See "Control Panel" on page 20 and "When a Message Is Displayed" on page 215.
---	--

The Printer Sounds Like It Is Printing, But Nothing Prints

The print head moves, but nothing prints.

■	Confirm the printer operation. Print a test pattern. Test patterns can be printed without connecting the printer to a computer and hence can be used to check printer function and status. See "Checking for Clogged Nozzles" on page 181. Refer to the following section for information on what to do if the pattern does not print correctly.
---	---

■	Is the message Motor Self Adjustment displayed on the control panel's screen? The printer adjusts the internal motor. Wait for a while without turning off the printer.
---	---

■	Is Circulating ink... displayed on the screen of the control panel? The printer is performing auto ink circulation to prevent spot color ink sedimentation in the print head or tube. If Cancel is displayed on the lower left of the screen, press the II·III button to cancel ink circulation. However, it cannot be canceled while ink circulation is required. See "Spot Color Inks" on page 35.
---	---

Test pattern does not print correctly

■	Perform head cleaning. The nozzles may be clogged. Print a test pattern again after performing head cleaning. See "Head Cleaning" on page 183.
---	---

■	Has the printer been left unused for a long time? If the printer has not been used for a long time, the nozzles may have dried up and have been clogged. Steps to take when the printer has not been used for a long time. See "Notes When Not Using the Printer" on page 31.
---	---

Prints Are Not What You Expected

Print quality is poor, uneven, too light, or too dark, has obvious graininess, or a different tone.

■ Are the print head nozzles clogged?

If the nozzles are clogged, specific nozzles do not fire ink and the print quality declines. Try printing a test pattern.

See "Checking for Clogged Nozzles" on page 181.

■ Perform Head Alignment

Given that there is a slight gap between the print head and the media, the landing sites for the different colors of ink may be affected by humidity, temperature, inertial forces imparted by the print head, the direction of the print head as it moves from right to left or left to right, or the use of two print heads (all models except S30675). As a result, the printing result may show obvious graininess or out-of-focus characteristics.

Select **Media Adjust - Head Alignment** in the media settings to adjust a print head misalignment that occurs during printing.

See "Head Alignment" on page 119.

■ Perform Feed Adjustment

Large discrepancies in the feed amount cause banding (horizontal banding, tint unevenness, or stripes). Select **Media Adjust - Feed Adjustment** in the media settings to make adjustment based on the target media.

See "Feed Adjustment" on page 117.

■ Are you using a genuine Epson ink cartridge?

This printer is developed for use with Epson ink cartridges. If you use non-Epson ink cartridges, printouts may be faint, or the color of the printed image may be changed because the remaining ink level is not correctly detected. Be sure to use the correct ink cartridge.

■ Are you using an old ink cartridge?

The print quality declines when an old ink cartridge is used. Replace the old ink cartridge with a new one. Use all the ink in the cartridge before the date printed on the package or within six months of opening, whichever is sooner.

■ Are the heaters at the correct temperature?

Raise the temperature if the print results are blurred or smudged or the ink clots. Note, however, that raising the temperature too high can cause the media to shrink, wrinkle, or deteriorate.

In addition, the heaters may require some time to reach the desired temperature if the ambient temperature is low. The heaters may also not have the desired effect after reaching the selected temperature if the media is too cold. Allow the media to warm to room temperature before use.

■ Are media settings correct?

Confirm that the media settings in the software RIP or on the printer match the media actually in use.

■ Is Data Width selected for Head Movement?

Selecting **Data Width** for **Head Movement** in the setup menu increases print speed but may slightly reduce print quality. For better quality results, select **Printer Full Width** for **Head Movement**. See "The Printer Setup Menu" on page 208.

- **Have you compared the printing result with the image on the display monitor?**
Since monitors and printers produce colors differently, printed colors will not always match on-screen colors perfectly.

- **Was a printer cover opened during printing?**
Opening covers during printing causes the print head to stop abruptly, resulting in uneven colors. Do not open the covers while printing is in progress.

- **Is Ink Low displayed on the control panel's screen?**
The print quality may decline when the ink is low. We recommend replacing the ink cartridge with a new one. If there is a difference in color after replacing the ink cartridge, try performing head cleaning a few times.

- **Shake ink cartridges.**
Components may have sedimented from (settled to the bottom of) the white or metallic silver ink. Shake the cartridge thoroughly and perform **Ink Circulation** several times.

See "Shaking cartridges" on page 163 and "Ink Refresh" on page 188.

If the problem persists, perform **Ink Refresh**.

The print is not positioned properly on the media.

- **Is the media loaded correctly and are the margins correct?**
If the media is not loaded correctly, the results may be off center or part of the data may not be printed. You should also check whether the correct options are selected for **Side Margin** and **Print Start Position** in the setup menu.

See "Loading Media - S70675/S50675" on page 41, "Loading Media - S30675" on page 65, and "The Printer Setup Menu" on page 208.

- **Is the media skewed?**
If **Off** is selected for **Media Skew Check** in the setup menu, printing will continue when the media is skewed and data will appear outside the print area. Set **Media Skew Check** to **On** in the Menu.

See "The Printer Setup Menu" on page 208.

- **Is the media wide enough for the print data?**
Although printing normally stops if the print image is wider than the media, data will be printed beyond the edges of the media if **Off** is selected for **Media Size Check** in the setup menu. Choose **On** for **Media Size Check** in the setup menu.

See "The Printer Setup Menu" on page 208.

Vertical ruled lines are misaligned.

- **Is the media wavy?**
Certain types of media may develop waves under some conditions (humidity and temperature) while installed in the printer. If a wave has developed, press the ▼ button in the control panel to feed the media and avoid the affected area. We recommend that you lower the temperature and humidity to prevent waves developing.

- **Is the print head misaligned?**
If the print head is misaligned, ruled lines may be misaligned accordingly. In this case, select **Media Adjust - Head Alignment** in the media settings to adjust a print head misalignment that occurs during printing.

See "Head Alignment" on page 119.

The printed surface is scuffed or soiled.


■	Is the media too thick or too thin? Check media specifications to confirm that it is compatible with the printer. If you are using a software RIP, contact the manufacturer for information on the settings and media that can be used.
■	Is the media wavy? Certain types of media may develop waves under some conditions (humidity and temperature) while installed in the printer. If a wave has developed, press the ▼ button in the control panel to feed the media and avoid the affected area. We recommend that you lower the temperature and humidity to prevent waves developing.
■	Is the media creased or folded? Media that is creased or folded may rise from the platen and contact the print head, resulting in smudges or uneven colors.
■	Are the wiper, caps, or print head stained? Ink clots or lint around the wiper, caps, or print head may result in stains caused by a build-up of ink. Clean the affected area. See "Regular Cleaning" on page 137.
■	Is the print head striking the printed surface? If the printed side of the media is scuffed, select Media Setup - Customize Settings on the control panel to change Platen Gap according to the currently loaded media. If a scuff recurs after Platen Gap has been changed, increase the value of Media Tension ; this symptom may be improved. See "Customize Settings" on page 204. When Platen Gap or Media Tension has been changed, perform Media Adjust again. See "Media Adjust" on page 116.

Areas secured by pressure rollers are stained.

■	Are the pressure rollers stained? Clean the pressure rollers. See "Cleaning Inside the Printer (Daily)" on page 155.
---	---

Nozzle clogs cannot be cleared

■ Is cleaning being performed regularly?

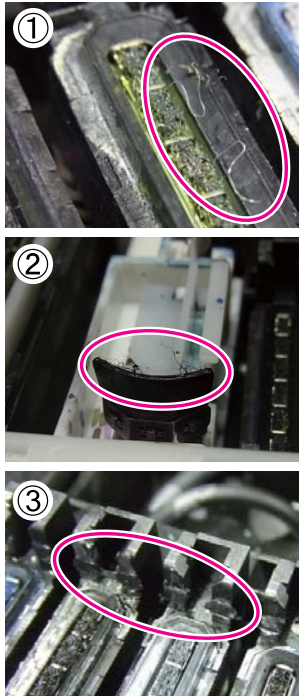

If lint or dust adheres to the area around the print head, caps (photo 1), wiper (photo 2), or flushing pad, nozzle clogs may occur during printing. Moreover, if the lint or dust is left adhered, nozzle clogs cannot be cleared even after repeated head cleaning. Also, as shown in photo (3), if a film of ink has adhered, capping fails, causing a printing failure.

Clean the affected area periodically.

See "Regular Cleaning" on page 137.

■ Replace consumables.

If the problem persists after **Head Cleaning** has been performed several times or regular cleaning has been performed, the wipers or wiper cleaners may be worn or deteriorated. We recommend that you replace them when the following symptoms are detected.

Wiper: The wiper edge remains rough even after stains were wiped off using the clean-room wipe. Otherwise, the wiper is cracked.

Wiper cleaner: A film of ink has adhered to the rear surface of the absorbent section. See "Replacing the Wiper and Wiper Cleaner" on page 168.

Flushing pad: Ink has adhered to the surface, and lint or dust cannot be removed. See "Replacing the Flushing Pad" on page 172.

Ink drops




■ **Is media being handled appropriately?**

If the following points are not observed when handling media, small amounts of dust and lint may stick to the media surface and cause ink drops in the print results.

Do not place exposed media directly on the floor. Media should be rewound and inserted in its original packaging for storage.

Do not carry media with the media surface pressed against clothing. Handle media in its individual packaging until just before setting the media in the printer.

Horizontal lines or tint unevenness (banding)

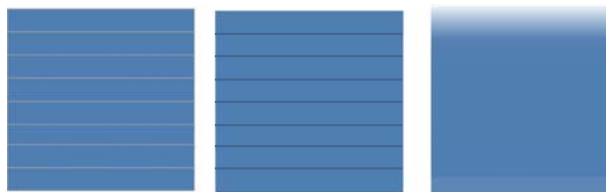

Multiple causes are possible.

Perform the following sequence until the print results have improved.

If the following problems remain unsolved, this symptom will not be able to be resolved by taking any actions. Before taking any actions, check that such problems have been resolved.

- ☐ Nozzles are clogged. See “Checking for Clogged Nozzles” on page 181
- ☐ Media settings are not configured correctly. See “Saving Media Settings” on page 112.
- 1. Check the attachment of the media holding plates.

If a media holding plate is not installed correctly, media feeding may be disturbed. See “Loading and Exchanging Media” on page 38 and reattach the media holding plates.

If installing the media holding plate correctly still does not resolve the problem, continue with the next step.

2. Resolve ink sedimentation.

Sedimentation (components settling to the bottom of the liquid) may occur inside the printer. Perform Ink Refresh. See “Ink Refresh” on page 188.

If performing Ink Refresh does not resolve the problem, continue with the next step.

3. Perform feed adjustment.

Feed adjustment may be required independently depending on the media used. If the roll width is different, independent adjustment is required even with the same media. In **Media Adjust**, select **Feed Adjustment - Manual - 500mm Pattern**.

See “Changing Settings During Printing” on page 121.

If feed adjustment does not resolve the problem, continue with the next step.

4. Resolve ink drying time differences.

During bidirectional printing, print head movement may cause an ink drying time difference. First, perform unidirectional printing from the RIP. If this improves the print results, change the **Heater Temperature** or **Drying Time Per Pass**, and adjust so that stripes and unevenness are improved during bidirectional printing.

See “Heating & Drying” on page 114.

First, configure **Heater Temperature** as described below.

- ☐ Configure temperature settings for the pre-, platen, and after heaters to a temperature higher than the normal setting temporarily.
- ☐ Perform bidirectional printing and check if the print results have improved.
- ☐ If the problem is not resolved, set temperature settings for the pre-, platen, and after heaters slightly lower.

Repeat steps 2 and 3 until print results are improved.

If changing the **Heater Temperature** does not resolve the problem, adjust **Drying Time Per Pass** in the following manner.

- ☐ Set the setting value to **0.1**.
- ☐ Perform bidirectional printing and check if the print results have improved.

- ❑ If the problem is not resolved, raise the setting value further.

Repeat Steps 2 and 3 until print results are improved.

If the measures above do not resolve the problem, continue with the next step.

5. Check the microweave (M/W) setting.

The microweave (M/W) setting may be inappropriate.

Refer to the microweave (M/W) setting and banding association table researched by Epson, change the settings according to the media being used, and then check for improvement. See “Microweave (M/W) Setting and Banding Association Tables” on page 239.

Stains due to head striking



The media and print head are contacting during printing.

Perform the following sequence until the print results have improved.

1. Cut sections of media with wrinkles or waviness.

If media is stored inappropriately or left loaded in the printer, wrinkles and waviness may occur. If media is used in this state, the print head and the raised surface of the media may contact and cause staining. Cut sections with wrinkles or waviness before using media.

Furthermore, store media as described in the manual accompanying the printer and load media in the printer just before printing.

If the problem is not resolved even when printing on sections without wrinkles or waviness, continue with the next step.

2. Load the media in the printer correctly and configure the media settings appropriately.

If the media loading method, heating temperature, tension, suction and other settings are inappropriate, wrinkles and waviness occur on the media. Make sure the loading method and settings are correct.

See “Loading and Exchanging Media” on page 38 and “Precautions regarding settings” on page 111.

If the measures above do not resolve the problem, continue with the next step.

3. Adjust the **Heater Temperature**.

The heater temperature setting may be too high.

Configure **Heater Temperature** as described below.

- ☐ Configure the temperature setting of each heater to the following temperatures temporarily: Pre-heater: 30, platen heater: 30, after heater: 40. See “Heating & Drying” on page 114.
- ☐ Print and see if waviness has improved. If the waviness of the media improved, the heater temperature setting was too high.
- ☐ While gradually raising the pre-heater, platen heater, and after heater temperature settings, repeat test printing until the optimal state is reached.

If the problem is not resolved after performing the first step, return the **Heater Temperature** to the original setting, and then continue with the next step.

4. Adjust the **Media Tension**.

Adjustment of **Media Tension** differs by the media used.

When using vinyl, transparent or white film or canvas

- ☐ Set the value to 2 temporarily. See “Customize Settings” on page 204.
- ☐ Print and check if the print results have improved.
- ☐ If the problem is not resolved, raise the setting value one level.

Repeat Steps 2 and 3 until print results are improved in the range up to a setting value of 5.

If you are using S70675 or S50675 and adjusting the Media Tension does not resolve the problem, perform the following.

- ☐ Set Feed Speed to Lv1. See “Customize Settings” on page 204.

- ☐ Set the Media Tension value to 2 temporarily.
- ☐ Print and check if the print results have improved.
- ☐ If the problem is not resolved, raise the setting value one level.

Repeat Steps 3 and 4 until print results are improved in the range up to a setting value of 5.

If the measures above do not resolve the problem, return the Media Tension setting to default and continue with the next step.

On the S30675, if adjusting Media Tension does not resolve the problem, return the Media Tension setting to default and continue with the next step.

When printing banners

Find the procedure for your printer model below and adjust the **Media Tension**.

S70675 or S50675

- ☐ Set the setting value to 2 temporarily. See “Customize Settings” on page 204.
- ☐ Print and check if the print results have improved.
- ☐ If the problem is not resolved, raise the setting value one level.

Repeat Steps 2 and 3 until print results are improved in the range up to a setting value of 5.

If changing Media Tension does not resolve the problem, return the Media Tension setting to default and continue with the next step.

S30675

- ☐ Set the setting value to 40. See “Customize Settings” on page 204.
- ☐ Print and check if the print results have improved.

If changing **Media Tension** does not resolve the problem, return the **Media Tension** setting to default and continue with the next step.

5. Check that the media is loaded correctly in the auto take-up reel unit

If the method for attaching the media to the take-up roll core or the method for attaching the counterweights is inappropriate, media may move around during take-up, which may cause wrinkles and raised sections.

Check if the following actions were performed correctly: attachment of media on the auto take-up reel unit and attachment of counterweights. See “Using the Auto Take-up Reel Unit” on page 92.

If the measures above do not resolve the problem, continue with the next step.

6. Adjust **Media Suction**.

Media may rise because the media suction is weak.

Adjust **Media Suction** in the following manner.

- ☐ Set the setting value to 10 temporarily. See “Customize Settings” on page 204.
- ☐ Print and check if creasing is improved. If the creasing of media has improved, media suction was too low.
- ☐ While gradually lowering the Media Suction setting, repeat test printing until the optimal state is reached.

Media Problems

Media is creased

■	Are the Media Tension and Feed Speed options in the setup menu correct for the current media? If these options are not correctly adjusted for the current media, the media may be creased or torn during printing. See “Customize Settings” on page 204.
■	Are the heaters set too high? Adjust heater temperature to suit the media.
■	Try selecting Off for Tension Measurement in the setup menus. Automatic tensioning may fail to maintain some types of media at the appropriate tension, resulting in excessive slack or other tensioning problems that interfere with printing. See “Customize Settings” on page 204.

Media jams

■	Is the media curled, folded, curved, creased or waved? Cut and remove the curled, folded, curved, creased, or waved part. See “Cutting media” on page 88.
■	Is media loaded just before printing? The pressure rollers may crease media left in the printer, or the media may also become wavy or curled.

■ **Is the media too thick or too thin?**

Check the media specifications to determine whether it can be used in the printer. See “Supported Media” on page 235.
If you are using a software RIP, contact the manufacturer for information on the settings and media that can be used.

■ **Is Media Suction set too high?**

Reduce Media Suction. See “Customize Settings” on page 204.

Printing does not stop when the roll ends

■ **Is the item for having the printer detect the end of the media set to Off?**

If **Advanced Settings - Tension Measurement** in media settings or **Media End Check** in the Printer Setup menu is set to **Off**, the end of the media cannot be detected.

See “Customize Settings” on page 204 or “The Printer Setup Menu” on page 208.

Removing jammed media


Follow the steps below to remove jammed media.



Caution:

Be careful not to trap your hands or fingers when opening or closing the front cover. Failure to observe this precaution could result in injury.

1. Open the front cover.

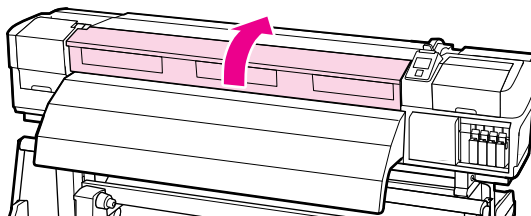

2. Turn off the printer.


If a message is displayed and the printer will not turn off, unplug both power cables.

3. Move the media holding plates out of the way.


Important:

Cease use of the printer if the media holding plates are deformed. Continued use could damage the pressure rollers or print head.

Move the media holding plates to the right and left sides of the platen. Hold both tabs on the media holding plates to move them.

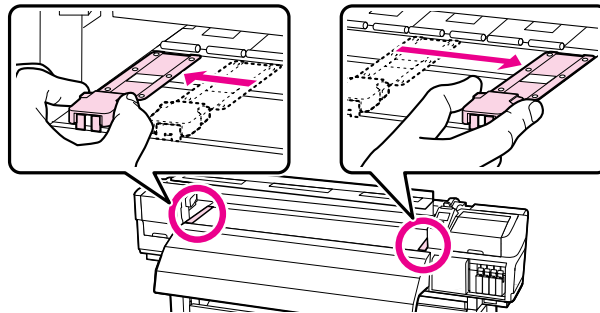


4. If the print head is over the media, move it away from the jam.

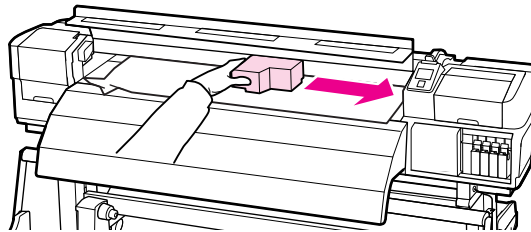


Important:

Move the print head only after moving the media holding plates out of the way. Contact with deformed media holding plates could damage the print head.

5. Raise the media loading lever.

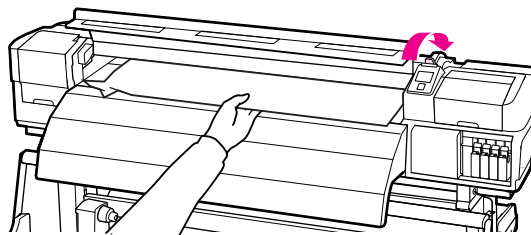

6. Pull the media to the cutter groove and use a cutter to remove torn or creased portions.

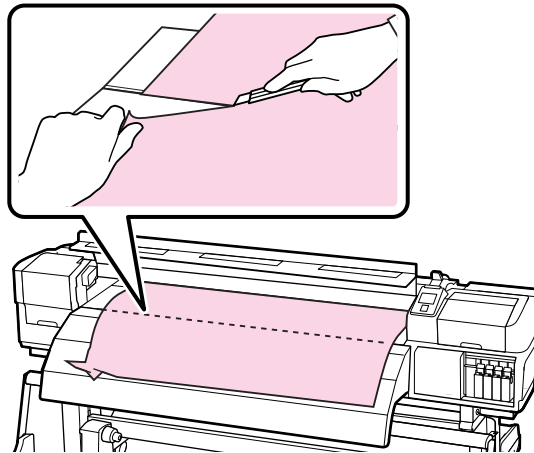

7. Manually rewind the cut media.
8. Remove any media that remains inside the printer.
9. Turn the printer on.

Important:

If the printer is left off for an extended period, the print head will be left uncapped and dry out, and will not print properly when printing resumes.

Turning the printer on automatically caps the print head.

Reload the media and resume printing. See “Loading Media - S70675/S50675” on page 41 or “Loading Media - S30675” on page 65.

Other Problems

Periodical Cleaning is set to Off, but auto cleaning is performed.

- The printer performs head cleaning by the auto maintenance function to prevent the print head from being damaged due to nozzle clogging.
Even if **Periodical Cleaning** is set to **Off**, auto maintenance is necessarily performed when the specified time lapsed after printing.

Heaters turn off or the optional additional print drying system stops

- | | |
|---|---|
| ■ | <p>The pre-, platen, and after heaters will turn off if no print job is received for some time and no error occurs. The time before the heaters turn off automatically can be selected using the Heat Off Timer option in the setup menu. See “The Printer Setup Menu” on page 208.</p> <p>The heaters will be reactivated when a print job is received, the media loading lever is used, or another operation involving printer hardware is performed.</p> <p>The high-speed print drying system is included with the S50675.</p> |
|---|---|

The control panel display keeps turning off.

- | | |
|---|---|
| ■ | <p>Is the printer in sleep mode?</p> <p>The printer enters sleep mode when the Heat Off Timer expires and the heaters turn off. The time before the heaters turn off can be selected in the Printer Setup menu. See “The Printer Setup Menu” on page 208.</p> <p>The heaters will be reactivated and sleep mode will end when a print job is received, the media loading lever is used, or another operation involving printer hardware is performed.</p> |
|---|---|

The red light is on inside the printer.

- | | |
|---|---|
| ■ | <p>This is not a failure.</p> <p>The red light is a sensor and normally stays on inside the printer.</p> |
|---|---|

White powdered stains are detected on the sides of the auto take-up reel unit.

- | | |
|---|---|
| ■ | <p>See the following sections and clean the part.</p> <p>See “Cleaning the Sides of the Auto Take-up Reel Unit (Daily)” on page 161.</p> |
|---|---|

Options and Consumable Products

The following options and consumable products are available for use with your printer (as of November 2014).

For the latest information, see the Epson website.

Ink Cartridges

Product		Part number	Explanation
S70675 Ink cartridges	Black	T715100	Epson recommends the use of genuine Epson ink cartridges. Epson cannot guarantee the quality or reliability of non-genuine ink. The use of non-genuine ink may cause damage that is not covered by Epson's warranties, and under certain circumstances, may cause erratic printer behavior. Information about non-genuine ink levels may not be displayed, and use of non-genuine ink is recorded for possible use in service support.
	Cyan	T715200	
	Magenta	T715300	
	Yellow	T715400	
	Light Cyan	T715500	
	Light Magenta	T715600	
	Light Black	T715700	
	Orange Plus	T715900	
	White	T715A00	
	Metallic Silver	T715B00	
S50675 Ink cartridges	Black	T689100	
	Cyan	T689200	
	Magenta	T689300	
	Yellow	T689400	
	White	T715A00	
S30675 Ink cartridges	Black	T689100	
	Cyan	T689200	
	Magenta	T689300	
	Yellow	T689400	

Other Items

Product	Part number	Explanation
Cleaning cartridge	T699000	Use to change the color mode to 8 Color (Unfixed) or 9 Color for print head washing, pre-storage maintenance, or changing color mode.
Maintenance Kit	T724100	Contains the cleaning sticks, gloves, wiper, wiper cleaner, flushing pad, and cleaning wiper required for printer maintenance. See "Cleaning Frequency" on page 129.
Ink Cleaner	T699300	Use for ink stains that can not otherwise be removed during normal maintenance. See "Cleaning Frequency" on page 129.
Waste Ink Bottle	T724000	Identical to the waste ink bottle supplied with the printer.
Cleaning Wiper	S090012	Identical to the maintenance kit items supplied with the printer.
Cleaning Sticks	S090013	
Clean Room Wipe ¹	S090016	
Media Holding Plate	C12C890891	Identical to the media holding plate supplied with the printer. Sold on a 1-plate basis. When replacing a removable media holding plate, replace both the right and left plates together. SEE REPLACING MEDIA HOLDING
Additional print Drying System	C12890751	Uses a fan to blow air over the media and assist drying (included with the S50675). See HEATING & DRYING.
Heavy Roll Media System	C12C890761	A media feeding unit and auto take-up reel for heavy rolls (up to 80 kg or 176.4 lb).

¹ Not available for purchase in some countries and regions. If the clean room wipe is not available from Epson, BEMCOT M-311 from Asahi Kasei Corporation is recommended.

² Not available for purchase in some countries and regions.

Supported Media

The following media can be used with the printer. Print quality is greatly affected by the type and quality of media used. Choose a media suited to the task at hand. For information on use, refer to the documentation supplied with the media or contact the manufacturer. We recommend that you print a test run and check the results before purchasing media in large quantities.

Important:

Do not use media that is wrinkled, scuffed, torn, or dirty.

Standard Roll Media System

Roll core size	2 or 3 inches
Roll outer diameter	Up to 250 mm (9.8 inches)
Media width	300* to 1626 mm (11.8 to 64 inches)
Media thickness	Up to 1 mm (0.04 inch)
Roll weight	Up to 40 kg (88.2 lb)

*Minimum media width for ink layering is 508 mm (20 in.)

Heavy Roll Media System

Roll core size	2 or 3 inches
Roll outer diameter	Up to 300 mm (11.8 inches)
Media width	300* to 1626 mm (11.8 to 64 inches)
Media thickness	Up to 1 mm (0.04 inch)
Roll weight	Up to 80 kg (176.4 lb)

*Minimum media width for ink layering is 508 mm (20 in.)

Moving and Transporting the Printer

This section describes how to move and transport the product.

Moving the Printer

This section assumes that the product is being moved to another location on the same floor without traversing stairs, ramps, or lifts. See below for information on moving the printer between floors or to another building. See “Transportation” on page 238.

**Caution:**

Do not tilt the product more than 10 degrees forward or back while moving it. Failure to observe this precaution could result in the printer falling over, causing accidents.


Important:

Do not remove the ink cartridges. Failure to observe this precaution could cause the print head nozzles to dry out.

Getting Ready

1. Confirm that the printer is off.
2. Remove the waste ink bottle. See “Replacing the waste ink bottle” on page 167.
3. Disconnect the power cords and all other cables.
4. Remove media from the media feeding unit and auto take-up reel unit.
5. Unlock the stand.

Release the caster locks on the left and right legs and fully raise the adjusters.

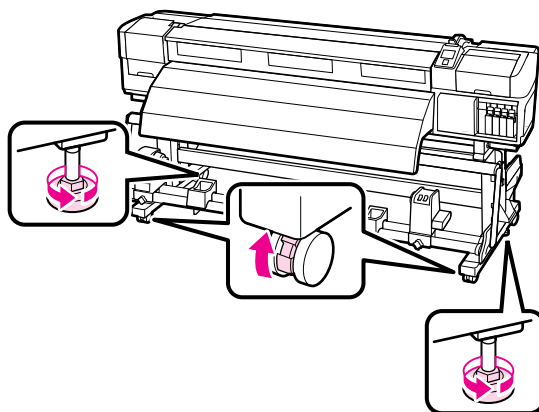

6. Move the printer.

Important:

Use the casters on the dedicated printer stand to move the printer indoors a short distance over a level floor. They can not be used for transportation.

Post-Move Setup

After moving the printer, follow the steps below to ready it for use.

1. Check that the new location is appropriate.

See the *Setup Guide*.

2. Plug in the power cables and turn the printer on.

See the *Setup Guide*.

3. Perform a nozzle check to check for clogged nozzles. See “Checking for Clogged Nozzles” on page 181.

4. Perform Auto Media Adjust in the media settings and check print quality. See “Auto Media Adjust” on page 113.

Transportation

Before transporting the printer, contact Epson Support.

Recommended Media Settings

To register media settings, refer to the table shown below.

For all the item values in the media settings, you can use default setting, except for the item marked by ² for the S30675.

S70675, S50675

	Adhesive vinyl	Transparent or white film	Banner	Canvas
Platen Gap	1.5	1.5	1.5	1.5
Heater Temperature				
Pre-heater	40	40	40	40
Platen heater	40	40	40	40
After heater	50	50	50	50
Advanced Settings				
Media Suction	4	4	4	4
Media Tension	15	15	15	15
Pressure roller ¹	Low	High	Low	Low
Counterweight ²	-	-	Attach	-

1 See “Positioning the Pressure Rollers and Media (S70675, S50675)” on page 40.

2 See “Using the Auto Take-up Reel Unit” on page 92.

S30675

	Adhesive vinyl	Transparent or white film	Banner	Canvas
Platen Gap	1.5	1.5	1.5	1.5
Heater Temperature				
Pre-heater	40	40	40	40
Platen heater	40	40	40	40

	Adhesive vinyl	Transparent or white film	Banner	Canvas
After heater	50	50	50	50
Advanced Settings				
Media Suction	4	4	4	4
Media Tension	15	15	30 ²	15
Counterweight ¹	-	-	Attach	-


1 See "Using the Auto Take-up Reel Unit" on page 92.

2 Change the factory default setting value.

Microwave (M/W) Setting and Banding Association Tables

The tables below show setting examples for the ONYX Graphics software RIP. For the banding status described under "Result", refer to the figure shown below.

Stripe banding example

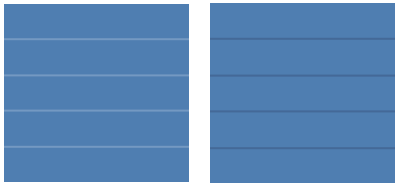

Tint unevenness example



S70675

	Resolution (dpi)	Number of passes	M/W level	Result	Recommendation
Banner					
	720×720	6	1	Stripe banding less likely	
			2	Tint unevenness less likely	✓
Vinyl					
	720×720	8	3	Stripe banding less likely	
			4	Tint unevenness less likely, but stripe banding more likely	
			5	Stripe banding less likely	✓
			6	Tint unevenness less likely, but stripe banding more likely	
All media (Including Banner/Vinyl)					

Resolution (dpi)	Number of passes	M/W level	Result	Recommendation
720×1440	12	3	Stripe banding less likely	✓
		4	Tint unevenness less likely	

S50675

Resolution (dpi)	Number of passes	M/W level	Result	Recommendation
Banner				
720×720	4	1	Stripe banding less likely	
		2	Tint unevenness less likely, but stripe banding more likely	
		3	Stripe banding less likely	✓
		4	Tint unevenness less likely, but stripe banding more likely	
Vinyl				
720×1440	6	0	Stripe banding less likely	✓
		1	Tint unevenness less likely, but stripe banding more likely	
All media (Including Banner/Vinyl)				
720×1440	8	2	Stripe banding less likely	
		3	Tint unevenness less likely	✓

If banding cannot be cleared using the settings described above, select the HQ1 mode in RIP print settings. Stripe banding and tint unevenness will less likely to occur.

If the banding cannot be cleared completely with HQ1 mode, then select HQ2 mode in RIP print settings. However, graininess might be more obvious than printing with HQ1 mode.

The print speed of HQ1/HQ2 mode becomes lower than other print modes that use the same number of passes.

Following are examples of the RIP print setting mode. Display of setting mode will be different depending on the software RIP.

- ☐ 720x720 4pass (HQ1) / 720x720 4pass (HQ2)
- ☐ 720x1440 6pass (HQ1) / 720x1440 6pass (HQ2)
- ☐ 720x1440 8pass (HQ1) / 720x1440 8pass (HQ2)

Note:

In some cases, your software RIP does not support the above-mentioned print modes.

S30675

	Resolution (dpi)	Number of passes	M/W level	Result	Recommendation
Banner					
	720×720	4	2	Tint unevenness less likely	
			3	Stripe banding less likely	✓
Vinyl					
	720×1440	6	0	Tint unevenness less likely	
			1	Stripe banding less likely	✓
All media (Including Banner/Vinyl)					
	720×1440	8	3	Tint unevenness less likely	
			4	Stripe banding less likely	✓

System Requirements

Consult the documentation for your software RIP.

Specifications

Printer Specifications	
Printing method	On-demand ink jet
Nozzle configuration	<p>S70675: 360 nozzles × 2 rows × 10 colors (Metallic Silver, Light Black, Black, Cyan, Magenta, Yellow, Orange Plus, Light Cyan, Light Magenta, White)</p> <p>S50675: 360 nozzles × 2 × 2 rows × 5 colors (White, Black, Cyan, Magenta, Yellow)</p> <p>S30675: 360 nozzles × 2 rows × 4 colors (Black, Cyan, Magenta, Yellow)</p>
Resolution (maximum)	1440 × 1440 dpi
Control code	ESC/P raster
Media feed method	Friction feed
Built-in memory	<p>512 MB for Main</p> <p>128 MB for Network</p>
Interface	<p>Hi-Speed USB-Compatible with the USB 2.0 Specification.</p> <p>100BASE-TX/1000Base-T¹</p>
Rated voltage (#1, #2, #3 ²)	<p>AC 100 to 120V</p> <p>AC 200 to 240V</p>
Rated frequency (#1, #2, #3 ²)	50 to 60Hz
Rated current (#1, #2)	<p>10A (AC 100 to 120V)</p> <p>5A (AC 200 to 240V)</p>
Rated current (#3 ²)	<p>1A (AC 100 to 120V)</p> <p>0.5A (AC 200 to 240V)</p>
Power consumption	<p>S70675 (total for numbers 1 and 2)</p> <p>Printing: Approx. 800 W</p> <p>Ready mode: Approx. 580 W</p> <p>Sleep mode: Approx. 12 W</p> <p>Power off: 0.6 W or less</p>
	<p>S50675 (total for numbers 1, 2, and 3²)</p> <p>Printing: Approx. 895 W</p> <p>Ready mode: Approx. 775 W</p> <p>Sleep mode: Approx. 14 W</p> <p>Power off: 0.9 W or less</p>
	<p>S30675 (total for numbers 1 and 2)</p> <p>Printing: Approx. 650 W</p> <p>Ready mode: Approx. 520 W</p> <p>Sleep mode: Approx. 10 W</p> <p>Power off: 0.6 W or less</p>

Printer Specifications	
Temperature	Operating: 15 to 35 °C/59 to 95 °F (20 to 32 °C/68 to 89 °F recommended) Storage: -20 to 40°C (-4 to 104°F) (within a month at 40°C or 104°F)
Humidity	Operating: 20 to 80% (40 to 60% recommended) (without condensation) Storage: 5 to 85% (without condensation)
Dimension	Storage (minimum) dimensions: 2620 (W) × 963 (D) × 1311 (H) mm or 103.2 (W) × 37.9 (D) × 51.6 (H) inches Maximum dimensions: 2620 (W) × 1259 (D) × 1650 (H) mm or 103.2 (W) × 49.6 (D) × 65.0 (H) inches
Weight ³	S70675: Approx. 229 kg (504.8 lb) S50675: Approx. 238 kg (524.7 lb) S30675: Approx. 219 kg (482.8 lb)

¹ Use a shielded twisted pair cable (category 5 or better).

² For additional print drying system included with the S50675.

³ Media system installed; ink cartridges not included

Ink Specifications	
Type	Special ink cartridges
Pigment ink	S70675: Black, Cyan, Magenta, Yellow, White, Metallic Silver, Light Black, Orange Plus, Light Cyan, Light Magenta S50675: Black, Cyan, Magenta, Yellow, White S30675: Black, Cyan, Magenta, Yellow
Use by date	See the date printed on the package (at normal temperature)
Print quality guarantee expiry	Six months (from date package containing ink cartridge is opened)
Storage temperature	Uninstalled: -20 to 40 °C (-4 to 104 °F) (within a month at 40°C or 104 °F) Installed: -10 to 40°C (14 to 104 °F) (maximum four days at 40°C or 104 °F) Transporting: -20 to 60°C (-4 to 140 °F) (within a month at 40°C or 104 °F, within 72 hours at 60°C or 140 °F)
Cartridge dimensions	(W) 40 x (D) 305 x (H) 110 mm or (W) 1.6 x (D) 12.0 x (H) 4.3 inches
Capacity	White: 600 ml Metallic Silver: 350 ml Other colors: 700 ml

Important:
Do not refill the ink cartridges.

Standards and Approvals

Safety	UL 60950-1	
	CSA C22.2 No.60950-1	
	Low Voltage Directive 2006/95/EC	EN 60950-1
EMC	FCC part 15 subpart B Class A	
	CAN/CSA-CEI/IEC CISPR 22 Class A	
	AS/NZS CISPR 22 Class A	
	EMC Directive 2004/108/EC	EN 55022 Class A
		EN 55024
		EN 61000-3-2
		EN 61000-3-3



Warning:

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC Compliance Statement

For United States Users

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

WARNING

The connection of a non-shielded equipment interface cable to this equipment will invalidate the FCC Certification of this device and may cause interference levels which exceed the limits established by the FCC for this equipment. It is the responsibility of the user to obtain and use a shielded equipment interface cable with this device. If this equipment has more than one interface connector, do not leave cables connected to unused interfaces. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

For Canadian Users

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Where To Get Help

Contacting Epson Support

Epson provides technical support and information on the installation, configuration, and operation of professional printing products through the Epson Preferred Limited Warranty Plan. Dial (888) 377-6611, 6 AM to 6 PM, Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice.

Before you call, make sure you have your printer serial number and proof of purchase.

Visit Epson's U.S. support website (www.epson.com/support) or Canadian website (www.epson.ca/support) and select your product for solutions to common problems. You can download drivers, firmware, and documentation, get FAQs and troubleshooting advice, or e-mail Epson with your questions.

Note:

For help using any other software on your system, see the documentation for that software for technical support information.

Purchase Supplies and Accessories

You can purchase genuine Epson ink cartridges, paper, and accessories from an Epson authorized reseller. To find the nearest reseller, call 800-GO-EPSON (800-463-7766). Or you can purchase online at <http://www.epsonstore.com> (U.S. sales) or <http://www.epson.ca> (Canadian sales).

Software License Terms

Open Source Software Licenses

Bonjour

This printer product includes the open source software programs which apply the Apple Public Source License Version 1.2 or its latest version ("Bonjour Programs").

We provide the source code of the Bonjour Programs pursuant to the Apple Public Source License Version 1.2 or its latest version until five (5) years after the discontinuation of same model of this printer product. If you desire to receive the source code of the Bonjour Programs, please see the "Contacting Customer Support" in Appendix or Printing Guide of this User's Guide, and contact the customer support of your region.

You can redistribute Bonjour Programs and/or modify it under the terms of the Apple Public Source License Version 1.2 or its latest version.

These Bonjour Programs are WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The Apple Public Source License Version 1.2 is as follows. You also can see the Apple Public Source License Version 1.2 at <http://www.opensource.apple.com/apsl/>.

APPLE PUBLIC SOURCE LICENSE
Version 2.0 - August 6, 2003

1. General; Definitions. This License applies to any program or other work which Apple Computer, Inc. ("Apple") makes publicly available and which contains a notice placed by Apple identifying such program or work as "Original Code" and stating that it is subject to the terms of this Apple Public Source License version 2.0 ("License"). As used in this License:

1.1 "Applicable Patent Rights" mean: (a) in the case where Apple is the grantor of rights, (i) claims of patents that are now or hereafter acquired, owned by or assigned to Apple and (ii) that cover subject matter contained in the Original Code, but only to the extent necessary to use, reproduce and/or distribute the Original Code without infringement; and (b) in the case where You are the grantor of rights, (i) claims of patents that are now or hereafter acquired, owned by or assigned to You and (ii) that cover subject matter in Your Modifications, taken alone or in combination with Original Code.

1.2 "Contributor" means any person or entity that creates or contributes to the creation of Modifications.

1.3 "Covered Code" means the Original Code, Modifications, the combination of Original Code and any Modifications, and/or any respective portions thereof.

1.4 "Externally Deploy" means: (a) to sublicense, distribute or otherwise make Covered Code available, directly or indirectly, to anyone other than You; and/or (b) to use Covered Code, alone or as part of a Larger Work, in any way to provide a service, including but not limited to delivery of content, through electronic communication with a client other than You.

1.5 "Larger Work" means a work which combines Covered Code or portions thereof with code not governed by the terms of this License.

1.6 "Modifications" mean any addition to, deletion from, and/or change to, the substance and/or structure of the Original Code, any previous Modifications, the combination of Original Code and any previous Modifications, and/or any respective portions thereof. When code is released as a series of files, a Modification is: (a) any addition to or deletion from the contents of a file containing Covered Code; and/or (b) any new file or other representation of computer program statements that contains any part of Covered Code.

1.7 "Original Code" means (a) the Source Code of a program or other work as originally made available by Apple under this License, including the Source Code of any updates or upgrades to such programs or works made available by Apple under this License, and that has been expressly identified by Apple as such in the header file(s) of such work; and (b) the object code compiled from such Source Code and originally made available by Apple under this License

1.8 "Source Code" means the human readable form of a program or other work that is suitable for making modifications to it, including all modules it contains, plus any associated interface definition files, scripts used to control compilation and installation of an executable (object code).

1.9 "You" or "Your" means an individual or a legal entity exercising rights under this License. For legal entities, "You" or "Your" includes any entity which controls, is controlled by, or is under common control with, You, where "control" means (a) the power, direct or indirect, to cause the direction or management of such entity, whether by contract or otherwise, or (b) ownership of fifty percent (50%) or more of the outstanding shares or beneficial ownership of such entity.

2. Permitted Uses; Conditions & Restrictions. Subject to the terms and conditions of this License, Apple hereby grants You, effective on the date You accept this License and download the Original Code, a world-wide, royalty-free, non-exclusive license, to the extent of Apple's Applicable Patent Rights and copyrights covering the Original Code, to do the following:

2.1 Unmodified Code. You may use, reproduce, display, perform, internally distribute within Your organization, and Externally Deploy verbatim, unmodified copies of the Original Code, for commercial or non-commercial purposes, provided that in each instance:

(a) You must retain and reproduce in all copies of Original Code the copyright and other proprietary notices and disclaimers of Apple as they appear in the Original Code, and keep intact all notices in the Original Code that refer to this License; and

(b) You must include a copy of this License with every copy of Source Code of Covered Code and documentation You distribute or Externally Deploy, and You may not offer or impose any terms on such Source Code that alter or restrict this License or the recipients' rights hereunder, except as permitted under Section 6.

2.2 Modified Code. You may modify Covered Code and use, reproduce, display, perform, internally distribute within Your organization, and Externally Deploy Your Modifications and Covered Code, for commercial or non-commercial purposes, provided that in each instance You also meet all of these conditions:

(a) You must satisfy all the conditions of Section 2.1 with respect to the Source Code of the Covered Code;

(b) You must duplicate, to the extent it does not already exist, the notice in Exhibit A in each file of the Source Code of all Your Modifications, and cause the modified files to carry prominent notices stating that You changed the files and the date of any change; and

(c) If You Externally Deploy Your Modifications, You must make Source Code of all Your Externally Deployed Modifications either available to those to whom You have Externally Deployed Your Modifications, or publicly available. Source Code of Your Externally Deployed Modifications must be released under the terms set forth in this License, including the license grants set forth in Section 3 below, for as long as you Externally Deploy the Covered Code or twelve (12) months from the date of initial External Deployment, whichever is longer. You should preferably distribute the Source Code of Your Externally Deployed Modifications electronically (e.g. download from a web site).

2.3 Distribution of Executable Versions. In addition, if You Externally Deploy Covered Code (Original Code and/or Modifications) in object code, executable form only, You must include a prominent notice, in the code itself as well as in related documentation, stating that Source Code of the Covered Code is available under the terms of this License with information on how and where to obtain such Source Code.

2.4 Third Party Rights. You expressly acknowledge and agree that although Apple and each Contributor grants the licenses to their respective portions of the Covered Code set forth herein, no assurances are provided by Apple or any Contributor that the Covered Code does not infringe the patent or other intellectual property rights of any other entity. Apple and each Contributor disclaim any liability to You for claims brought by any other entity based on infringement of intellectual property rights or otherwise. As a condition to exercising the rights and licenses granted hereunder, You hereby assume sole responsibility to secure any other intellectual property rights needed, if any. For example, if a third party patent license is required to allow You to distribute the Covered Code, it is Your responsibility to acquire that license before distributing the Covered Code.

3. **Your Grants.** In consideration of, and as a condition to, the licenses granted to You under this License, You hereby grant to any person or entity receiving or distributing Covered Code under this License a non-exclusive, royalty-free, perpetual, irrevocable license, under Your Applicable Patent Rights and other intellectual property rights (other than patent) owned or controlled by You, to use, reproduce, display, perform, modify, sublicense, distribute and Externally Deploy Your Modifications of the same scope and extent as Apple's licenses under Sections 2.1 and 2.2 above.
4. **Larger Works.** You may create a Larger Work by combining Covered Code with other code not governed by the terms of this License and distribute the Larger Work as a single product. In each such instance, You must make sure the requirements of this License are fulfilled for the Covered Code or any portion thereof.
5. **Limitations on Patent License.** Except as expressly stated in Section 2, no other patent rights, express or implied, are granted by Apple herein. Modifications and/or Larger Works may require additional patent licenses from Apple which Apple may grant in its sole discretion.
6. **Additional Terms.** You may choose to offer, and to charge a fee for, warranty, support, indemnity or liability obligations and/or other rights consistent with the scope of the license granted herein ("Additional Terms") to one or more recipients of Covered Code. However, You may do so only on Your own behalf and as Your sole responsibility, and not on behalf of Apple or any Contributor. You must obtain the recipient's agreement that any such Additional Terms are offered by You alone, and You hereby agree to indemnify, defend and hold Apple and every Contributor harmless for any liability incurred by or claims asserted against Apple or such Contributor by reason of any such Additional Terms.
7. **Versions of the License.** Apple may publish revised and/or new versions of this License from time to time. Each version will be given a distinguishing version number. Once Original Code has been published under a particular version of this License, You may continue to use it under the terms of that version. You may also choose to use such Original Code under the terms of any subsequent version of this License published by Apple. No one other than Apple has the right to modify the terms applicable to Covered Code created under this License.

8. NO WARRANTY OR SUPPORT. The Covered Code may contain in whole or in part pre-release, untested, or not fully tested works. The Covered Code may contain errors that could cause failures or loss of data, and may be incomplete or contain inaccuracies. You expressly acknowledge and agree that use of the Covered Code, or any portion thereof, is at Your sole and entire risk. THE COVERED CODE IS PROVIDED "AS IS" AND WITHOUT WARRANTY, UPGRADES OR SUPPORT OF ANY KIND AND APPLE AND APPLE'S LICENSOR(S) (COLLECTIVELY REFERRED TO AS "APPLE" FOR THE PURPOSES OF SECTIONS 8 AND 9) AND ALL CONTRIBUTORS EXPRESSLY DISCLAIM ALL WARRANTIES AND/OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES AND/OR CONDITIONS OF MERCHANTABILITY, OF SATISFACTORY QUALITY, OF FITNESS FOR A PARTICULAR PURPOSE, OF ACCURACY, OF QUIET ENJOYMENT, AND NONINFRINGEMENT OF THIRD PARTY RIGHTS. APPLE AND EACH CONTRIBUTOR DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE COVERED CODE, THAT THE FUNCTIONS CONTAINED IN THE COVERED CODE WILL MEET YOUR REQUIREMENTS, THAT THE OPERATION OF THE COVERED CODE WILL BE UNINTERRUPTED OR ERROR-FREE, OR THAT DEFECTS IN THE COVERED CODE WILL BE CORRECTED. NO ORAL OR WRITTEN INFORMATION OR ADVICE GIVEN BY APPLE, AN APPLE AUTHORIZED REPRESENTATIVE OR ANY CONTRIBUTOR SHALL CREATE A WARRANTY. You acknowledge that the Covered Code is not intended for use in the operation of nuclear facilities, aircraft navigation, communication systems, or air traffic control machines in which case the failure of the Covered Code could lead to death, personal injury, or severe physical or environmental damage.

9. LIMITATION OF LIABILITY. TO THE EXTENT NOT PROHIBITED BY LAW, IN NO EVENT SHALL APPLE OR ANY CONTRIBUTOR BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR RELATING TO THIS LICENSE OR YOUR USE OR INABILITY TO USE THE COVERED CODE, OR ANY PORTION THEREOF, WHETHER UNDER A THEORY OF CONTRACT, WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCTS LIABILITY OR OTHERWISE, EVEN IF APPLE OR SUCH CONTRIBUTOR HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES AND NOTWITHSTANDING THE FAILURE OF ESSENTIAL PURPOSE OF ANY REMEDY. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OF LIABILITY OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THIS LIMITATION MAY NOT APPLY TO YOU. In no event shall Apple's total liability to You for all damages (other than as may be required by applicable law) under this License exceed the amount of fifty dollars (\$50.00).

10. Trademarks. This License does not grant any rights to use the trademarks or trade names "Apple", "Apple Computer", "Mac", "Mac OS", "QuickTime", "QuickTime Streaming Server" or any other trademarks, service marks, logos or trade names belonging to Apple (collectively "Apple Marks") or to any trademark, service mark, logo or trade name belonging to any Contributor. You agree not to use any Apple Marks in or as part of the name of products derived from the Original Code or to endorse or promote products derived from the Original Code other than as expressly permitted by and in strict compliance at all times with Apple's third party trademark usage guidelines which are posted at <http://www.apple.com/legal/guidelinesfor3rdparties.html>.

11. Ownership. Subject to the licenses granted under this License, each Contributor retains all rights, title and interest in and to any Modifications made by such Contributor. Apple retains all rights, title and interest in and to the Original Code and any Modifications made by or on behalf of Apple ("Apple Modifications"), and such Apple Modifications will not be automatically subject to this License. Apple may, at its sole discretion, choose to license such Apple Modifications under this License, or on different terms from those contained in this License or may choose not to license them at all.

12. Termination.

12.1 Termination. This License and the rights granted hereunder will terminate:

- (a) automatically without notice from Apple if You fail to comply with any term(s) of this License and fail to cure such breach within 30 days of becoming aware of such breach;
- (b) immediately in the event of the circumstances described in Section 13.5(b); or
- (c) automatically without notice from Apple if You, at any time during the term of this License, commence an action for patent infringement against Apple; provided that Apple did not first commence an action for patent infringement against You in that instance.

12.2 Effect of Termination. Upon termination, You agree to immediately stop any further use, reproduction, modification, sublicensing and distribution of the Covered Code. All sublicenses to the Covered Code which have been properly granted prior to termination shall survive any termination of this License. Provisions which, by their nature, should remain in effect beyond the termination of this License shall survive, including but not limited to Sections 3, 5, 8, 9, 10, 11, 12.2 and 13. No party will be liable to any other for compensation, indemnity or damages of any sort solely as a result of terminating this License in accordance with its terms, and termination of this License will be without prejudice to any other right or remedy of any party.

13. Miscellaneous.

13.1 Government End Users. The Covered Code is a "commercial item" as defined in FAR 2.101. Government software and technical data rights in the Covered Code include only those rights customarily provided to the public as defined in this License. This customary commercial license in technical data and software is provided in accordance with FAR 12.211 (Technical Data) and 12.212 (Computer Software) and, for Department of Defense purchases, DFAR 252.227-7015 (Technical Data -- Commercial Items) and 227.7202-3 (Rights in Commercial Computer Software or Computer Software Documentation). Accordingly, all U.S. Government End Users acquire Covered Code with only those rights set forth herein.

13.2 Relationship of Parties. This License will not be construed as creating an agency, partnership, joint venture or any other form of legal association between or among You, Apple or any Contributor, and You will not represent to the contrary, whether expressly, by implication, appearance or otherwise.

13.3 Independent Development. Nothing in this License will impair Apple's right to acquire, license, develop, have others develop for it, market and/or distribute technology or products that perform the same or similar functions as, or otherwise compete with, Modifications, Larger Works, technology or products that You may develop, produce, market or distribute.

13.4 Waiver; Construction. Failure by Apple or any Contributor to enforce any provision of this License will not be deemed a waiver of future enforcement of that or any other provision. Any law or regulation which provides that the language of a contract shall be construed against the drafter will not apply to this License.

13.5 Severability. (a) If for any reason a court of competent jurisdiction finds any provision of this License, or portion thereof, to be unenforceable, that provision of the License will be enforced to the maximum extent permissible so as to effect the economic benefits and intent of the parties, and the remainder of this License will continue in full force and effect. (b) Notwithstanding the foregoing, if applicable law prohibits or restricts You from fully and/or specifically complying with Sections 2 and/or 3 or prevents the enforceability of either of those Sections, this License will immediately terminate and You must immediately discontinue any use of the Covered Code and destroy all copies of it that are in your possession or control.

13.6 Dispute Resolution. Any litigation or other dispute resolution between You and Apple relating to this License shall take place in the Northern District of California, and You and Apple hereby consent to the personal jurisdiction of, and venue in, the state and federal courts within that District with respect to this License. The application of the United Nations Convention on Contracts for the International Sale of Goods is expressly excluded.

13.7 Entire Agreement; Governing Law. This License constitutes the entire agreement between the parties with respect to the subject matter hereof. This License shall be governed by the laws of the United States and the State of California, except that body of California law concerning conflicts of law.

Where You are located in the province of Quebec, Canada, the following clause applies: The parties hereby confirm that they have requested that this License and all related documents be drafted in English.

Les parties ont exigé que le présent contrat et tous les documents connexes soient rédigés en anglais.

EXHIBIT A.

"Portions Copyright (c) 1999-2003 Apple Computer, Inc. All Rights Reserved.

This file contains Original Code and/or Modifications of Original Code as defined in and that are subject to the Apple Public Source License Version 2.0 (the 'License'). You may not use this file except in compliance with the License. Please obtain a copy of the License at <http://www.opensource.apple.com/apsl/> and read it before using this file.

The Original Code and all software distributed under the License are distributed on an 'AS IS' basis, WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, AND APPLE HEREBY DISCLAIMS ALL SUCH WARRANTIES, INCLUDING WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, QUIET ENJOYMENT OR NON-INFRINGEMENT. Please see the License for the specific language governing rights and limitations under the License."

Other Software Licenses

Info-ZIP copyright and license

This is version 2007-Mar-4 of the Info-ZIP license. The definitive version of this document should be available at <ftp://ftp.info-zip.org/pub/infozip/license.html> indefinitely and a copy at <http://www.info-zip.org/pub/infozip/license.html>.

Copyright © 1990-2007 Info-ZIP. All rights reserved.

For the purposes of this copyright and license, "Info-ZIP" is defined as the following set of individuals:

Mark Adler, John Bush, Karl Davis, Harald Denker, Jean-Michel Dubois, Jean-loup Gailly, Hunter Goatley, Ed Gordon, Ian Gorman, Chris Herborth, Dirk Haase, Greg Hartwig, Robert Heath, Jonathan Hudson, Paul Kienitz, David Kirschbaum, Johnny Lee, Onno van der Linden, Igor Mandrichenko, Steve P. Miller, Sergio Monesi, Keith Owens, George Petrov, Greg Roelofs, Kai Uwe Rommel, Steve Salisbury, Dave Smith, Steven M. Schweda, Christian Spieler, Cosmin Truta, Antoine Verheijen, Paul von Behren, Rich Wales, Mike White.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the above disclaimer and the following restrictions:

1. Redistributions of source code (in whole or in part) must retain the above copyright notice, definition, disclaimer, and this list of conditions.
2. Redistributions in binary form (compiled executables and libraries) must reproduce the above copyright notice, definition, disclaimer, and this list of conditions in documentation and/or other materials provided with the distribution. The sole exception to this condition is redistribution of a standard UnZipSFX binary (including SFXWiz) as part of a self-extracting archive; that is permitted without inclusion of this license, as long as the normal SFX banner has not been removed from the binary or disabled.

3. Altered versions—including, but not limited to, ports to new operating systems, existing ports with new graphical interfaces, versions with modified or added functionality, and dynamic, shared, or static library versions not from Info-ZIP—must be plainly marked as such and must not be misrepresented as being the original source or, if binaries, compiled from the original source. Such altered versions also must not be misrepresented as being Info-ZIP releases—including, but not limited to, labeling of the altered versions with the names “Info-ZIP” (or any variation thereof, including, but not limited to, different capitalizations), “Pocket UnZip,” “WiZ” or “MacZip” without the explicit permission of Info-ZIP. Such altered versions are further prohibited from misrepresentative use of the Zip-Bugs or Info-ZIP e-mail addresses or the Info-ZIP URL(s), such as to imply Info-ZIP will provide support for the altered versions.
4. Info-ZIP retains the right to use the names “Info-ZIP,” “Zip,” “UnZip,” “UnZipSFX,” “WiZ,” “Pocket UnZip,” “Pocket Zip,” and “MacZip” for its own source and binary releases.