


The OT-PC20 is a soft case exclusively for the TM-P20 printer.
You can use the belt strap to carry the printer around on you.
You can also operate the printer and perform printing with the printer still in the case.

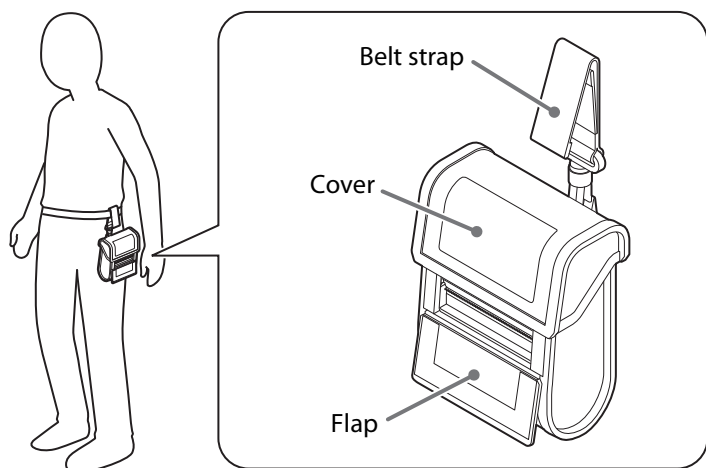


⚠ CAUTIONS ON HANDLING

- ❑ If the case gets wet from water or another liquid, dry it thoroughly. If you use it while it is still wet, the printer will be damaged. When drying the case, do not use a hair dryer, heater, microwave oven, or the like.
- ❑ Do not use or store in high temperature places (60°C {140°F} or higher). Use under the environmental conditions specified for the TM-P20 printer.
- ❑ Do not swing or throw the case around with the printer stored inside. The printer may fly out from the case, causing injury.
- ❑ When taking care of the case, use water or a neutral detergent.




Storing the Printer


1. Remove the printer's belt clip.

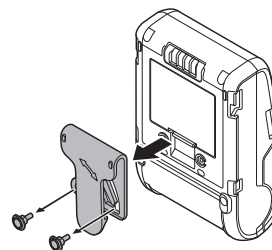


3. Put the roll paper side on the bottom and store the printer in the case.

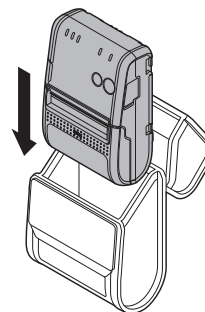

2. Open the case cover.



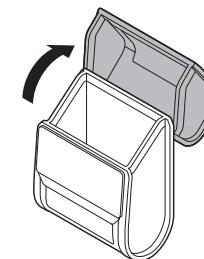


4. Close the case cover.

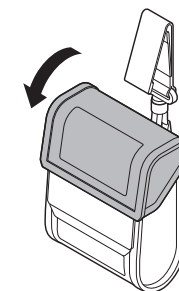


Printing in the Case

1. Open the case cover.
2. Attach the flap to the cover bottom, and close the case cover.
3. Open the printer's paper exit port to be able to print.

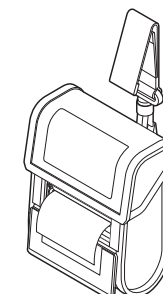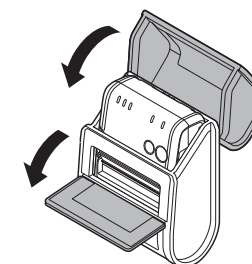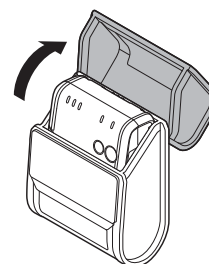

OT-PC20 は、TM-P20 プリンター専用のソフトケースです。
ベルトストラップを使って、プリンターを身に着けて持ち運ぶことができます。
また、プリンターをケースに入れたまま操作・印刷することもできます。


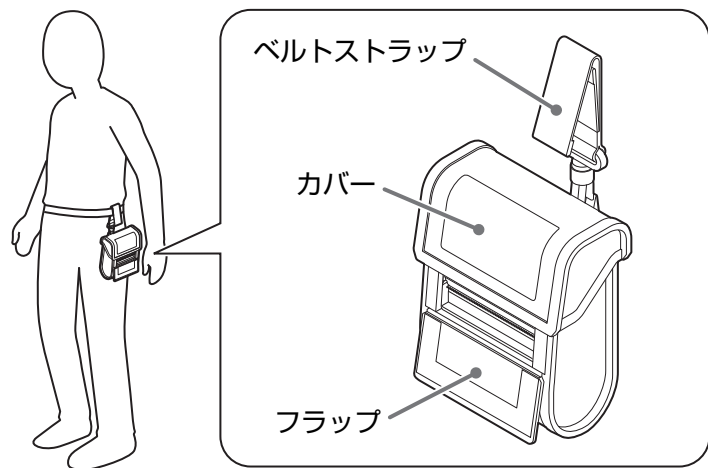


⚠️ 取り扱い上のご注意



- ❑ ケースが水などの液体で濡れた場合は、十分に乾かしてください。濡れたまま使用すると、プリンターが故障する原因となります。ケースを乾かすときは、ドライヤーやヒーター、電子レンジは使わないでください。
- ❑ 高温の場所（60℃以上）で使用したり、保管したりしないでください。TM-P20 プリンターで指定されている環境条件で使用してください。
- ❑ ケースにプリンターを収納した状態で、振り回したり、投げつけたりしないでください。ケースからプリンターが飛び出し、けがをするおそれがあります。
- ❑ ケースをお手入れするときは、水や中性洗剤を使用してください。

プリンターを収納する

1. プリンターのベルトクリップを取り外します。
2. ケースのカバーを開けます。

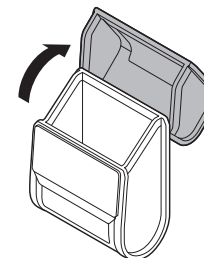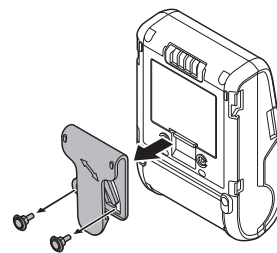

3. ロール紙側が下になるようにして、プリンターをケースに収納します。
4. ケースのカバーを閉めます。

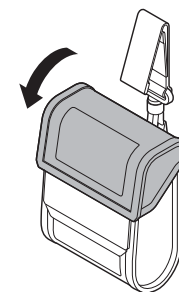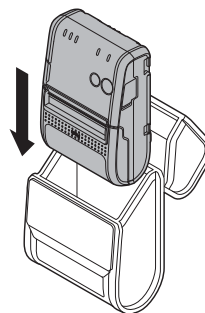

ケースに入れたまま印刷する

1. ケースのカバーを開けます。
2. フラップをカバー下側に付け、ケースのカバーを閉じます。
3. プリンターの紙出口が開いて、印刷できるようになります。

